

Programmable Terminals

## NS Series

NS, the HMI brand you can rely on



» Proven Reliability

» Best Match

» Machine Management

**NS, the HMI brand you can rely on**

# Machine Control at Your Fingertips. On-screen Machine Management.

Expanding markets in emerging countries, short product cycles, and diversifying customer needs are just some of the factors that create drastic changes for the production industry.

To win in severe global market competition, you have to continue to grasp industry changes quickly, understand user needs accurately, and provide diverse forms of added value.

OMRON will help you handle ever-changing customer needs with the three keywords of the NS Series.

## Let Your Machines Evolve

### Best Match

OMRON has provided even greater compatibility with OMRON PLCs and components to provide an advanced design process that lets you achieve appealing machines.

### Machine Management

The NS Series transforms machine HMIs from simple operation panels and turns them into machine management tools.


### Proven Reliability

The NS-series PTs have a proven track record that will take your machines to a higher level of reliability.

NS Series





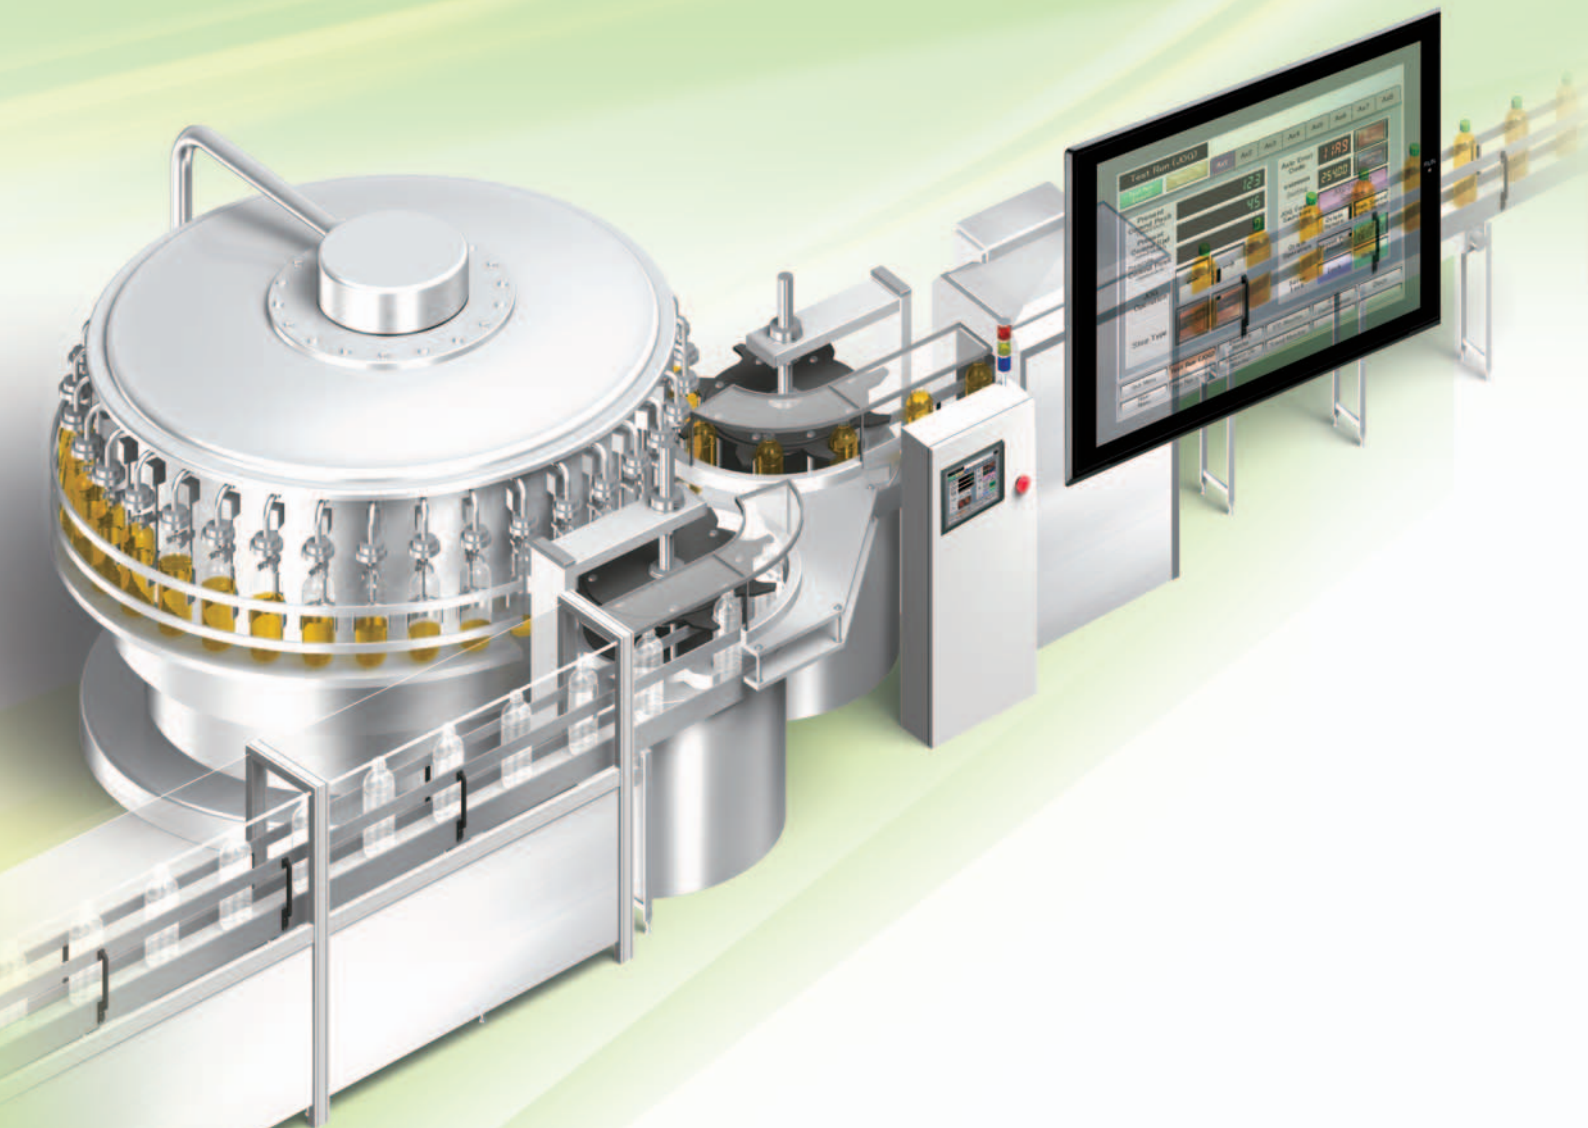

### The Best Match Possible

The amount of work and cost of connecting to OMRON PLCs and components have been greatly reduced. The results is an incredible range of features that is possible only when unifying to one manufacturer. Connecting to the NJ-series Machine Automation Controller allows the machine designer to quickly achieve the features required by the user through support for improved troubleshooting and structured programming with structures and other new data types.



### Machine Management Tool

The machine designer can easily implement PLC troubleshooting, machine troubleshooting, settings for servo drives, temperature controllers, and other control components, status monitoring of connected devices, and uploading/downloading of parameters.



### Proven Reliability

In the ten years since initial marketing, OMRON has globally supplied numerous HMI solutions with the highly reliable NS Series at over 200 sales and service centers around the world.

# NS Series Lineup

This powerful lineup showcases OMRON's unique value.

Choose from 3 types to match your application and requirements.

## NS Series

### Standard Models

Plentiful screen variations and diverse functions allow use in a wide variety of applications.

#### 15 inches Color TFT



##### NS15-TX

- 32,768 colors
- XGA 1024 x 768 pixels
- Screen memory size: 60 MB
- USB Slave
- Controller Link
- Ethernet
- Video (RGB input only)
- USB Master
- RGB output
- RS-232C x 2
- Ladder Monitor
- RS-422A/485
- Memory Card

#### 12.1 inches Color TFT



##### NS12-TS

- 32,768 colors
- SVGA 800 x 600 pixels
- Screen memory size: 60 MB
- USB Slave
- Controller Link
- Ethernet
- Video
- USB Master
- Ladder Monitor
- RS-232C x 2
- Memory Card


#### 10.4 inches Color TFT



##### NS10-TV

- 32,768 colors
- VGA 640 x 480 pixels
- Screen memory size: 60 MB
- USB Slave
- Controller Link
- Ethernet
- Video
- USB Master
- Ladder Monitor
- RS-232C x 2
- Memory Card


#### 8.4 inches Color TFT

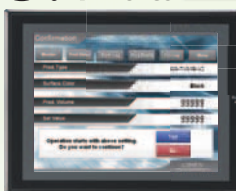

##### NS8-TV

- 32,768 colors
- VGA 640 x 480 pixels
- Screen memory size: 60 MB
- USB Slave
- Video
- Ethernet
- Ladder Monitor
- USB Master
- Memory Card
- RS-232C x 2

#### 5.7 inches Color High-luminance TFT

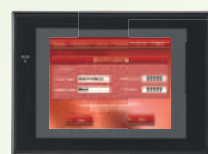

##### NS5-TQ

- 32,768 colors
- QVGA 320 x 240 pixels
- Screen memory size: 60 MB
- USB Slave
- Ethernet
- RS-232C x 2
- Memory Card

#### 5.7 inches Color TFT



##### NS5-SQ

- 32,768 colors
- QVGA 320 x 240 pixels
- Screen memory size: 60 MB
- USB Slave
- Ethernet
- RS-232C x 2
- Memory Card

## NSH Series

### Hand-held Models

A hand-held version of the NS5 is now available to perform operations at the production site.

#### 5.7 inches Color TFT



##### NSH5-SQR

- 32,768 colors
- QVGA 320 x 240 pixels
- USB Slave
- RS-232C/422A
- Memory Card

- Equipped with a red switch for an emergency stop input.
- Emergency stop (3 inputs)

#### 5.7 inches Color TFT



##### NSH5-SQG

- 32,768 colors
- QVGA 320 x 240 pixels
- USB Slave
- RS-232C/422A
- Memory Card

- Equipped with a gray switch for a stop input.
- Emergency stop (3 inputs)

#### Hand-held PT Cable



- RS-232C
- RS-422A



## NSJ Series

### Integrated Controller Models

PT is unified with the Controller into one package to greatly help standardize equipment and reduce size.

12.1 inches Color TFT



#### NSJ12-TS-G5D

- 32,768 colors
- SVGA 800 x 600 pixels
- Screen memory size: 60 MB

USB Slave Controller Link  
Ethernet Ladder Monitor  
USB Master Memory Card  
RS-232C x 3 DeviceNet

(Controller Section)

- I/O points: 1,280
- Program capacity: 60K steps
- Data Memory: 128K words

10.4 inches Color TFT



#### NSJ10-TV-G5D

- 32,768 colors
- VGA 640 x 480 pixels
- Screen memory size: 60 MB

USB Slave Controller Link  
Ethernet Ladder Monitor  
USB Master Memory Card  
RS-232C x 3 DeviceNet

(Controller Section)

- I/O points: 1,280
- Program capacity: 60K steps
- Data Memory: 128K words

8.4 inches Color TFT



#### NSJ8-TV-M3D

- 32,768 colors
- VGA 640 x 480 pixels
- Screen memory size: 60 MB

USB Slave Controller Link  
Ethernet Ladder Monitor  
USB Master Memory Card  
RS-232C x 3 DeviceNet

(Controller Section)

- I/O points: 640
- Program capacity: 20K steps
- Data Memory: 32K words

8.4 inches Color TFT



#### NSJ8-TV-G5D

- 32,768 colors
- VGA 640 x 480 pixels
- Screen memory size: 60 MB

USB Slave Controller Link  
Ethernet Ladder Monitor  
USB Master Memory Card  
RS-232C x 3 DeviceNet

(Controller Section)

- I/O points: 1,280
- Program capacity: 60K steps
- Data Memory: 128K words

5.7 inches Color TFT



#### NSJ5-SQ-M3D/-G5D

- 32,768 colors
- QVGA 320 x 240 pixels
- Screen memory size: 60 MB

USB Slave Controller Link  
Ethernet Memory Card  
RS-232C x 3 DeviceNet

(Controller Section)

- M3D I/O points: 640
- Program capacity: 20K steps
- Data Memory: 32K words
- G5D I/O points: 1280
- Program capacity: 60K steps
- Data Memory: 128K words

5.7 inches Color High-luminance TFT



#### NSJ5-TQ-M3D/-G5D

- 32,768 colors
- QVGA 320 x 240 pixels
- Screen memory size: 60 MB

USB Slave Controller Link  
Ethernet Memory Card  
RS-232C x 3 DeviceNet

(Controller Section)

- M3D I/O points: 640
- Program capacity: 20K steps
- Data Memory: 32K words
- G5D I/O points: 1280
- Program capacity: 60K steps
- Data Memory: 128K words

## Software

### CX-Designer



Without screen creation and ladder programming, the CX-Designer Screen Design Software is so easy-to-use that anyone can master it.

### NS-Runtime



This software enables PLC communications from a personal computer by manipulating PT screens created using the CX-Designer.

# A Revolutionary Best Ma

The NS-series PTs provide revolutionary compatibility with the road-proven CS/CJ-series the new NJ-series Controllers to achieve even greater added value in user machines.




## The NJ-series Machine Automation Controllers Revolutionize Productivity

You can create a flexible, high-speed, high-precision system based on the NJ-series Machine Automation Controllers. Use tags to access any memory areas, or troubleshoot machines and systems by using the NS-series PTs to make the most of the strengths of the NJ-series Controllers and to manage machines.

EtherNet/IP



EtherCAT

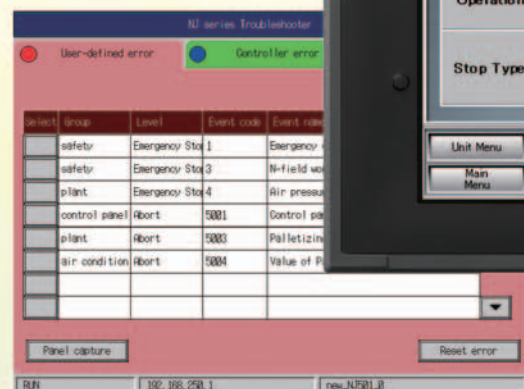




## The CS/CJ-series PLCs for the Reliability of a Proven Track Record

Features are provided to easily connect to CS/CJ-series PLCs to take advantage of their proven track record.

Many features that do not require screen creation or programming support everything from design through maintenance to take advantage of the compatibility of OMRON PLCs and PT and to serve as the face of your machines.

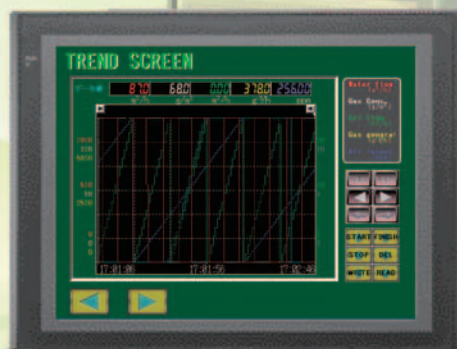

# CS/CJ



# Power Support for All User

From conceptual designs through commissioning, operation, and maintenance, the NS

## Design

### Reduced work



**For Machine Automation  
Controllers NJ-series**

**P10**


NJ Troubleshooter  
Integrated NS-series PT simulation



**Troubleshooter**

**P11**

PLC Troubleshooter  
Machine Troubleshooter



**Best Match with  
OMRON Products**

**P12-P16**

Smart Active Parts (SAP)  
With EtherNet/IP  
Direct Connection to Temperature Controllers  
Face Plate Auto-Builder for NS




**Multi-language Support**

**P17**



**Multifunction Objects**

**P18**



**Plentiful Graphing Functions**

**P19**



**Screen Data  
Security Functions**

**P20**



**Device Data Transfer**

**P20**



**NS Screen Templates** **NEW**

**P21**



**CX-Designer Screen  
Design Software**

**P22-P25**



# Needs

Series supports every user need.

## Startup/Operation

Attractive,  
convenient features  
for easier operation



Level:01  
Level:02  
Level:03  
Level:04  
Level:05

analog  
RGB



260,000-color Video Display

P26

analog  
RGB

Analog RGB Output

P26



FTP Function

P27

Level:01  
Level:02  
Level:03  
Level:04  
Level:05

User Security Functions

P27



LED backlight

P27

## Maintenance

Features for reliability  
and complete  
maintenance




Comparison **NEW**

P28

**SPMA**

Single Port Multi Access

P28




PLC Data Trace

P29



Operating log

P29



Ladder Monitor

P30-P31

# Design

## For Machine Automation Controllers NJ-series

Use Integrated NS-series PT simulation or NJ troubleshoot by using the NS-series PTs to make the most of the strengths of the NJ-series Controllers and to manage machines.

## NJ Troubleshooter

### Controller Errors

### Standard Feature for NJ-series Controllers


Errors are automatically detected and displayed on-screen along with corrective actions for the CPU Unit function modules, EtherCAT slaves, and CJ-series Units that are connected in the NJ-series Controller. Whenever an error might occur, you can recover normal operation quickly to reduce downtime without using user manuals or Support Software on a computer.



### User-defined Errors

### No Work Is Required to Create Alarm Screens.

Frames for alarm screens are provided as standard features in the NS-series PTs. You do not need to create screens to complete alarm screens. Management of the meanings of alarms is unified on the Controller, so you do not have to register, add, or correct addresses on the NS-series PTs.

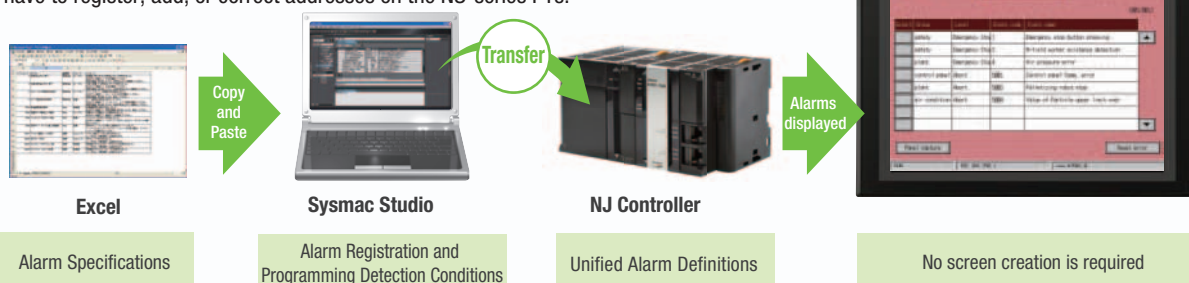


## Integrated NS-series PT simulation

### Improved debugging efficiency

"Integrated simulation" of Sysmac Studio enables offline debugging of the screen data for the NS-series PTs and sequence program for the NJ-series on the computer.

\* Sysmac Studio version 1.02 or higher (CX-Designer version 3.41 or higher) is required.

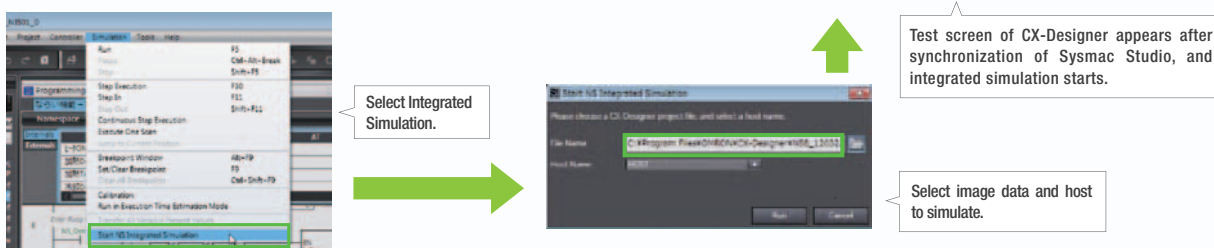




## Troubleshooter

A Troubleshooter is provided for the connected OMRON Controller or PLC. This greatly reduces work requirements.

### CS/CJ-series PLC Troubleshooter

#### Constantly monitors PLC errors.


Automatically detects PLC errors and displays the error details and recovery procedure on the screen. Even if a problem occurs, it can be resolved quickly without referring to the manuals.

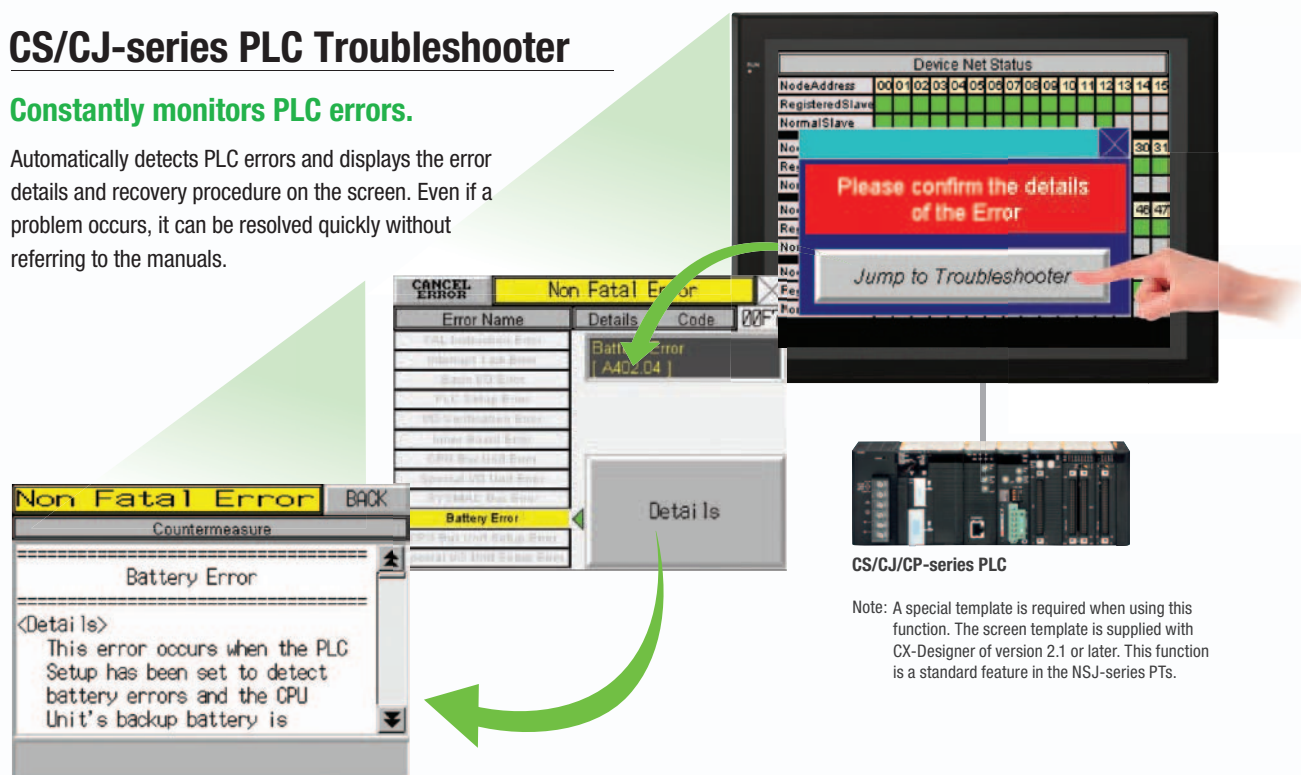

## Machine Troubleshooter

### Easier Design of Machine Error Screens


Individual error screens that were previously made for each error can now be integrated into one. It is possible to switch only the error details (text and screen) without ladder programming in conjunction with the alarm bit.

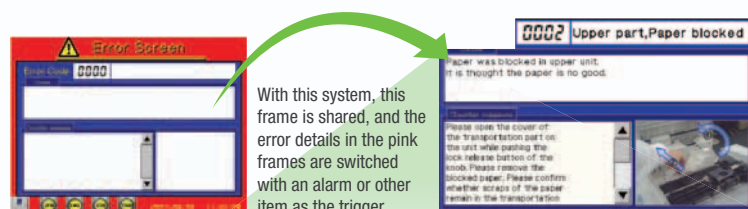


#### Specific Example

in conjunction with an alarm bit (See note.)

Alarm bit 10.01 ON  
(no paper)

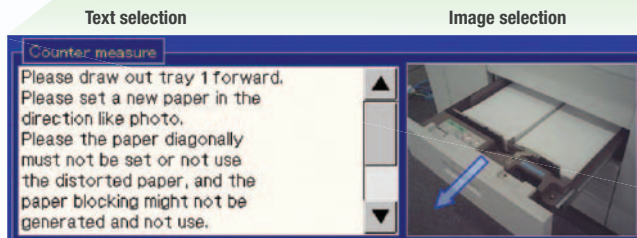

Alarm bit 10.02 ON  
(printing error)

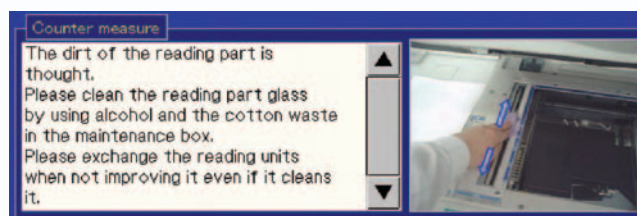

Note: Alarms, PLC/PT memory, and other items can be selected for the switching trigger.

# Design

## Best Match with OMRON Products

NS Series is the most suitable HMI for the system that comprises OMRON components. The advantage is the "compatibility (reducing programming and screen data creation work)" which will reduce the amount of designing work.

NS




No Screen Designing / No Programming



PLC CPU Unit monitoring screen



Device monitor

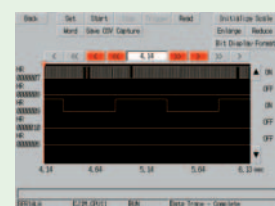

PLC Data Trace



Temperature Controllers



PLC

### CPU Bus Units and Special I/O Units

- SAP Library
- Troubleshooting



### Remote I/O Terminal



### Inverter



### Vision Sensor

- 260,000-color video input



### Temperature Controllers



### Servomotor Servo Driver






## Smart Active Parts (SAP Library)


**Dramatically reduces the effort required to create ladder programming and screens.**

More than 3,000 Library parts (Smart Active Parts) are available, which can directly access OMRON PLCs and components. The objects can just be pasted from the Smart Active Parts (SAP Library) Library to the screen; it is completely unnecessary to create screens and ladder programming.


SAP Library, Temperature Controller Parts

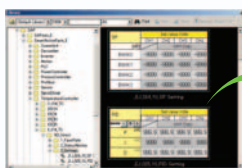

CX-Designer Screen Design Software

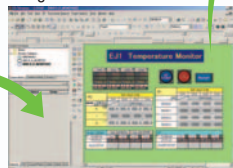


The Temperature Controller's setting and monitor screens are completed in no time.

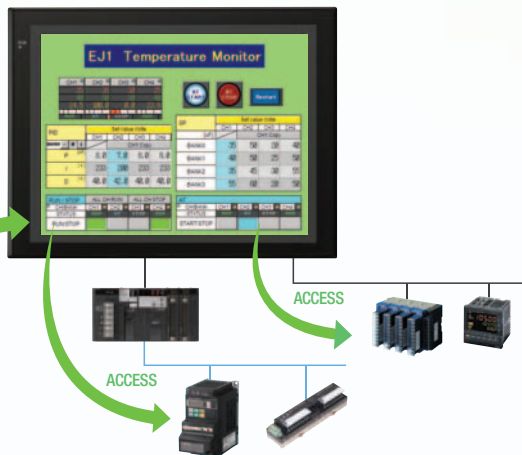

**Support tool objects can be incorporated to check for errors and make settings, even without a computer.**

Plenty of support tool objects (the Tool Function SAP Library) are available, which can be easily incorporate support tool functions in the NS-series PT. Just paste the support tool objects in the screen to check for errors and make settings, even without a computer.



Computer support tools

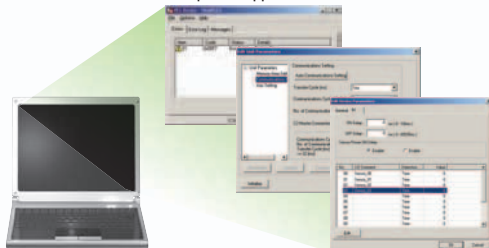

From

Example screens using support tool objects (Tool Function SAP Library)

PLC CPU Unit monitoring screen

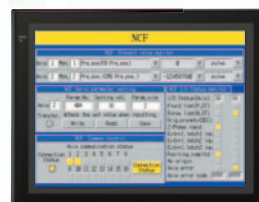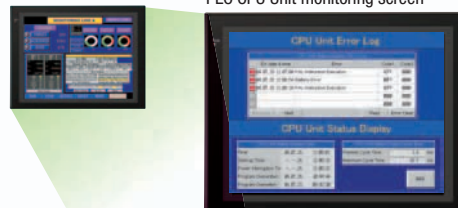

NCF Unit setting screen



DeviceNet monitoring screen


To

**CPU Bus Unit and Special I/O Unit Troubleshooting Can Be Also Performed with the SAP Library.**


A Troubleshooter SAP Library is available to troubleshoot each Unit in the PLC. When an error occurs in a Unit, the Troubleshooter SAP Library provides an easy-to-understand explanation of the cause of the error as well as the countermeasures.

Note: The Troubleshooter SAP Library is included as a standard feature for the CX-One and CX-Designer. For details, refer to page 56. Successive development for Ethernet Units and MC Units is planned for the future.

Troubleshooter SAP for a Position Control Unit

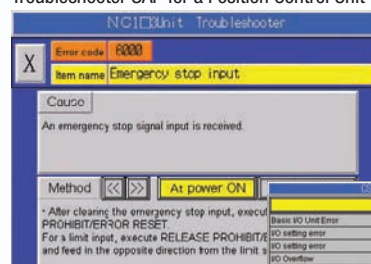

Troubleshooter SAP for Basic I/O Unit

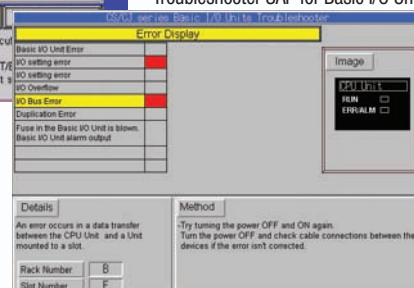

# Design

## EtherNet/IP


### Support for data structures

This special feature is made possible by combining an OMRON CJ2 PLC with an NS-series PT. The data structures that you define on the Programming Tool can be used on the CX-Designer simply by dragging and dropping them.

Note: An EtherNet/IP connection is required.


For CJ2 Series, CX-Designer version 3.2 or later, and NS system version 8.4 or later are required.

For NJ5, CX-Designer version 3.3 or later, and NS system version 8.5 or later are required. For NJ3, CX-Designer version 3.4 or later, and NS system version 8.61 or later are required. Moreover, the multidimensional array is supported in the combination with NJ.

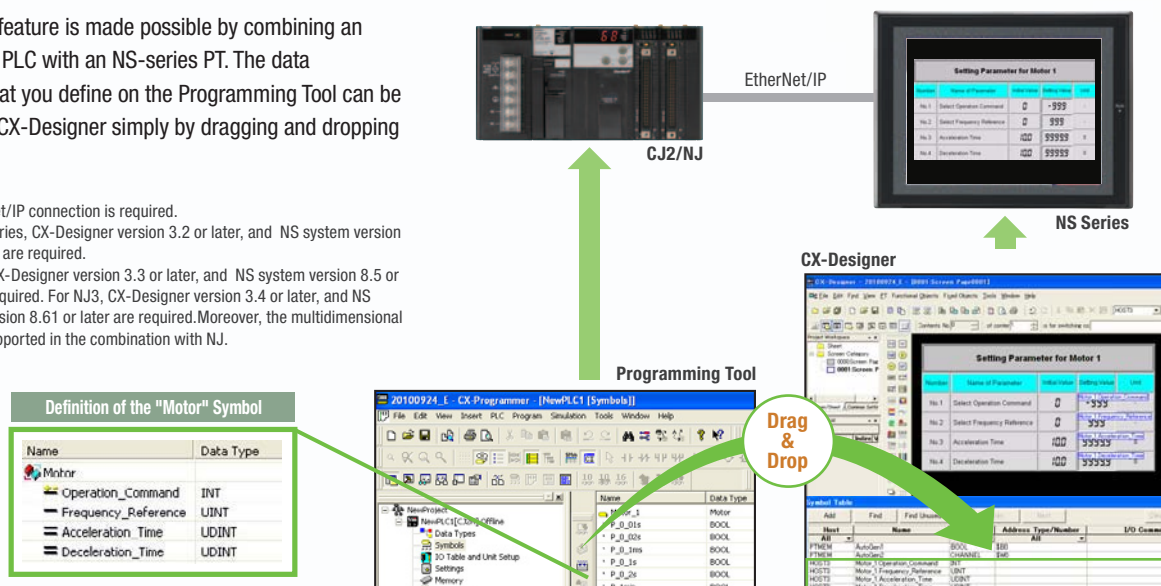


### Tag access

A tag is a name given to an address. Tags are managed in the CJ2 CPU Unit, where they are defined as network symbols. The common user-defined tag names are used from Programmable Terminals and host applications to access memory in a CJ2 CPU Unit without knowing the physical address.

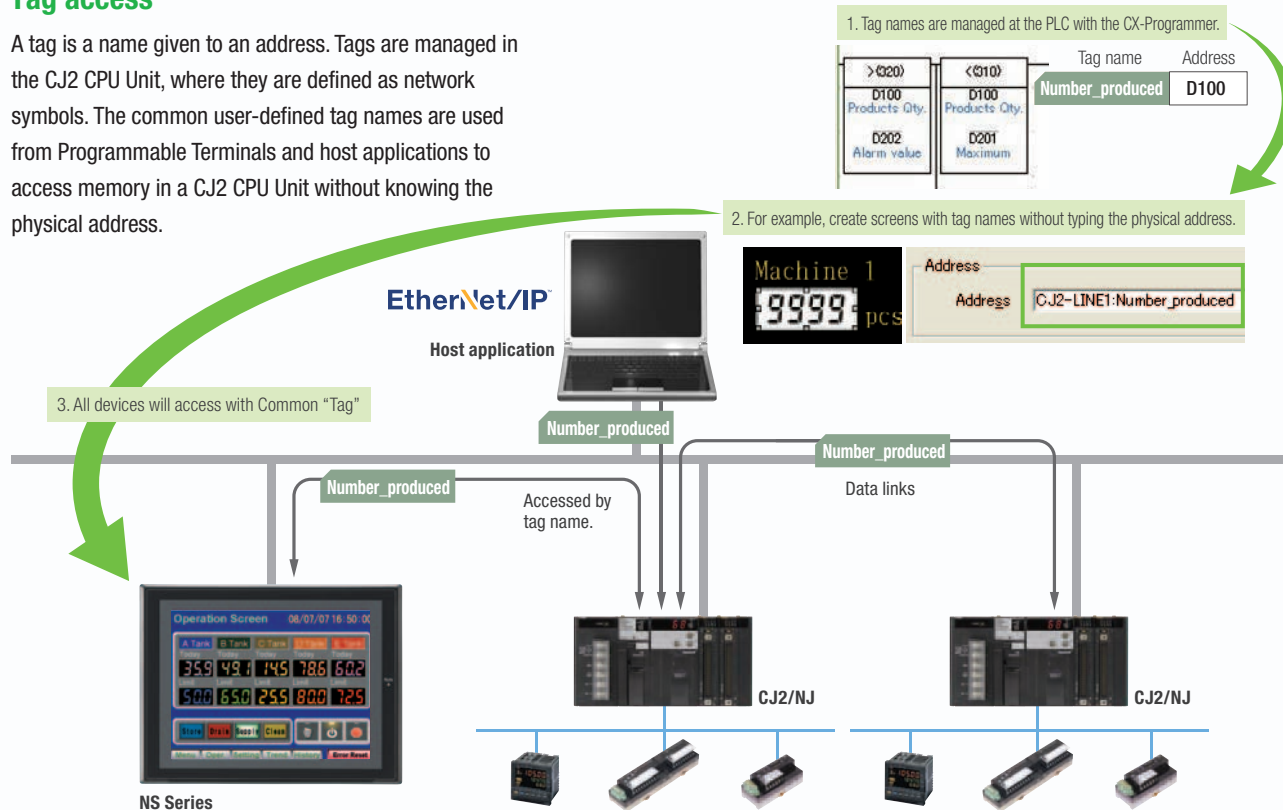

## Simultaneous and parallel engineering

The host applications can be designed using the tag names of the PLC and PT. Parallel development will shorten the design time.

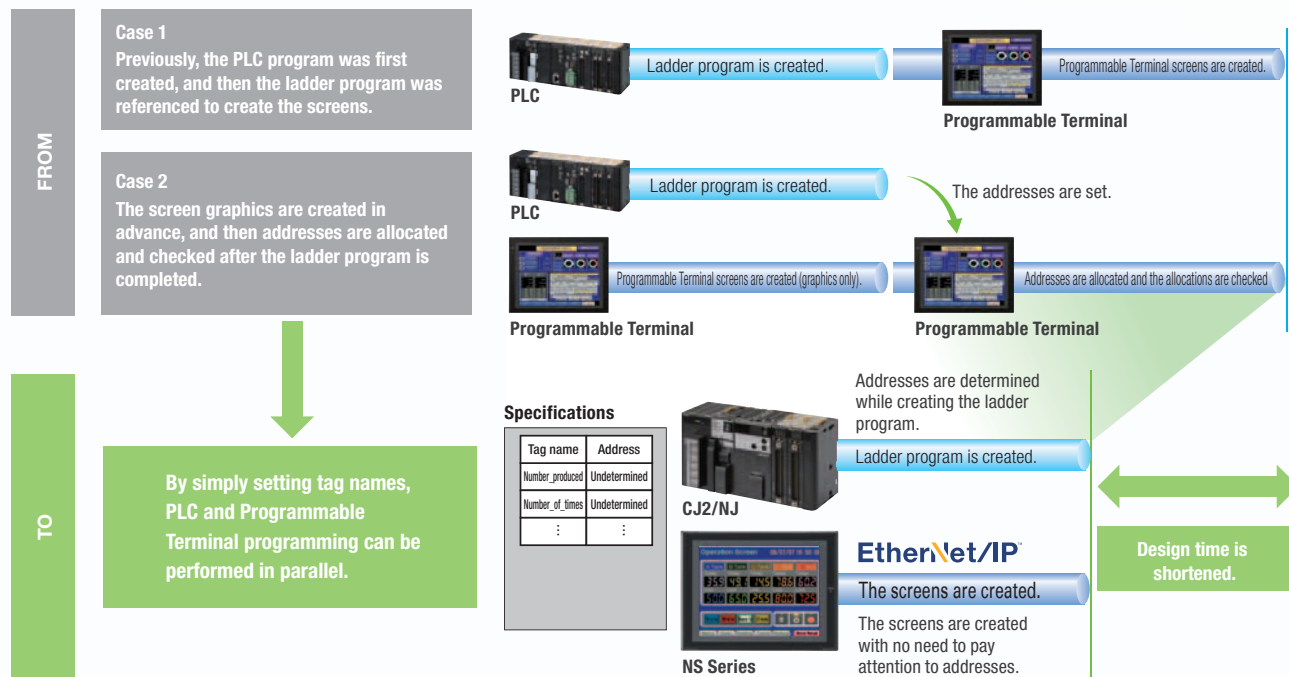


## Minimize side effect of address changes

It is possible to access memory with tags, so the PT and host application are not affected even if the address of data in the PLC is changed.

### Specific Example

1. With the CX-Programmer, the address for the tag named "Number\_produced" is changed from D100 to H200.

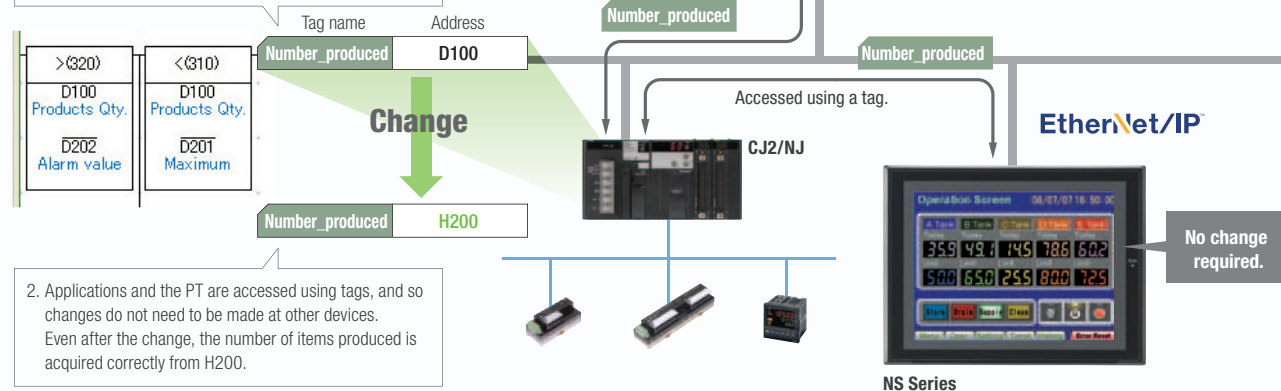

2. Applications and the PT are accessed using tags, and so changes do not need to be made at other devices. Even after the change, the number of items produced is acquired correctly from H200.




## Direct Connection to Temperature Controllers

### Connect OMRON Temperature Controllers directly to the NS-series PT.

OMRON Temperature Controllers can be connected directly to the NS-series PT's RS-232C port. Data does not pass through the PLC, so ladder programming is not required. Also, there are plenty of objects in the SAP Library for Temperature Controllers, and Temperature Controller screens can be created easily just by pasting objects from the SAP Library to the screens.

Note: An RS-422A Serial Adapter is needed to connect directly to a Temperature Controller. Refer to page 53 for a list of the Temperature Controllers that can be connected. A Conversion Unit is not required to connect to the RS-422A/485 serial interface of the NS15.

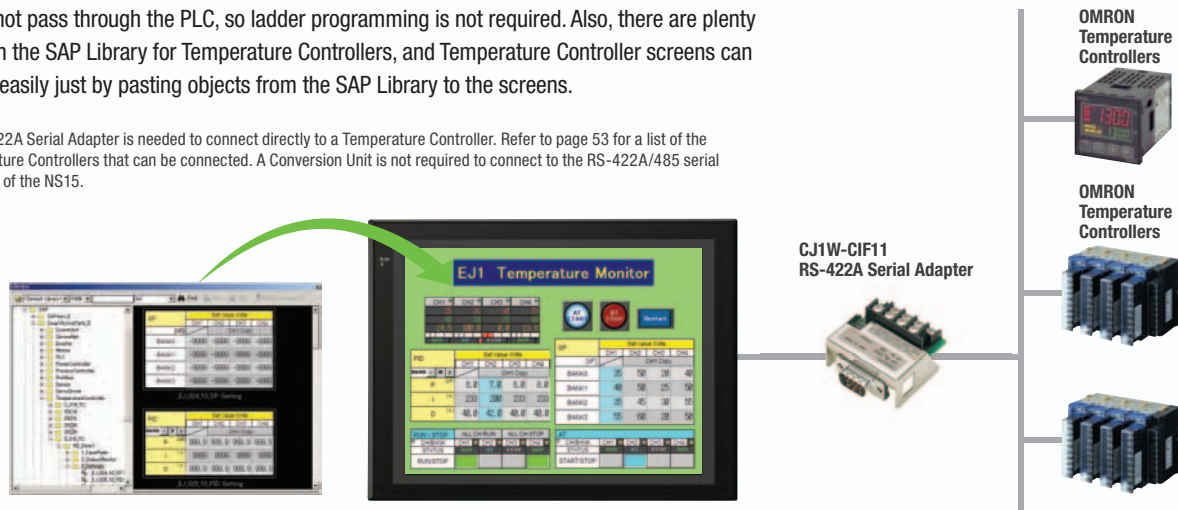

## Face Plate Auto-Builder for NS


### Screens for Loop Controllers can be easily and automatically created.

Significantly reduces the effort required to combine a Loop Controller with an NS-series PT.

Easy automatic generation of faceplates, such as faceplates for PV monitoring and SV setting, as well as tuning screens, such as screens to set and autotune PID constants.

A total of 17 function blocks are supported, with eleven function blocks, such as Ratio Setting and Motor Manipulators newly supported (version 3 of higher).

Comments are automatically entered for automatically assigned unit and scale settings when a project is generated (version 3 and higher).

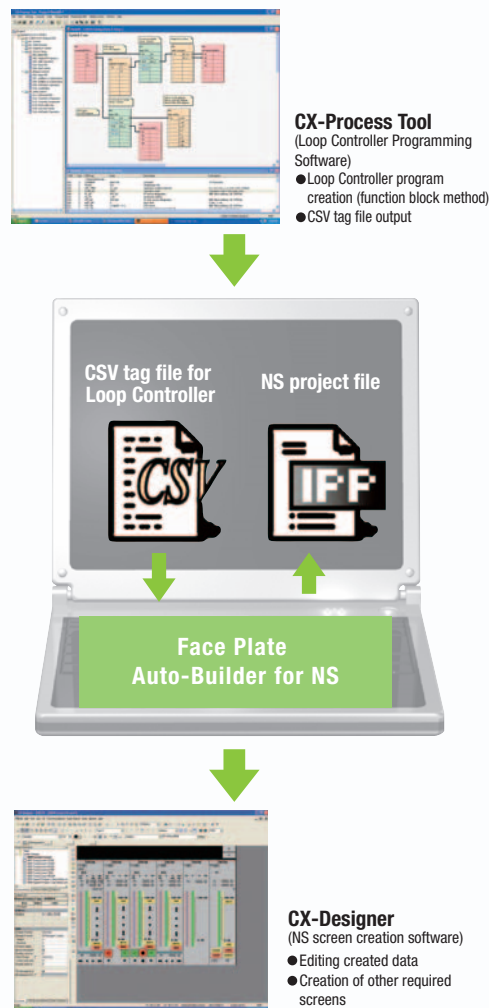

Created screens are easily transferred to the NS by using a Memory Card or over the network.

Note: Refer to the PLC-based Process Control Catalog (Cat. No. P051) and the Loop-control CPU Unit Catalog (Cat. No. R128) for details on Loop Controllers.

## Multi-language Support

**Support 42 languages and switch the language of the labels among up to 16 languages.**

Unicode is supported and 42 Asian and European languages can be combined in screens. Also, it is possible to switch between up to 16 labels using the label switching function, so it is possible to support up to 16 languages in a single screen just by specifying the language to be displayed in each label.

NS Series




### Multi-language CSV data

Label	Chinese	Japanese	English
01: Setting Screen	設定画面	設定画面	Setting of the Screen
02: Monitoring Value	監視値	監視値	Monitoring Value
03: TARGET	目標値	目標値	Target
04: ALARM MAX	警報上限値	警報上限値	WARNING MAXIMUM
05: ALARM MIN	警報下限値	警報下限値	WARNING MINIMUM
06: OPERATION QUANTITY	運転数量	運転数量	OPERATION QUANTITY
07: MANUAL OPERATION	手動運転	手動運転	HANDSET MODE
08: OPERATION MAX	運転数量上限値	運転数量上限値	OPERATION MAXIMUM
09: OPERATION MIN	運転数量下限値	運転数量下限値	OPERATION MINIMUM
10: Pulse	パルス	パルス	Pulse
11: Pulse	パルス	パルス	Pulse
12: Pulse	パルス	パルス	Pulse
13: Pulse	パルス	パルス	Pulse
14: Pulse	パルス	パルス	Pulse
15: Pulse	パルス	パルス	Pulse
16: Pulse	パルス	パルス	Pulse
17: Pulse	パルス	パルス	Pulse
18: Pulse	パルス	パルス	Pulse
19: Pulse	パルス	パルス	Pulse
20: Pulse	パルス	パルス	Pulse
21: Pulse	パルス	パルス	Pulse
22: Pulse	パルス	パルス	Pulse
23: Pulse	パルス	パルス	Pulse
24: Pulse	パルス	パルス	Pulse
25: Pulse	パルス	パルス	Pulse
26: Pulse	パルス	パルス	Pulse
27: Pulse	パルス	パルス	Pulse
28: Pulse	パルス	パルス	Pulse
29: Pulse	パルス	パルス	Pulse
30: Pulse	パルス	パルス	Pulse
31: Pulse	パルス	パルス	Pulse
32: Pulse	パルス	パルス	Pulse
33: Pulse	パルス	パルス	Pulse
34: Pulse	パルス	パルス	Pulse
35: Pulse	パルス	パルス	Pulse
36: Pulse	パルス	パルス	Pulse
37: Pulse	パルス	パルス	Pulse
38: Pulse	パルス	パルス	Pulse
39: Pulse	パルス	パルス	Pulse
40: Pulse	パルス	パルス	Pulse
41: Pulse	パルス	パルス	Pulse
42: Pulse	パルス	パルス	Pulse
43: Pulse	パルス	パルス	Pulse
44: Pulse	パルス	パルス	Pulse
45: Pulse	パルス	パルス	Pulse
46: Pulse	パルス	パルス	Pulse
47: Pulse	パルス	パルス	Pulse
48: Pulse	パルス	パルス	Pulse
49: Pulse	パルス	パルス	Pulse
50: Pulse	パルス	パルス	Pulse
51: Pulse	パルス	パルス	Pulse
52: Pulse	パルス	パルス	Pulse
53: Pulse	パルス	パルス	Pulse
54: Pulse	パルス	パルス	Pulse
55: Pulse	パルス	パルス	Pulse
56: Pulse	パルス	パルス	Pulse
57: Pulse	パルス	パルス	Pulse
58: Pulse	パルス	パルス	Pulse
59: Pulse	パルス	パルス	Pulse
60: Pulse	パルス	パルス	Pulse
61: Pulse	パルス	パルス	Pulse
62: Pulse	パルス	パルス	Pulse
63: Pulse	パルス	パルス	Pulse
64: Pulse	パルス	パルス	Pulse
65: Pulse	パルス	パルス	Pulse
66: Pulse	パルス	パルス	Pulse
67: Pulse	パルス	パルス	Pulse
68: Pulse	パルス	パルス	Pulse
69: Pulse	パルス	パルス	Pulse
70: Pulse	パルス	パルス	Pulse
71: Pulse	パルス	パルス	Pulse
72: Pulse	パルス	パルス	Pulse
73: Pulse	パルス	パルス	Pulse
74: Pulse	パルス	パルス	Pulse
75: Pulse	パルス	パルス	Pulse
76: Pulse	パルス	パルス	Pulse
77: Pulse	パルス	パルス	Pulse
78: Pulse	パルス	パルス	Pulse
79: Pulse	パルス	パルス	Pulse
80: Pulse	パルス	パルス	Pulse
81: Pulse	パルス	パルス	Pulse
82: Pulse	パルス	パルス	Pulse
83: Pulse	パルス	パルス	Pulse
84: Pulse	パルス	パルス	Pulse
85: Pulse	パルス	パルス	Pulse
86: Pulse	パルス	パルス	Pulse
87: Pulse	パルス	パルス	Pulse
88: Pulse	パルス	パルス	Pulse
89: Pulse	パルス	パルス	Pulse
90: Pulse	パルス	パルス	Pulse
91: Pulse	パルス	パルス	Pulse
92: Pulse	パルス	パルス	Pulse
93: Pulse	パルス	パルス	Pulse
94: Pulse	パルス	パルス	Pulse
95: Pulse	パルス	パルス	Pulse
96: Pulse	パルス	パルス	Pulse
97: Pulse	パルス	パルス	Pulse
98: Pulse	パルス	パルス	Pulse
99: Pulse	パルス	パルス	Pulse
100: Pulse	パルス	パルス	Pulse

The labels' text attributes can also be reflected when importing.


When screen data is imported, text attributes can be applied to the specified labels and attributes such as the font and text color can be reflected to other languages labels.

Import

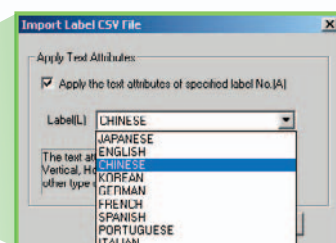

## Multi-language conversion has become much easier.


The screen data in the source language is exported to a CSV file and sent to a translation agency by e-mail for translation. Later, the translated CSV file is just imported to easily provide multi-language support.

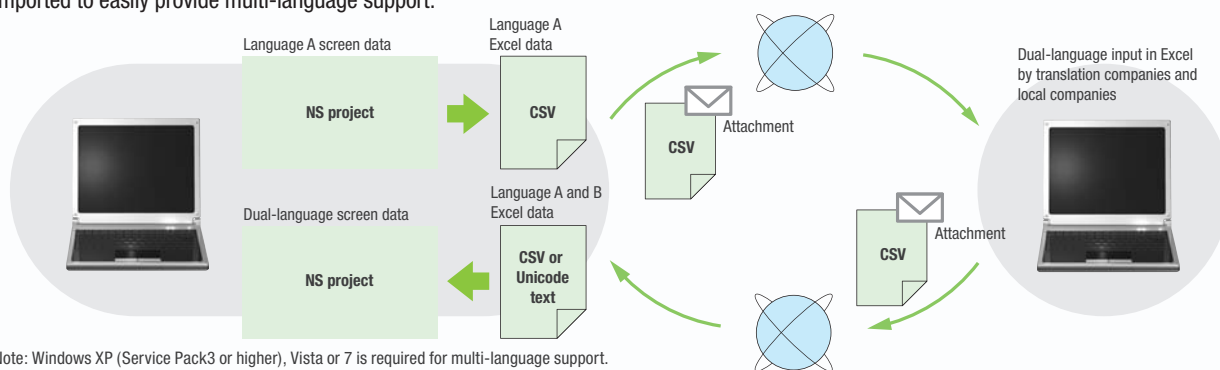

Note: Windows XP (Service Pack3 or higher), Vista or 7 is required for multi-language support.

## Multi-language System Messages. Eight Languages Supported as Standard Feature

The system program of NS-series PTs supports Chinese and European languages. All eight languages are a standard feature, including Chinese (traditional and simplified), Spanish, Italian, German, and French, in addition to the previous Japanese and English. Along with maintenance menus, messages for communications errors, communications settings, and screen transfers can be displayed in any of eight languages. Maintenance can be performed in the desired language. The language can be easily set using the NS-series PT or screen data.

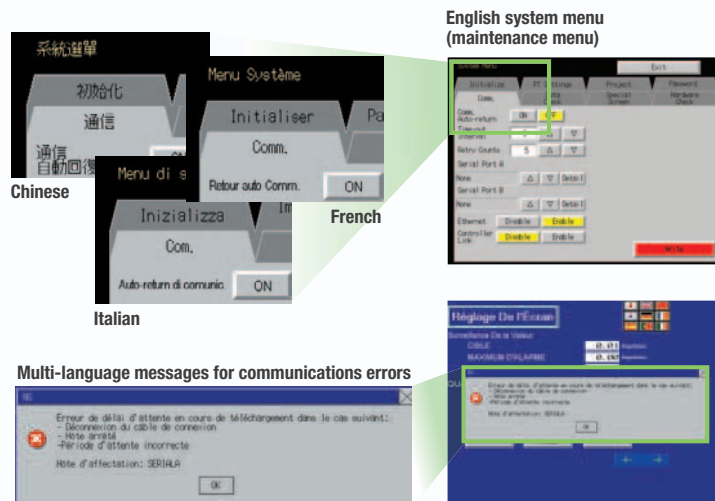


# Design

## Multiple functions


**Execute up to 32 functions with one Multifunction Object**  
**Multifunction Objects support Write Bit, Write Word, object control, and etc**

Multifunction Objects combine the functions of multiple objects into one object. Multiple functions can be executed by pressing one button without using troublesome macros. Setup is easy. For example, a setting can be made on-screen using the Support Software to turn ON a bit to start a machine, set a value, and then change the screen.

Easy On-screen Setup with Support Software!

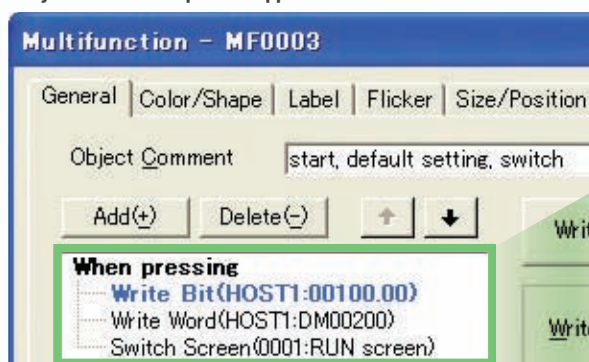


Multifunction execution with one object



Integration




Execute multiple functions with one button.

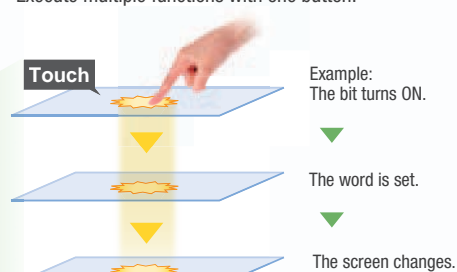


## Multifunction Objects support four useful functions

Switches that do not immediately operate when touched can be easily made without ladder programming.

**ON delay** Turns ON when the button is pressed for at least a specified time.

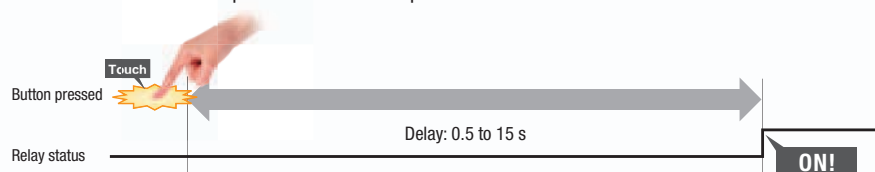


**Double-press** Turns ON when the button is pressed twice within the specified time.

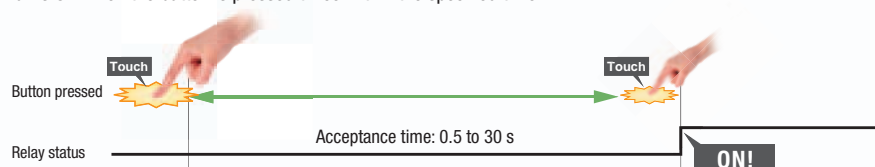

**Simultaneous pressing prohibited** Does not turn ON when the button is pressed at the same time as another button.

**OFF delay** Turns OFF after a specified time lapses after the button is released.

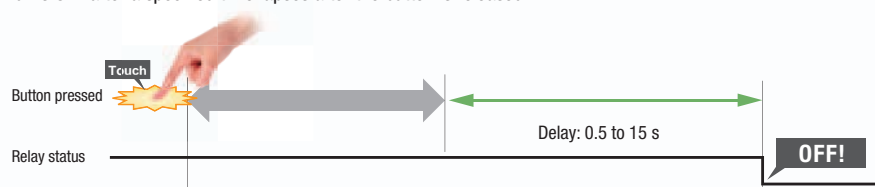




## Plentiful Graphing Functions

### Data Log Graph (Trend Graph)


Up to 128 data can be collected in the cycle of 500ms. Logging data is stored as a CSV file in the Memory Card inserted in the NS-series PT.

Logging data is stored as a CSV file in the Memory Card mounted in the NS-series PT. The data stored in the Memory Card can be read or deleted from the screen.

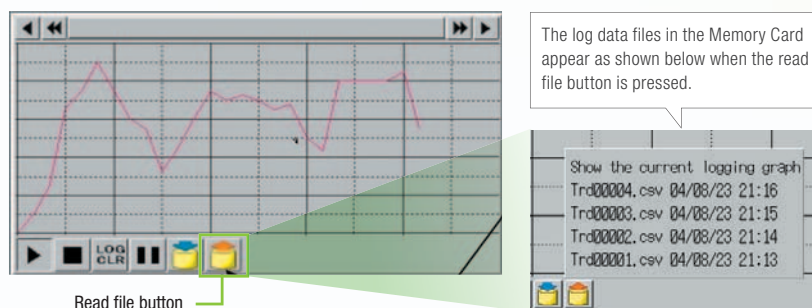

Suffixes are automatically added to file names set in the CX-Designer.


A log can be saved automatically, without any programming, just by selecting the Save the data periodically Option in the Data Log Setting Window.

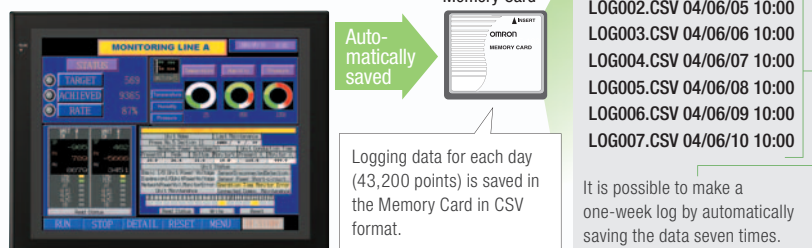

### Line Graph Function

The data logged by the PLC can be displayed in overlapping graphs, so a device's operation can be compared for evaluation and analysis. In addition, up to 1,000 words of consecutive data can be displayed as a line graph, data can be displayed together, and any region can be magnified.

#### (1) Graphs can be superimposed.

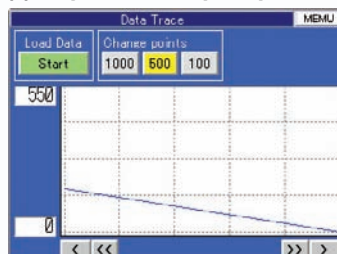


#### (2) The display can be magnified.



### Continuous Line Function

Any position from the host (PLC) can be plotted as a graph. A graph can be plotted in any position by specifying the X and Y coordinates of the vertices. Also, the graph can be moved on the screen by specifying the movements from the PLC.

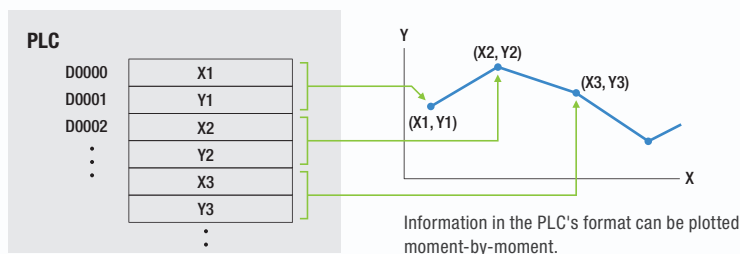

# Design

## Screen Data Security Functions


### Protect important screen data with a password.

If password protection is set in the data transfer security settings when the screen data is designed, a password must be entered to download or upload the screen data, so important screen data can be protected.



If a password has been set, the password is required to transfer screen data (download or upload) with the Memory Card.

### Security password

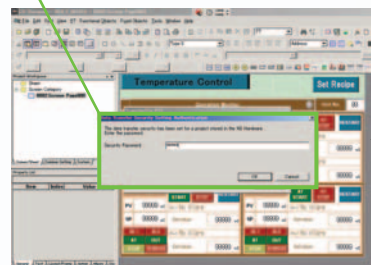

A password between 4 and 64 characters long can be set. The download/upload will start if the user inputs the password that was set when the screen was designed. (Password input will be disabled if the wrong password is input 3 times in a row.)



## Device Data Transfer


### Easy Data Exchange between the PLC and Components

For example, temperature controller alarm values can be transferred to the DM Area of the PLC's CPU Unit. No communications programming or macros are required.


### Multi-vendor Support

Devices from multiple vendors are supported. Data can be easily exchanged with PLCs from other companies and Modbus devices.

### Multi-vendor Support

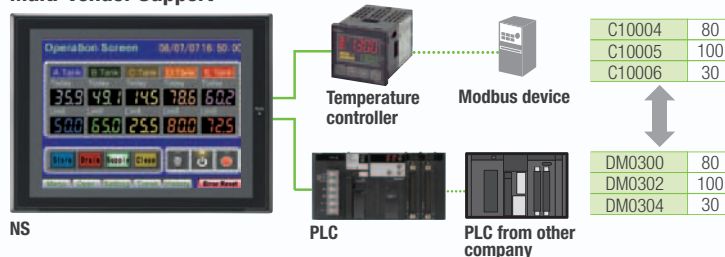

### Easy Settings

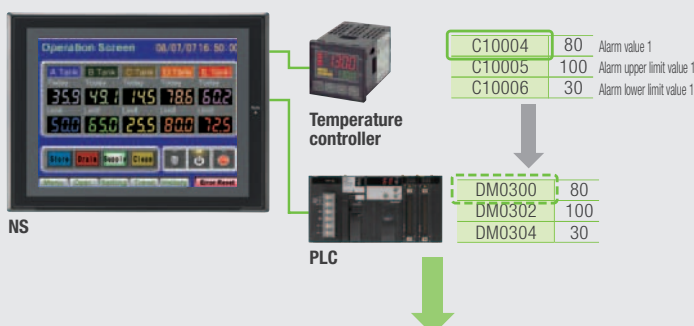

CX-Designer Select Device Data Transfer Setting from the PT Menu.

Make the settings simply by specifying the addresses of the transfer source and transfer destination as well as the number of data items.

Device	DAW04D (32 bits)
Data Length	32 bits
Convert Endians	<input type="checkbox"/>
No. of Elements	3
Transfer Source Address	C10004
Transfer Destination Address	DM0300
Comment	Alarm 1

Note 1: EtherNet/IP tags are not supported.

Note 2: CX-Designer version 3.1 or higher is required.

NS system version 8.2 or higher is required.





## NS Screen Templates NEW

The CX-Designer of version 3.5 or higher provides the palette to display objects and templates (scheduled for auto update in August 2012). Refer to the next page for details of the palette.


### Even Simpler

Templates can be read into the screen by just dragging and dropping thumbnails displayed on the palette.

The template consisting of multiple screens allows multiple screens to be read by dragging and dropping it once.


The Address Setting Dialog Box that is displayed to read templates is useful for changing addresses all at once.

### Easy Reading from Palette

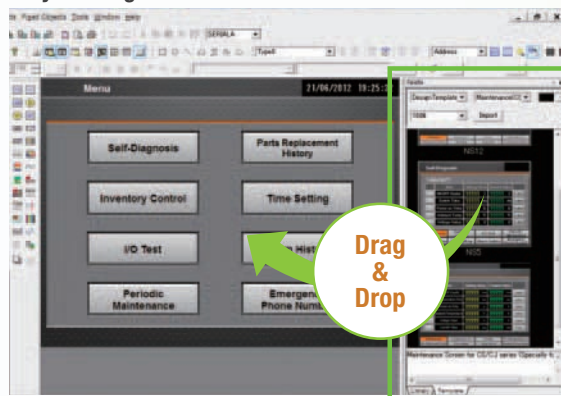

Address Setting Dialog Box




Palette



### Even More Beautiful

The refined templates enable you to use the NS Series with the screens that have a sense of unity in design.

Three different types of templates besides default screens are provided. The design can be changed easily with "Theme Name" that is displayed when dragging and dropping.

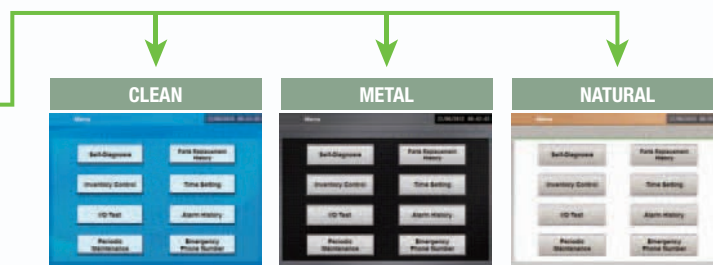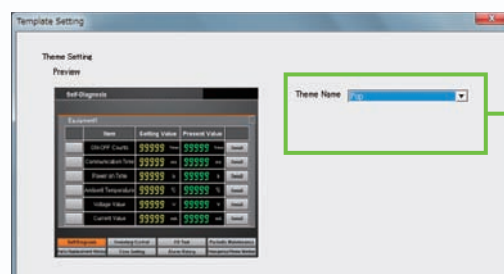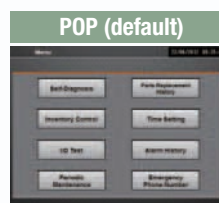

### "Cool" Objects

Backgrounds, buttons, labels, message boxes, and other objects are also provided for various themes.



# Design

## Screen Designer for NS Series, CX-Designer

### User-friendly Screen Creation

Without screen creation and ladder programming, the CX-Designer Screen Design Software is so easy-to-use that anyone can master it. Quickly create the required screen by dragging and dropping objects. OMRON's unified development environment lets you drastically reduce the work required to create screens.

Note: The same type of Project Workspace and Output Window as in the CX-Programmer are provided for the user interface.

#### All addresses and comments can be managed using a single Symbol Table.


Shows a list of addresses, names, and comments used in project screen data. Addresses, names, and I/O comments for the CX-Programmer can also be imported.

Host	Name	Type	Address	Type/Number	I/O Comment	Test
All	All	All	All	All	All	All
H001	STOP	BOOL			STOP SWITCH	Network Variable
H002	RUN	BOOL			RUN SWITCH	Network Variable
H003	AutoGen	CHANNEL	00000			None
SERIALA	LEFT	BOOL	00001.01		LEFT SWITCH	None
SERIALA	RIGHT	BOOL	00001.00		RIGHT SWITCH	None
SERIALA	AUTO	BOOL	00000.00		AUTO SWITCH	None
SERIALA	PAUSE	BOOL	00000.00		PAUSE SW	None
PTMEM	AutoGen2	CHANNEL	000			None
PTMEM	AutoGen1	BOOL	000			None

#### Improved Icons and Help

#### Objects and templates can be selected easily from the palette. **NEW**

Easy-to-use, well-designed, and super-beautiful objects and templates can be read into the screen by dragging and dropping. Templates can be chosen from four different designs.

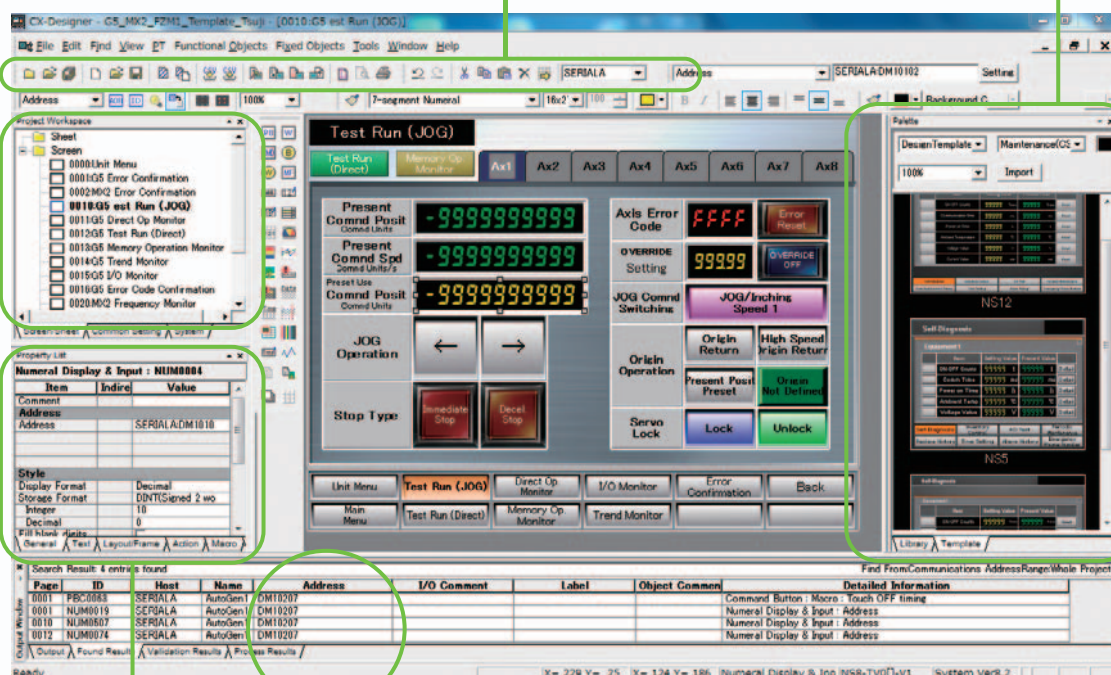

#### The project Workspace enables the user to look through the entire project.

- Screens you want to edit can be opened right away.
- Perform screen management, such as copying or deleting screens, by simply right-clicking.
- Reusing screens from other projects is easy with the CX-Designer.
- Settings for alarms, data logs, communications, and other functions can be easily accessed.

#### Drastically reduce the number of clicks in the project.

Just click on the object once to display or change properties. Multiple objects can be selected to display and change shared properties all at once.


#### The Output Window shows search results.

In addition to addresses and I/O comments used in screen data, labels can also be used as search strings and the results can be displayed.

## Palette **NEW**

Switches, lamps, and templates are registered in the palette.  
Just drag and drop them on the new or existing screen to add.

Note. CX-Designer version 3.5 or higher is required.

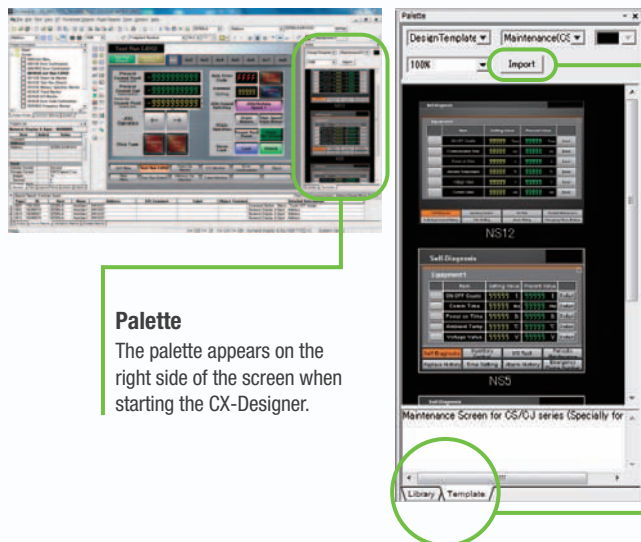


### Palette

The palette appears on the right side of the screen when starting the CX-Designer.

### Import

The Import button allows new objects and templates to be added to the palette.



Library and Template tabs at the bottom left of the palette

### Library

Parts list of switches and lamps is displayed.

### Template

Templates are displayed in thumbnail form.


## Library

Switches and lamps are registered in the library. Select a switch, lamp, or other object from the pull-down menu. You can register switches you created or other objects you often use in "User-defined".



## Color Setting

Display colors of objects registered in the library can be changed easily by selecting colors from pull-down menus.

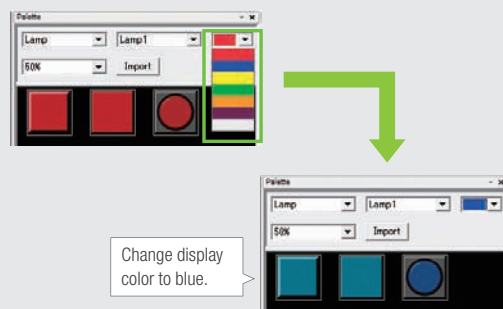

Change display color to blue.

## Template

Templates include design templates and device templates.

### • Design Template


Design templates are the screen templates designed professionally. Addresses can be changed with "Address Setting Dialog Box".

### • Device Template

As well as SAP (Smart Active Parts), addresses on the screen are automatically updated by changing unit number of Temperature Controller or Special I/O Unit with "Unit No Dialog Box".



A template consists of multiple screens. Multiple screens are pasted on the screen by dragging and dropping a thumbnail on the screen.

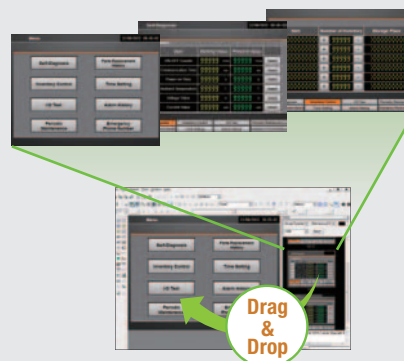



Drag & Drop



# Design

## Reading Another Project's Screens and Objects

Resources from another project can be easily reused by just selecting the screen or objects that you want to read and dragging and dropping it, so screens can be created intuitively.

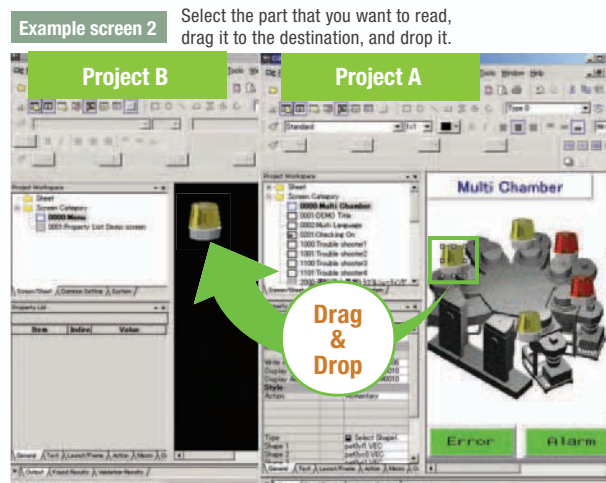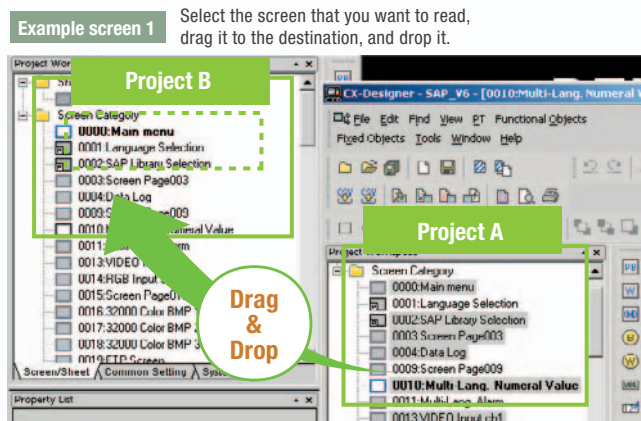


## Reading CAD Files

It is possible to import DXF files by dragging and dropping them. The files are read as a diagram, and so less capacity is used than with images. It is also easy to customize the diagram by changing the shape or color.



## The screen data and ladder program can be checked simultaneously in the computer.


The CX-Designer and CX-Programmer interconnects the test functions in the computer through the CX-Simulator. The screens and ladder program checks are performed simultaneously, which significantly increases debugging efficiency. The CX-Programmer also has a new button for integrated simulation. And, work efficiency is further improved with the ability to keep required work screens pinned on front and to zoom in or out as desired.

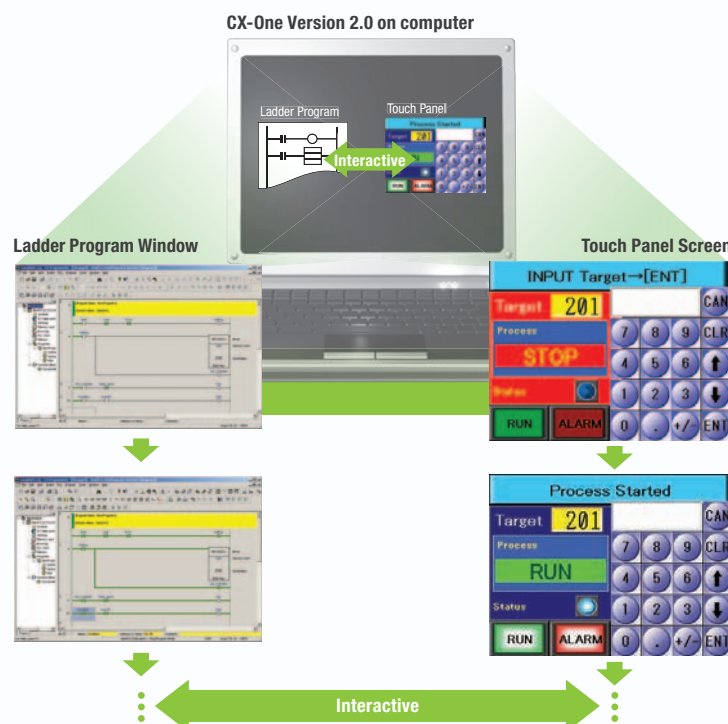

## Reading the Symbol Table

The symbol table created in the CX-Programmer during ladder programming can be read into the CX-Designer by dragging and dropping, so it isn't necessary to manually data such as input addresses and I/O comments. Tags (i.e., network symbols) can also be read into the CX-Designer.

Note: Version 8.0 or higher of the CX-Programmer support tags (i.e., network symbols).

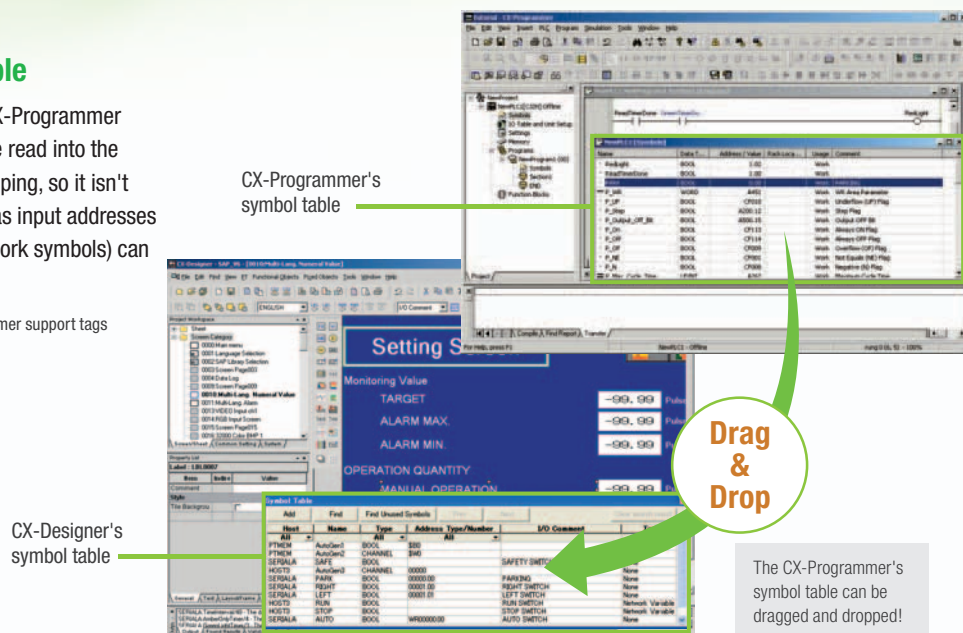

### Example of Reading the Symbol Table

The symbol table read from the CX-Programmer can be directly dragged and dropped to the touch switch and lamp.

(1) Create a switch on the screen.




(3) Allocations for buttons and lamps can also be checked on the screen using comments imported from the CX-Programmer.




### Example of Easy Address Allocation

(2) Check the comment then drag-and-drop the symbol from the symbol table to the property list.

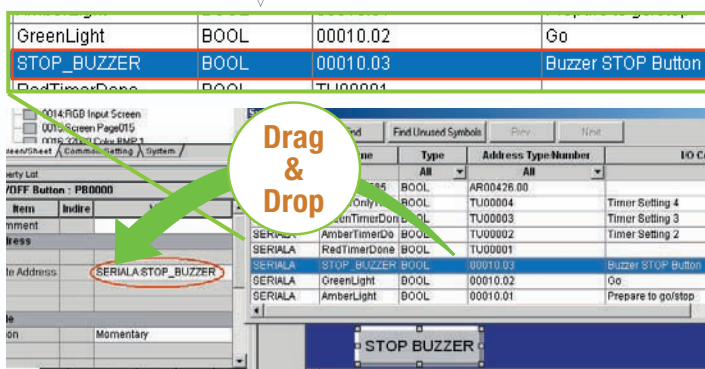

### Example of Reading I/O Comments

If Use I/O comment is selected in advance for the Use symbol text as label, the I/O comments are automatically used as labels when addresses are dragged and dropped from the symbol table. (If Use symbol names is selected, the symbol names are used as the labels.)

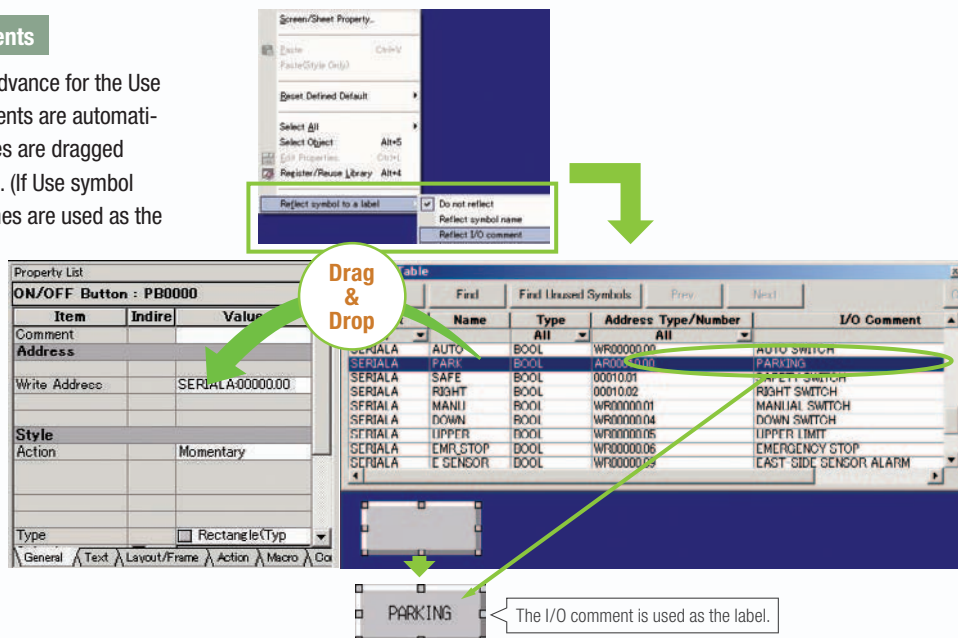

# Startup/Operation

## 260,000-color Video Display

**Equipment and workpiece movements can also be displayed in beautiful video**


### NS-CA001 Video Input Unit

Four video inputs or CCD cameras can be connected and up to four images can be displayed simultaneously if the image size is 320x240 pixels. The NS-CA001 cannot be used with the NS5 or the NS15.


### NS-CA002 RGB/Video Input Unit

There is an analog RGB input terminal in addition to the two video input terminals. Either of the video signals or the analog RGB signal can be displayed on the NS-series PT. The NS-CA002 cannot be used with the NS5.

Note: Video input cannot be used with the NS15.  
Only RGB input can be used.

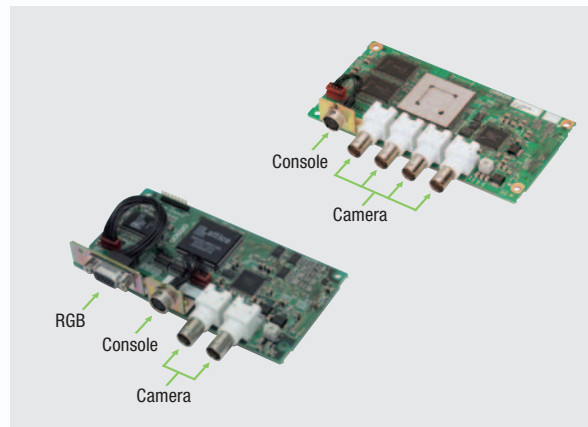

**Also Compatible with OMRON Vision Sensors.**

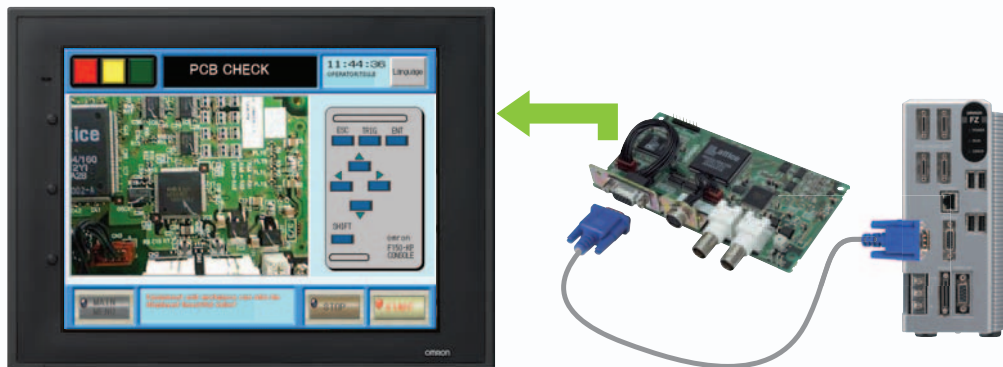

## Analog RGB Output

**The NS screen is seen by another monitor.**

The NS15 screen (XGA) can be displayed on an on-site display that has RGB inputs.

Note: Only NS15






## FTP Function

**You can partially replace text and pictures from your computer.**

FTP (File Transfer Protocol) has been added! Texts, lists, and recipes can be replaced with the put/get command from your computer! You can even replace BMP files from your computer easily.

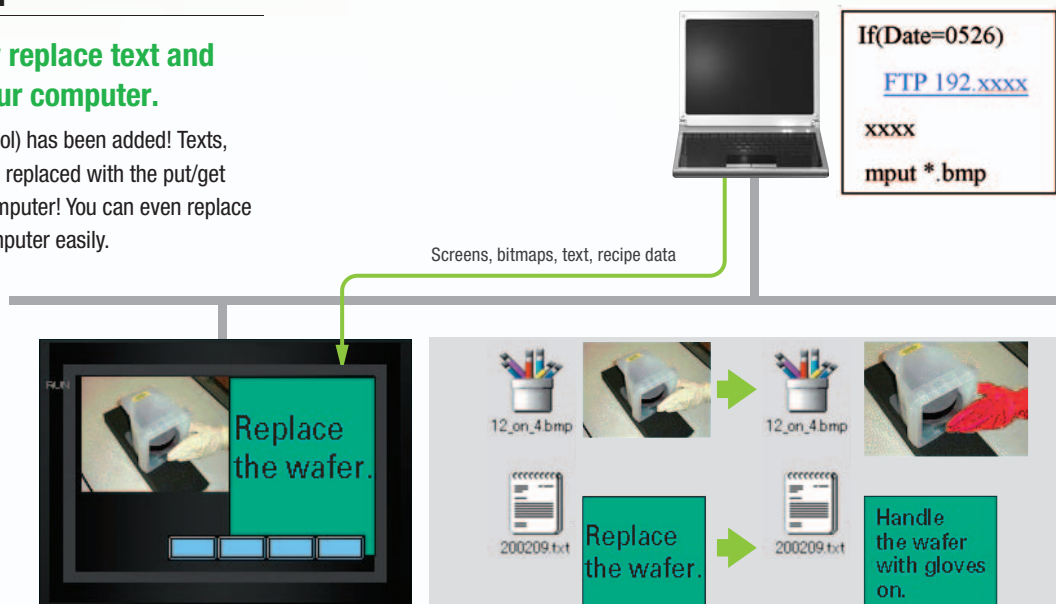

## User Security Functions

**Operator access rights and the operating format can be set to one of five password levels.**


Each operator can be given one of 5 password levels using the User Security (level authentication) function. A password level can be set for each object, so various objects can be made inoperable or hidden based on the operator's access level.

Password	
Level1	Line Operator
Level2	Group Leader
Level3	Line Manager
Level4	Maintenance
Level5	Administrator

Low  
High

Level 1  
Level 2  
Level 3  
Level 4  
Level 5

Operator passwords are managed in 5 levels. Passwords can be up to 16 characters long and the access rights increase as the level number increases.

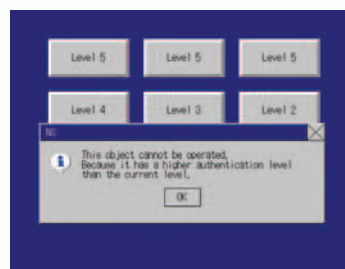


The operator cannot manipulate objects with a password level (authentication level) higher than the operator's login level.

## NS with LED backlight


**NS5 color-type models (SQ/TQ models), NS8 models, NS10 models, NS12 models, NS15 models with LED backlight are newly released.\***

LED backlight allows backlight brightness adjustment of up to 32 levels. The brightness can be adjusted from the operation screens, and the RUN indicator changes its luminance according to the settings of the backlight brightness; it is favorable for ship and vessel applications.

### Conventional three-level adjustment

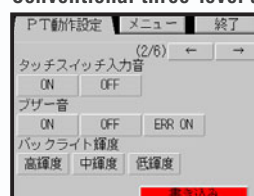

### New 32-level adjustment

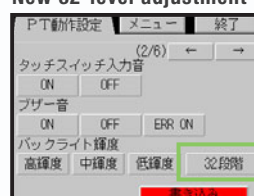

\* LotNo.1520 or later of NS5 color-type models, LotNo.28X1 or later of NS8 models, LotNo.11Y1 or later of NS10 models, LotNo.14Z1 or later of NS12 models, LotNo.31114K or later of NS15 models.

# Maintenance

## Comparison NEW


The on-site NS screen can be compared with the computer screen.

The comparison function of the CX-Designer enables the following comparison.

CX-Designer project ↔ Project in the computer

CX-Designer project ↔ NS project

- |           |                       |
|-----------|-----------------------|
| Same      | ▶ Same in screen      |
| Different | ▶ Different in screen |
| Added     | ▶ Screen added        |
| Deleted   | ▶ Screen deleted      |

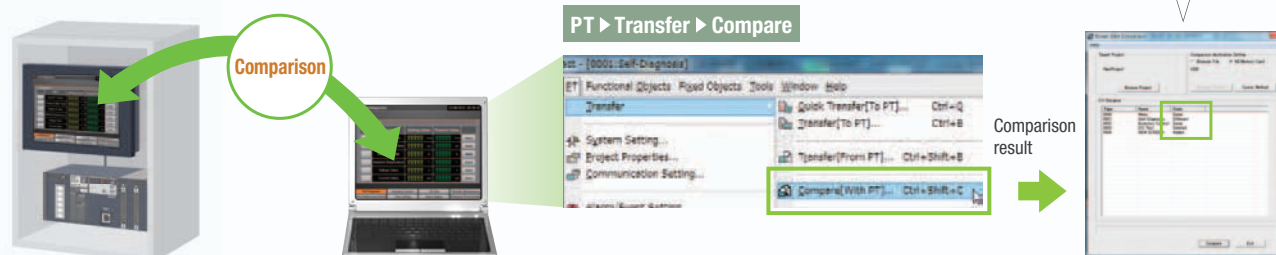


## Single Port Multi Access (SPMA)

Note: Communications across network layers can be performed.


Transfer ladder program data to the PLC via the PT. Perform online editing via the PT.

[ Computer (Serial/USB) → NS-series PT (Ethernet) → PLC (Ethernet or Controller Link) → PLC ]

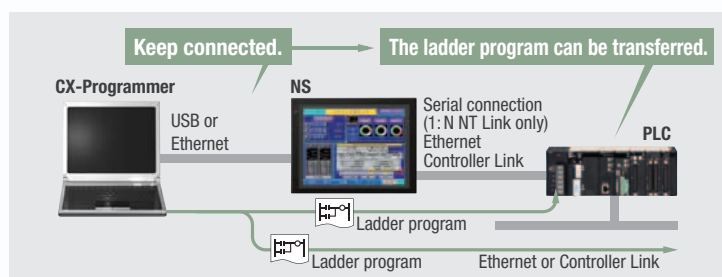

Transfer screen data via the PLC.

[ Computer (Serial) → PLC (Ethernet or Controller Link) → NS-series PT ]

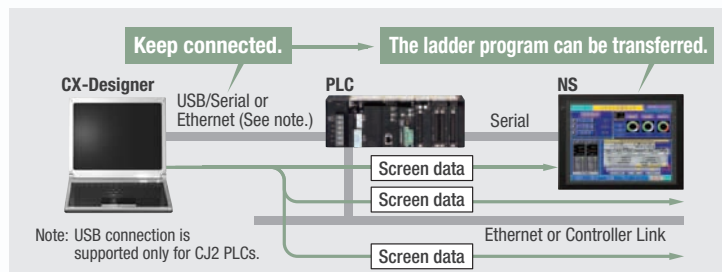

Using a USB relay cable greatly improves debugging at equipment startup.

Use a USB relay cable to enable performing maintenance from in front of the control panel.

## Easy Automatic Connection

A search is automatically made for the PLCs connected to the PT and the results are displayed using the automatic online connection function in the CX-Programmer. Just select a PLC from the list to connect. This function is also supported for PLCs over network layers.


CX-Programmer



Note 1: SPMA can be used in CS/CJ-series PLCs with lot number 030201 or later.

Note 2: SPMA via a PLC is not supported when a CP-series PLC is connected. (SPMA via an NS-series PT is supported with a CP-series PLC.)

Note 3: CX-Programmer version 8.2 and higher support automatic online connection via the PT. NS system version 8.2 or higher is required.

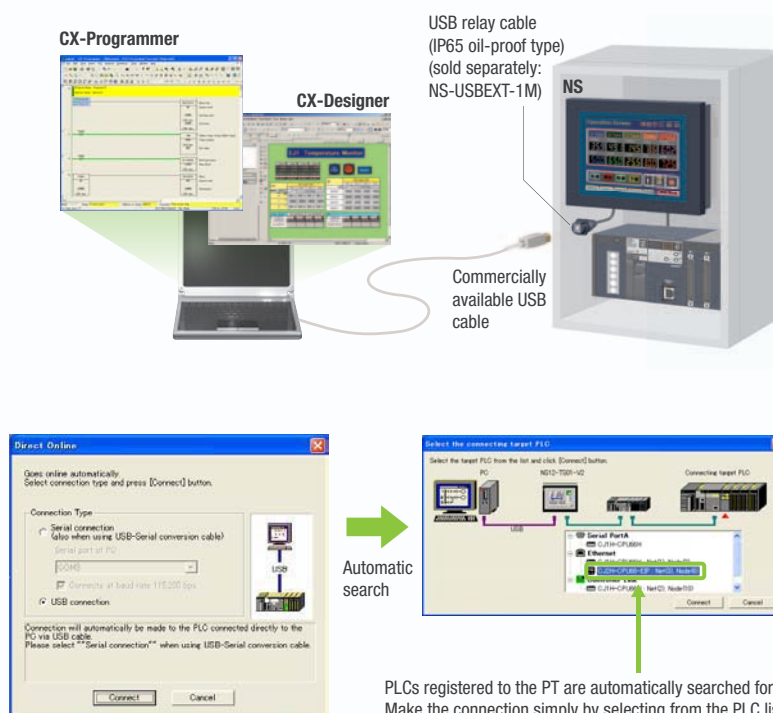

PLCs registered to the PT are automatically searched for. Make the connection simply by selecting from the PLC list.



## PLC Data Trace



The PLC data trace function can be used without a computer.

The PLC Data Trace function is built into the PT in addition to the Ladder Monitor and Device Monitor. A bit's status and operation can be viewed in a time chart just by setting the desired PLC bit's address in the PT. It is also now possible to display word data, save data in CSV files, and save time chart screens in BMP files.

Note 1: There are differences between this Data Trace function and the CX-Programmer's Data Trace function. Refer to the NS-series Programmable Terminal Programming Manual (Cat. No. V073) for details.

Note 2: The PLC data trace function cannot be used with the 5.7-inch model.

Note 3: The PLC data trace function is not supported for connection with a CP1E PLC.

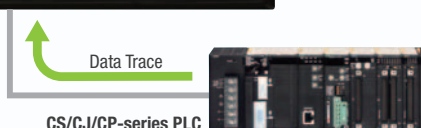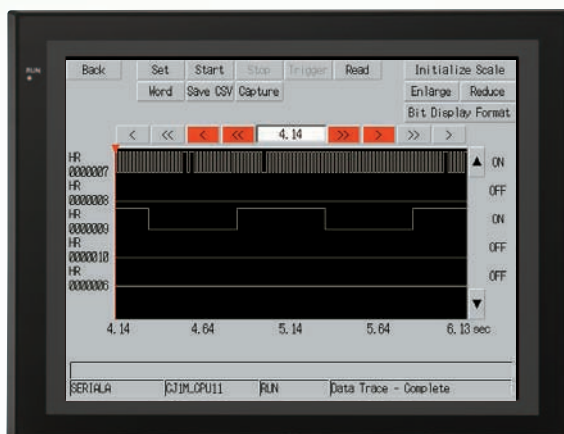


CS/CJ/CP-series PLC

## Operating log

What Was Touched When? can be recorded.

Functionality has been improved with the addition of a log to record operators' use of the panels. It is now possible to record and display the time, date, and operation details for buttons (i.e., hardware switches) pressed on the control panel in addition to operations on the touch panel. The operation log can be saved in a CSV file on a Memory Card mounted in the NS-series PT.


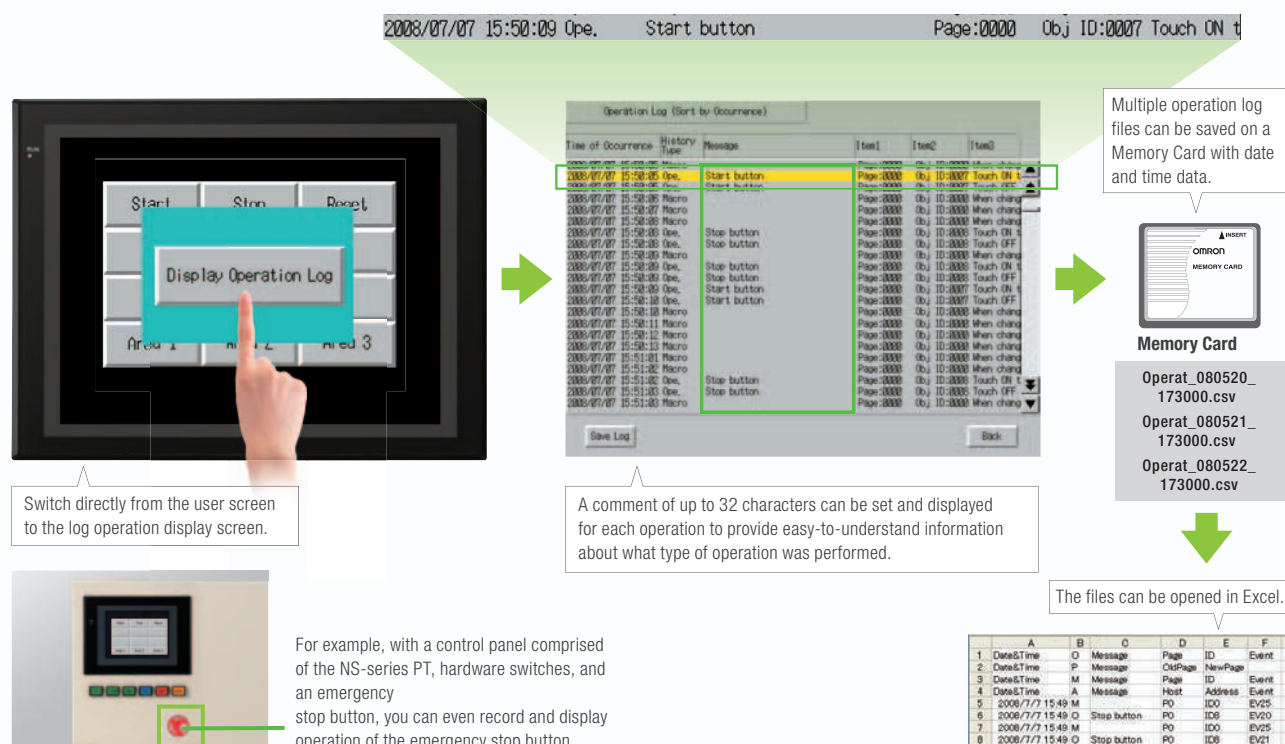




## Ladder Monitor

**The ladder program can be monitored without a computer.**

Ladder programs with I/O comments can be monitored on the PT's screen and the ladder program can also be edited with the Programming Console function.

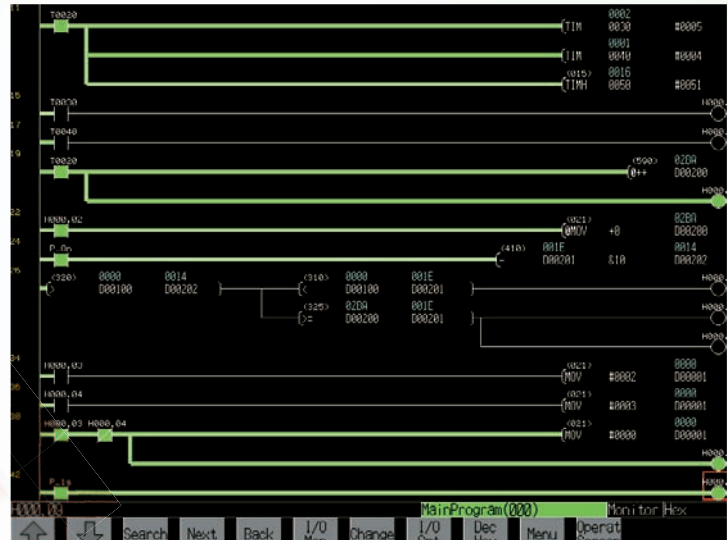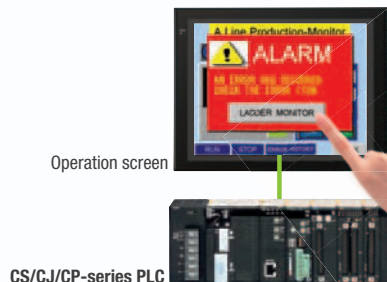

**Also meets the requirements of users who need to display devices onsite**

## Switch Box Function

The operator can check the PLC status by displaying just the I/O comments and status.

## Device Monitor Function

Displays the device's contents, allowing settings to be input and checked and making startup operations more efficient.

### Switch Box Function


[illegible]

### Device Monitor Function

Rechnung Funktion	Optimale Reihenfolge		Error Information		Satisfiability		Zeit
40072	N00107		OK				
	c0	c1	c2	c3	c4	c5	c6
00000	0000	0000	0000	0000	0000	0000	0000
00001	0000	0000	0000	0000	0000	0000	0000
00002	0000	0000	0000	0000	0000	0000	0000
00003	0000	0000	0000	0000	0000	0000	0000
00004	0000	0000	0000	0000	0000	0000	0000
00005	0000	0000	0000	0000	0000	0000	0000
00006	0000	0000	0000	0000	0000	0000	0000
00007	0000	0000	0000	0000	0000	0000	0000
00008	0000	0000	0000	0000	0000	0000	0000
00009	0000	0000	0000	0000	0000	0000	0000
00010	0000	0000	0000	0000	0000	0000	0000
00011	0000	0000	0000	0000	0000	0000	0000
00012	0000	0000	0000	0000	0000	0000	0000
00013	0000	0000	0000	0000	0000	0000	0000
00014	0000	0000	0000	0000	0000	0000	0000
00015	0000	0000	0000	0000	0000	0000	0000
00016	0000	0000	0000	0000	0000	0000	0000
00017	0000	0000	0000	0000	0000	0000	0000
00018	0000	0000	0000	0000	0000	0000	0000
00019	0000	0000	0000	0000	0000	0000	0000
00020	0000	0000	0000	0000	0000	0000	0000
00021	0000	0000	0000	0000	0000	0000	0000
00022	0000	0000	0000	0000	0000	0000	0000
00023	0000	0000	0000	0000	0000	0000	0000
00024	0000	0000	0000	0000	0000	0000	0000
00025	0000	0000	0000	0000	0000	0000	0000
00026	0000	0000	0000	0000	0000	0000	0000
00027	0000	0000	0000	0000	0000	0000	0000
00028	0000	0000	0000	0000	0000	0000	0000
00029	0000	0000	0000	0000	0000	0000	0000
00030	0000	0000	0000	0000	0000	0000	0000
00031	0000	0000	0000	0000	0000	0000	0000
00032	0000	0000	0000	0000	0000	0000	0000
00033	0000	0000	0000	0000	0000	0000	0000
00034	0000	0000	0000	0000	0000	0000	0000
00035	0000	0000	0000	0000	0000	0000	0000
00036	0000	0000	0000	0000	0000	0000	0000
00037	0000	0000	0000	0000	0000	0000	0000
00038	0000	0000	0000	0000	0000	0000	0000
00039	0000	0000	0000	0000	0000	0000	0000
00040	0000	0000	0000	0000	0000	0000	0000
00041	0000	0000	0000	0000	0000	0000	0000
00042	0000	0000	0000	0000	0000	0000	0000
00043	0000	0000	0000	0000	0000	0000	0000
00044	0000	0000	0000	0000	0000	0000	0000
00045	0000	0000	0000	0000	0000	0000	0000
00046	0000	0000	0000	0000	0000	0000	0000
00047	0000	0000	0000	0000	0000	0000	0000
00048	0000	0000	0000	0000	0000	0000	0000
00049	0000	0000	0000	0000	0000	0000	0000
00050	0000	0000	0000	0000	0000	0000	0000
00051	0000	0000	0000	0000	0000	0000	0000
00052	0000	0000	0000	0000	0000	0000	0000
00053	0000	0000	0000	0000	0000	0000	0000
00054	0000	0000	0000	0000	0000	0000	0000
00055	0000	0000	0000	0000	0000	0000	0000
00056	0000	0000	0000	0000	0000	0000	0000
00057	0000	0000	0000	0000	0000	0000	0000
00058	0000	0000	0000	0000	0000	0000	0000
00059	0000	0000	0000	0000	0000	0000	0000
00060	0000	0000	0000	0000	0000	0000	0000
00061	0000	0000	0000	0000	0000	0000	0000
00062	0000	0000	0000	0000	0000	0000	0000
00063	0000	0000	0000	0000	0000	0000	0000
00064	0000	0000	0000	0000	0000	0000	0000
00065	0000	0000	0000	0000	0000	0000	0000
00066	0000	0000	0000	0000	0000	0000	0000
00067	0000	0000	0000	0000	0000	0000	0000
00068	0000	0000	0000	0000	0000	0000	0000
00069	0000	0000	0000	0000	0000	0000	0000
00070	0000	0000	0000	0000	0000	0000	0000
00071	0000	0000	0000	0000	0000	0000	0000
00072	0000	0000	0000	0000	0000	0000	0000
00073	0000	0000	0000	0000	0000	0000	0000
00074	0000	0000	0000	0000	0000	0000	0000
00075	0000	0000	0000	0000	0000	0000	0000
00076	0000	0000	0000	0000	0000	0000	0000
00077	0000	0000	0000	0000	0000	0000	0000
00078	0000	0000	0000	0000	0000	0000	0000
00079	0000	0000	0000	0000	0000	0000	0000
00080	0000	0000	0000	0000	0000	0000	0000
00081	0000	0000	0000	0000	0000	0000	0000
00082	0000	0000	0000	0000	0000	0000	0000
00083	0000	0000	0000	0000	0000	0000	0000
00084	0000	0000	0000	0000	0000	0000	0000
00085	0000	0000	0000	0000	0000	0000	0000
00086	0000	0000	0000	0000	0000	0000	0000
00087	0000	0000	0000	0000	0000	0000	0000
00088	0000	0000	0000	0000	0000	0000	0000
00089	0000	0000	0000	0000	0000	0000	0000
00090	0000	0000	0000	0000	0000	0000	0000
00091	0000	0000	0000	0000	0000	0000	0000
00092	0000	0000	0000	0000	0000	0000	0000
00093	0000	0000	0000	0000	0000	0000	0000
00094	0000	0000	0000	0000	0000	0000	0000
00095	0000	0000	0000	0000	0000	0000	0000
00096	0000	0000	0000	0000	0000	0000	0000
00097	0000	0000	0000	0000	0000	0000	0000
00098	0000	0000	0000	0000	0000	0000	0000
00099	0000	0000	0000	0000	0000	0000	0000
00100	0000	0000	0000	0000	0000	0000	0000
00101	0000	0000	0000	0000	0000	0000	0000
00102	0000	0000	0000	0000	0000	0000	0000
00103	0000	0000	0000	0000	0000	0000	0000
00104	0000	0000	0000	0000	0000	0000	0000
00105	0000	0000	0000	0000	0000	0000	0000
00106	0000	0000	0000	0000	0000	0000	0000
00107	0000	0000	0000	0000	0000	0000	0000
00108	0000	0000	0000	0000	0000	0000	0000
00109	0000	0000	0000	0000	0000	0000	0000
00110	0000	0000	0000	0000	0000	0000	0000
00111	0000	0000	0000	0000	0000	0000	0000
00112	0000	0000	0000	0000	0000	0000	0000
00113	0000	0000	0000	0000	0000	0000	0000
00114	0000	0000	0000	0000	0000	0000	0000
00115	0000	0000	0000	0000	0000	0000	0000
00116	0000	0000	0000	0000	0000	0000	0000
00117	0000	0000	0000	0000	0000	0000	0000
00118	0000	0000	0000	0000	0000	0000	0000
00119	0000	0000	0000	0000	0000	0000	0000
00120	0000	0000	0000	0000	0000	0000	0000
00121	0000	0000	0000	0000	0000	0000	0000
00122	0000	0000	0000	0000	0000	0000	0000
00123	0000	0000	0000	0000	0000	0000	0000
00124	0000	0000	0000	0000	0000	0000	0000
00125	0000	0000	0000	0000	0000	0000	0000
00126	0000	0000	0000	0000	0000	0000	0000
00127	0000	0000	0000	0000	0000	0000	0000
00128	0000	0000	0000	0000	0000	0000	0000
00129	0000	0000	0000	0000	0000	0000	0000
00130	0000	0000	0000	0000	0000	0000	0000
00131	0000	0000	0000	0000	0000	0000	0000
00132	0000	0000	0000	0000	0000	0000	0000
00133	0000	0000	0000	0000	0000	0000	0000
00134	0000	0000	0000	0000	0000	0000	0000
00135	0000	0000	0000	0000	0000	0000	0000
00136	0000	0000	0000	0000	0000	0000	0000
00137	0000	0000	0000	0000	0000	0000	0000
00138	0000	0000	0000	0000	0000	0000	0000
00139	0000	0000	0000	0000	0000	0000	0000
00140	0000	0000	0000	0000	0000	0000	0000
00141	0000	0000	0000	0000	0000	0000	0000
00142	0000	0000	0000	0000	0000	0000	0000
00143	0000	0000	0000	0000	0000	0000	0000
00144	0000	0000	0000	0000	0000	0000	0000
00145	0000	0000	0000	0000	0000	0000	0000
00146	0000	0000	0000	0000	0000	0000	0000
00147	0000	0000	0000	0000	0000	0000	0000
00148	0000	0000	0000	0000	0000	0000	0000
00149	0000	0000	0000	0000	0000	0000	0000
00150	0000	0000	0000	0000	0000	0000	0000
00151	0000	0000	0000	0000	0000	0000	0000
00152	0000	0000	0000	0000	0000	0000	0000
00153	0000	0000	0000	0000	0000	0000	0000
00154	0000	0000	0000	0000	0000	0000	0000
00155	0000	0000	0000	0000	0000	0000	0000
00156	0000	0000	0000	0000	0000	0000	0000
00157	0000	0000	0000	0000	0000	0000	0000
00158	0000	0000	0000	0000	0000		


so no extra work to show I/O comments

Read I/O comments directly from the PLC. I/O comments do not have to be stored in a Memory Card.

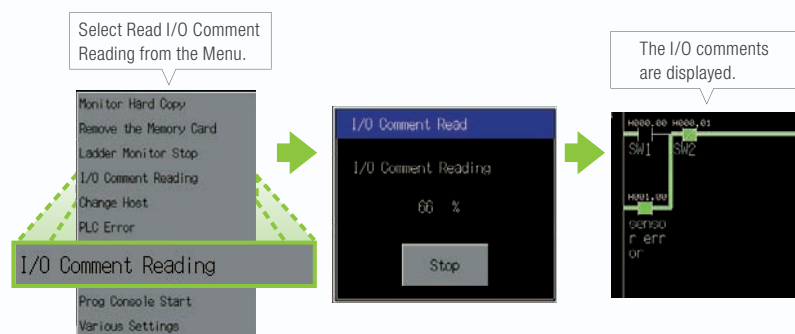

**Easy checking the alarm bit and shortens searching time.**

When an alarm occurs, touch the message to automatically search for the alarm bit (output bit) for the alarm. This enables you to quickly check the alarm address and investigate why the bit turned ON.

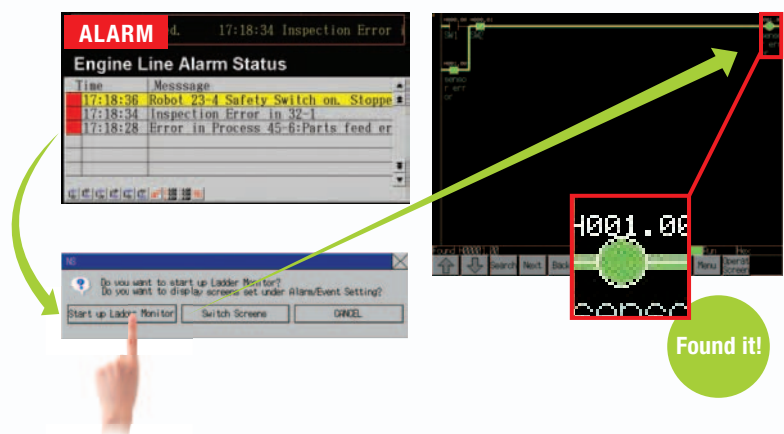



## “Find Back”, “Find Next”, useful Function Supported by the NS-series.

Reduced Time to Investigate Which Output or Input Is Causing the Problem.

Function	Operation with NS-series PT.	CX-Programmer
Find the address at specified by the cursor.	Next	“N” Key
Find the output from the input bit or find the input bit from the output at the cursor.	Double-click	“Space” Key
Return to the previous search position.	Back	“B” Key

2. Is this input the cause? What output corresponds to this input?

4. Which of these two inputs is the cause? Let's look at CIO 21.00 first.

6. So is it input CIO 21.01 after all?

Yes, the problem is here!

1. Why is this output not turning ON?

3. Why is this output not turning ON?

5. There's no problem with input CIO 21.00. Let's go back to the previous program section.

Back

## Force-setting and force-resetting are possible

Locations that have been force-set are displayed in pink and can be checked at a glance.

1. Select the input bit for which the output will be forced ON.

2. Select the address by touching the panel.

3. Select the Forced Set Option and then press the Update Button.

4. Forced ON

Minor changes in values of timers or counters can be made without Support Software.

Change

## Check and Change I/O While You View the Ladder Diagram on the I/O Monitor

Display and change the present value by specifying the address. It is also possible to force-set/reset bits with the I/O monitor.

1. Make the selection with the I/O monitor by touching the screen.

2. Changing the present value of the address selected with the Change Value Button

Change Value

Note: The Ladder Monitor function is not supported by the 5.7-inch models.


# NS-Runtime

## NS-NSRCL (NS-Runtime)

**Achieve machine/line monitoring and data logging on your office computer.**


### Machine Viewer

Machine monitoring in an office environment. There is no need to create complex host applications. Moreover, when an alarm occurs, a PDF file can be displayed as maintenance information. NS Series screens can be reused on the computer, and screens can be also newly created independently of touch panels at the production site.

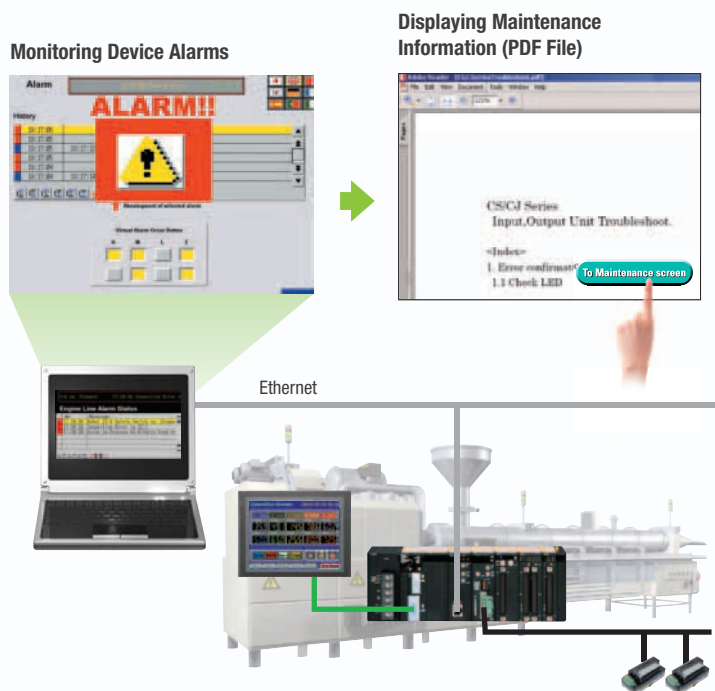

### Wide Screen

Computer output can be displayed on another wide-screen monitor. XGA (1,024 x 768 dots) and up to a maximum screen size of 3,840 x 2,400 is supported. Alarms occurring in devices or the line can be monitored.

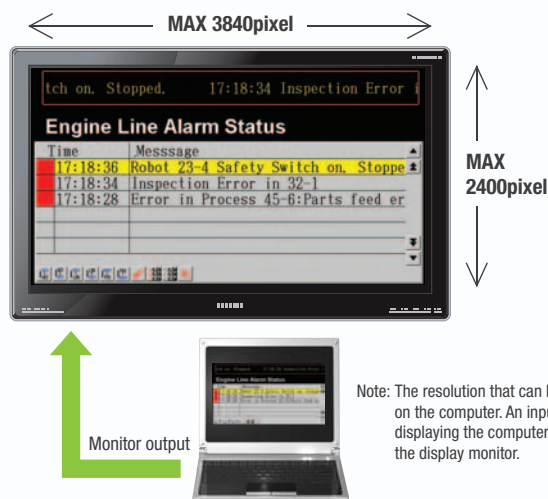

### Data Logger

Log large amounts of data using a personal computer. Data can be logged through background processing, with up to 160,000 points stored in one file. The logged data is stored in CSV format, and data can be displayed on data log graphs.



#### Example: 160,000 Points


Data can be logged for approximately 7.4 days, assuming data is logged every two seconds for 12 hours a day. By using automatic file saving, data logging can be continued even longer than 7.4 days.





## Recipe Handling


Checking machine data or switching processes from a host computer is easy. Parameter groups in the PLC can be transferred together to a computer, and the transferred data can be checked and edited in CSV format, e.g., using Excel. The edited data can then be transferred together back to the PLC.

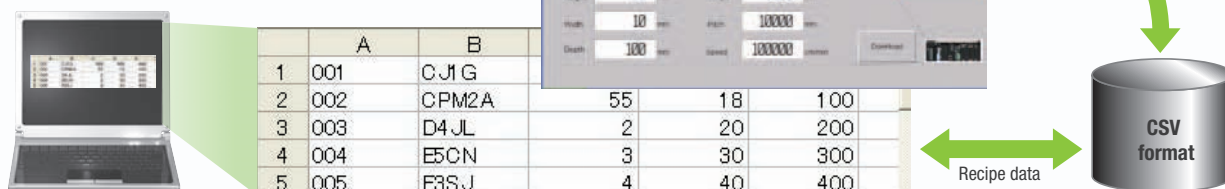

## Easy Installation


To get started, just install the NS-Runtime in the computer and place the screen data in the applicable folder. NS/NSJ-series screens and NS-Runtime screens can all be managed using one single tool.

Note: The NS-Runtime will operate in a computer environment even if the CX-Designer installed is not installed. The hardware key (USB dongle) that is supplied with the NS-Runtime is required for operation.

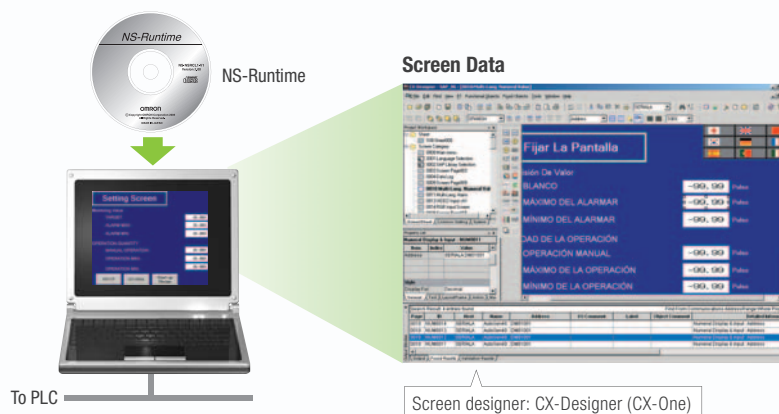

## Application Startup Function

User applications can be started from NS-Runtime. Applications can be started simply by pressing buttons on the screen.

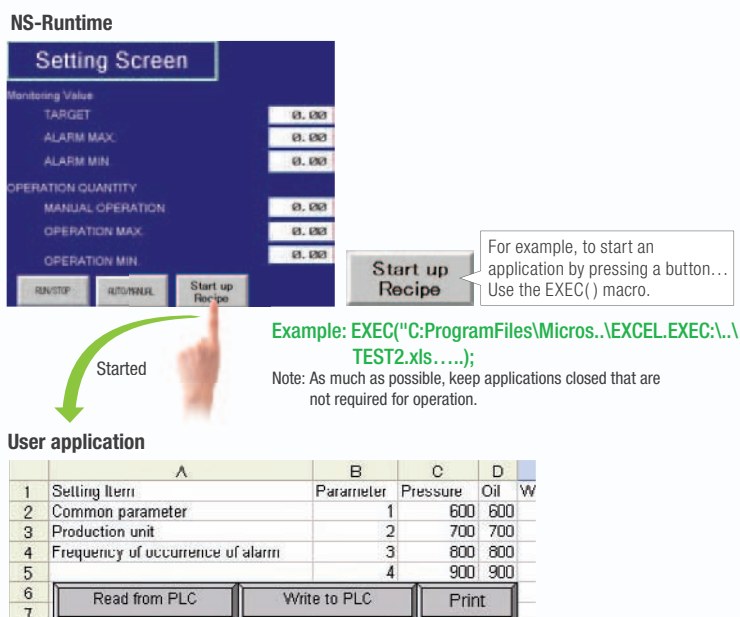

Note 1: If the screen data is converted for the NS Series, NS-Series PT system versions must be 8.1 or earlier. The screen data of system version 8.2 can not be converted for the NS-Runtime.

Note 2: Do not use this product for 24-hour operation in an FA environment. OMRON shall not be responsible if the computer or application does not operate properly due to noise or other causes. OMRON shall not be responsible for any problems that may be caused by any applications other than OMRON products.

# Hand-held PT

## NSH5 Series

A hand-held version of the NS5 is now available to perform operations at the production site. The NS-series PT's have a complete set of functions that can be used at the production site, such as the SAP Library, multi-language support, and Programming Console functions.

### Function Switches

Use the ten functions switches.  
F1, F2, F6, F7: Wired outputs  
F3 to F5, F8 to F10: Communications outputs



### 3-Position Enable Switch

Increased safety with DPST-NO structure (wired outputs).

### Memory Card Interface and USB Slave Connector.

Easily transfer screens or save logs at high speed using a USB connection.

### Emergency Stop Switch.

3PST-NC Structure  
DPST-NC: Increase safety (wired outputs).  
SPST-NC: Input to internal NSH5 memory, output to a lamp for emergency stop switch operation, or output via communications, e.g., to a PLC.

### Water Resistance to IP65

The water-resistant structure is equivalent to IP65 on all surfaces. The PT may not be suitable for use in environments with long-term water exposure.

### PT and Cable Sold Separately

Select the Cable according to the application (RS-232C/RS-422A).  
Connector-loose wires, UL connector, 3 m or 10 m.



## Precautions for Emergency Stop Switches

When using a hand-held NSH5 that will be installed and removed from a control panel or Removable Box, always use the specified Stop Switch (Gray/NSH5-SQG10B-V2) to conform to Safety Standards (EN 60204-1).

## Options

### Removable Box

A separate external circuit is not required because the Removable Box has been configured so that the emergency stop switch line will not turn OFF (i.e., so that the emergency stop circuit will operate) even when the NSH5 is removed.

### Visor

Use when the NSH5 is in direct sunlight.

### Mounting Bracket

Use to attach the NSH5 to a control panel.



# Programmable Terminals NS Series

**Even Simpler Equipment Operation with Outstanding Synergy.**



**5.7 inches**  
Color TFT

STN monochrome

**10.4 inches**  
Color TFT

**15 inches**  
Color TFT

**12.1 inches**  
Color TFT

**8.4 inches**  
Color TFT

## Features

- 5.7 to 12.1 inch sizes are available.
- A hand-held version of the NS5 is now available to perform operations at the production site. The NS-series PT's have a complete set of functions that can be used at the production site.
- The Smart Active Parts(SAP Library) makes it easy to connect to OMRON PLCs and components, OMRON provides a development environment that requires with no programming and no screen designing.
- When an error occurs in a Unit in the OMRON PLCs, the Troubleshooter SAP Library provides an easy-to-understand explanation of the cause of the error as well as the countermeasures.
- Ladder Monitor come as a Standard Feature. The ladder program can be monitored onsite without a laptop! Ladder monitor lets you monitor PLC program status, search for addresses or instructions, monitor multiple I/O points, and much more.
- Provides the FA integrated tool package "CX-One" for a Screen Design Software Integrated Simulation come as a Standard Feature. The integrated simulation function simulates ladder programs and screen data simultaneously even without the actual hardware.
- Screens support 42 languages and the Support Software supports eight. System messages can be displayed in eight languages.
- Single Port Multi Access (SPMA) come as a Standard Feature. The ladder program and screen data can be transferred from a single port!
- Connectable PLCs and devices appear one after another.  
Has become connectable with the PLCs of Mitsubishi Electric Corporation and the Inverters of OMRON Corporation.

Sysmac is a trademark or registered trademark of OMRON Corporation in Japan and other countries for OMRON factory automation products. Windows is registered trademarks of Microsoft Corporation in the USA and other countries. EtherCAT® is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany. Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.




## NS Series

### Network

Provides serial NT Link communications supporting both 1:1 and 1:N connections. The NT Link has more efficient communications than Host Link and its capabilities are especially apparent in applications with multiple PTs connect to the PLC. The NS-series PTs can also support communications with multiple PLCs and multiple NS-series PTs through Controller Link and Ethernet connections, so the network can be configured freely to match the requirements and scale of the application. In addition, using the NS-Runtime makes it possible to monitor machine status and log data from the host.


#### [Example NS-series Network Configuration]

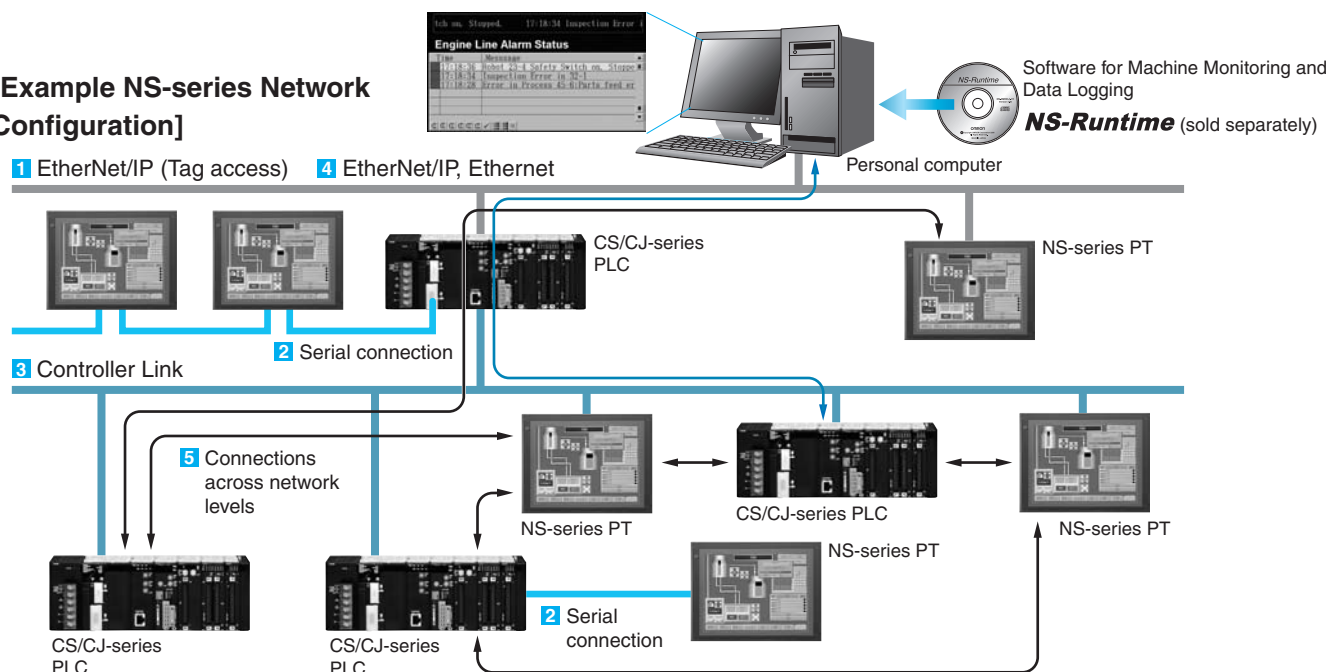

#### Configuration of CJ2 series, NJ series and NX series

##### 1 EtherNet/IP Connection (Tag accesses)

If an Ethernet-compatible NS-series PT is used, the PT can connect to a Controller with built-in EtherNet/IP and an Option Unit is not needed to connect at the PT.

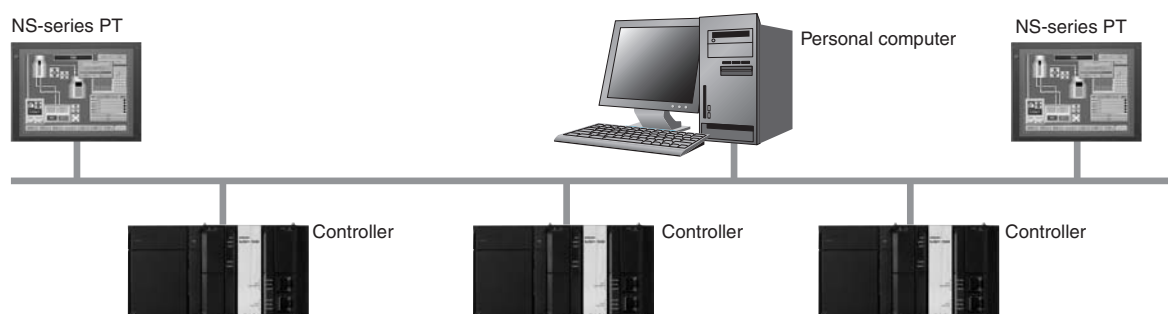


## Configuration of CS series, CJ series and CP series

### 2 Serial connection


#### 1:1 NT Link or Host Link

##### ●NS:PLC = 1:1

Connecting with the PLC through port A or port B

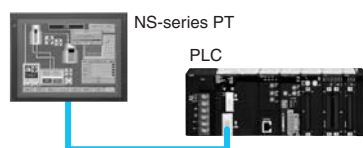


##### ●NS:PLC = 1:2

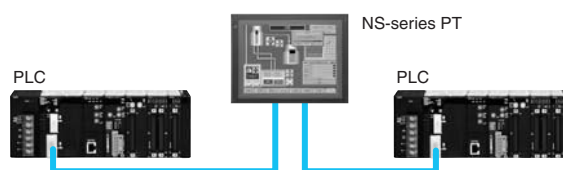


#### 1:N NT Link

##### ●NS:PLC ratio = 8:1 max. Up to 8 NS-series PTs can be connected to each of the PLC's RS-232C/RS-422A ports.

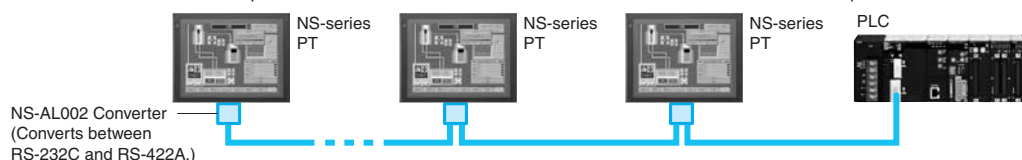

### 3 Controller Link Connection

The PT can be connected to an OMRON Controller Link network by mounting a Controller Link Interface Unit.

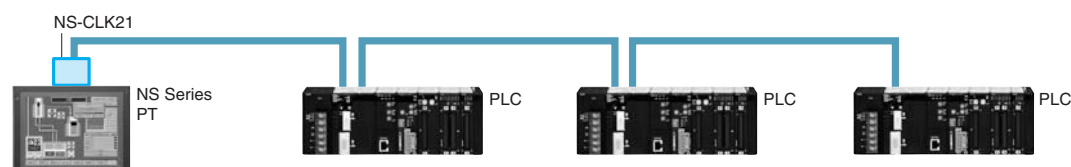

If a Controller Link connection is used, data links can be set between PLCs and multiple PLCs can be monitored/set from the NS-series PT's screen.


##### ●Baud rate

2 Mbps (500 m max.)  
1 Mbps (800 m max.)  
500 kbps (1 km max.)

##### ●Max. number of nodes: 32 nodes

### 4 EtherNet/IP or Ethernet Connection


If an Ethernet-compatible NS-series PT is used, the PT can connect to a PLC with an Ethernet Unit and an Option Unit is not needed to connect at the PT.

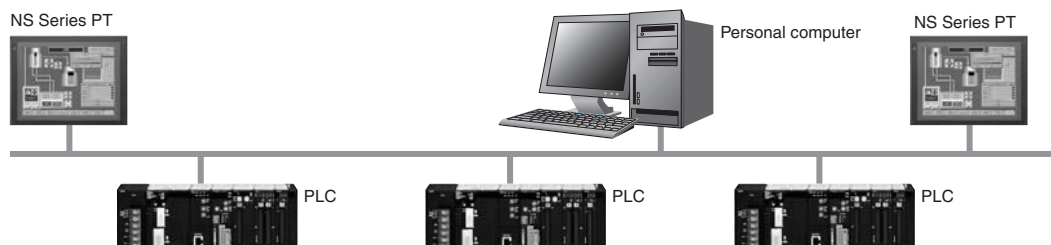

### 5 Connections Over Network Levels


The NS-series PTs can connect to a variety of devices in the network, through as many as 3 network levels.

For example, if SAP (Smart Active Parts) are being used, an NS-series PT connected by Ethernet can be used to monitor the information in a PLC connected through Controller Link as well as the information in the DeviceNet Slaves connected to that PLC.

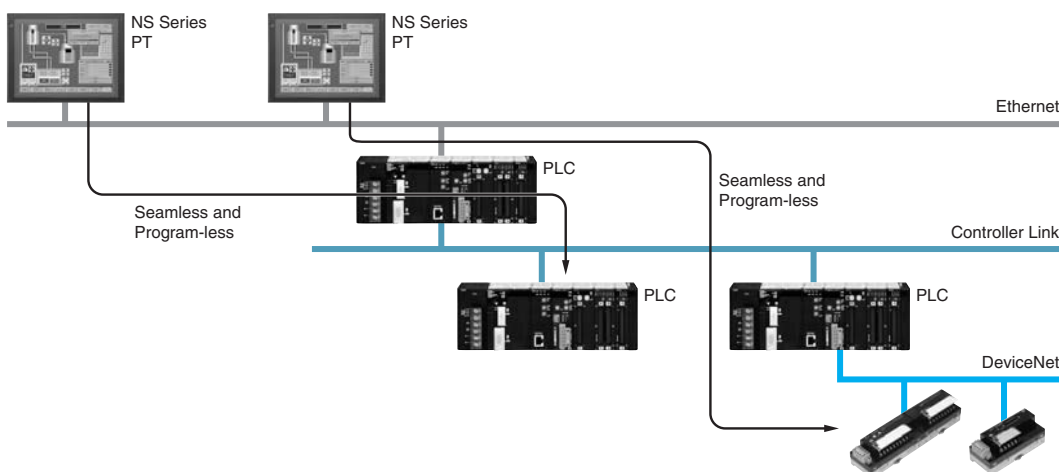


# System Configuration

## NS5/NS8/NS10/NS12/NS15

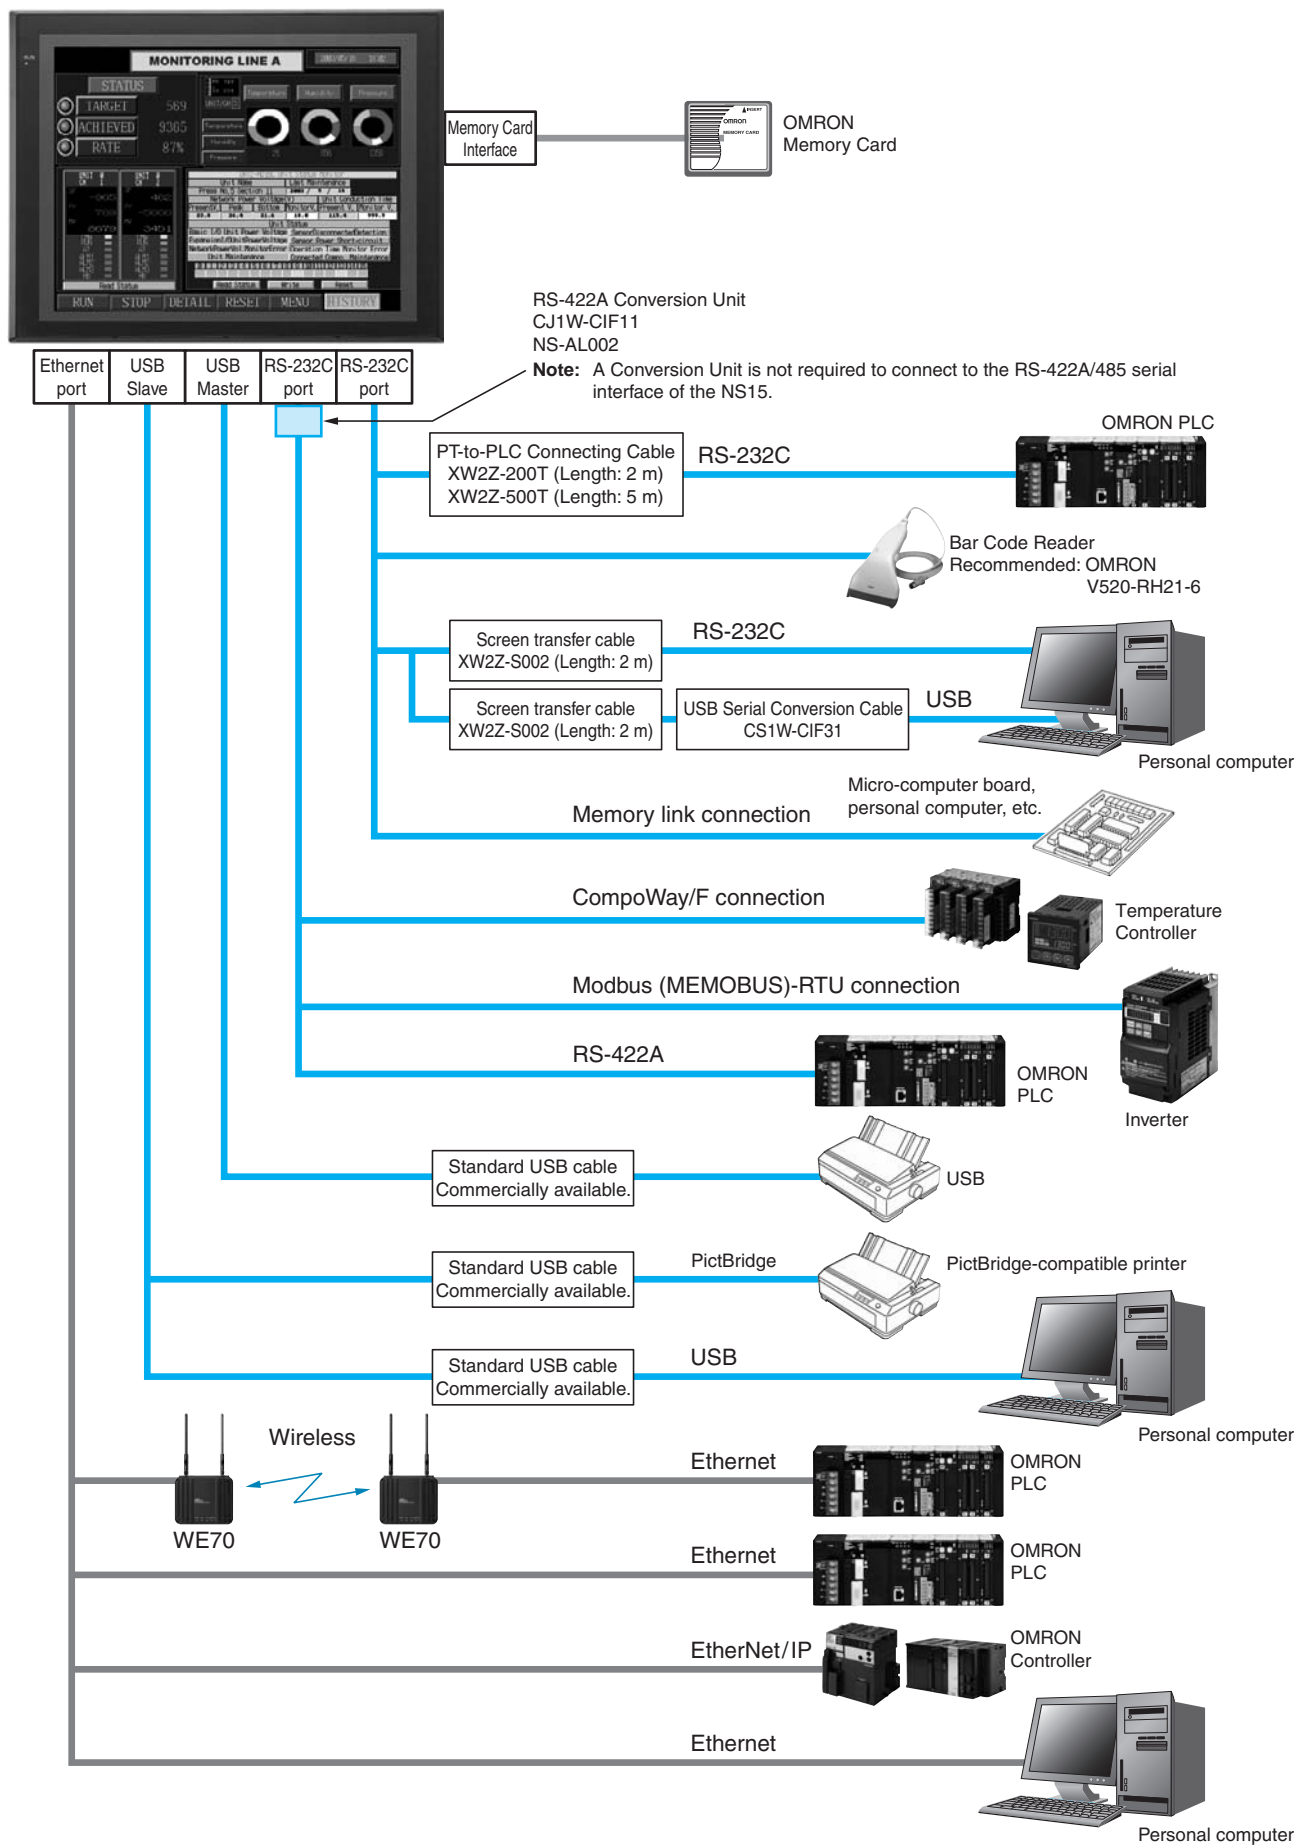




## Expansion Bus Interface

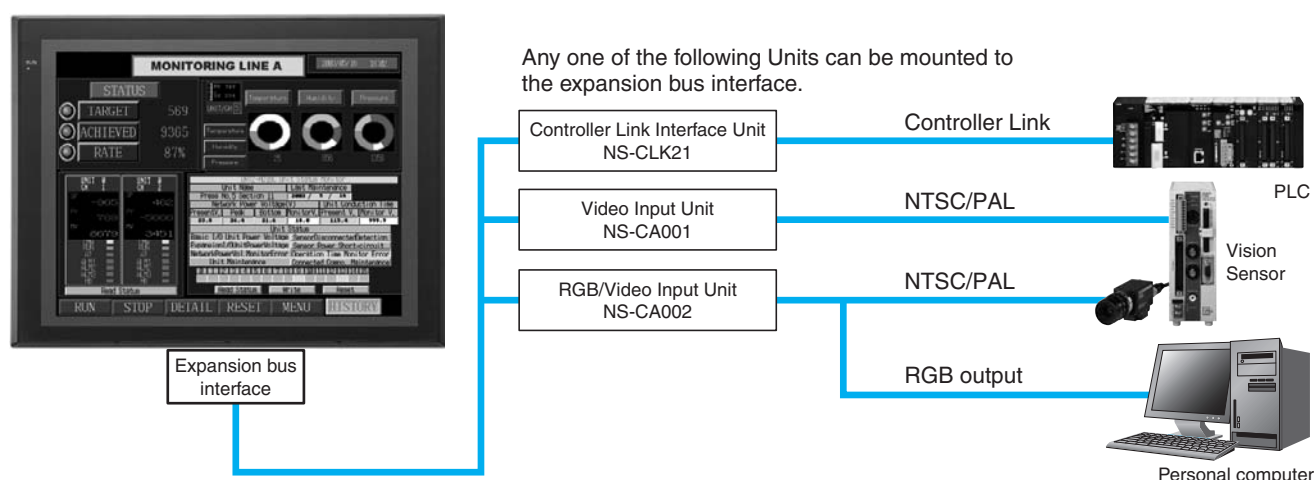



**Note:** Video Input Units and RGB Video Input Units cannot be used with some models.

## Multi-vendor

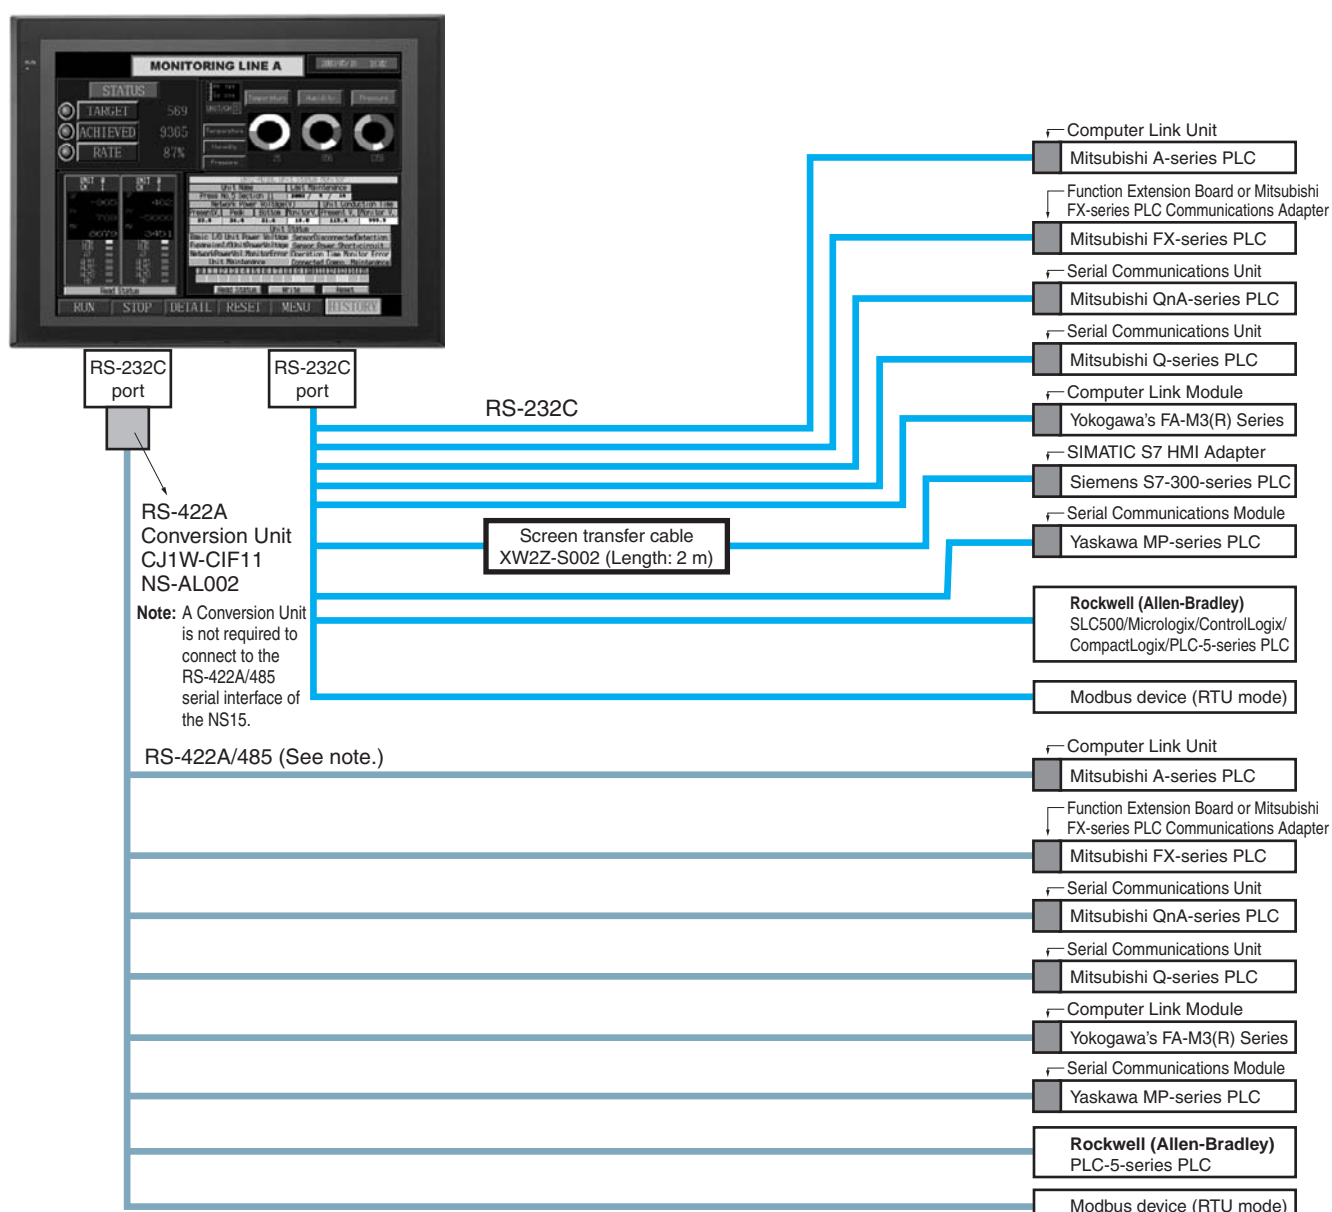


**Note:** Whether an RS-422A or RS-485 connection is supported depends on the device that you are connecting to. For details, refer to the Connectable Devices page or NS-Series Programmable Terminals HOST CONNECTION MANUAL Multivendor Connection (Cat.V092).

## NSH5 Hand-held PT

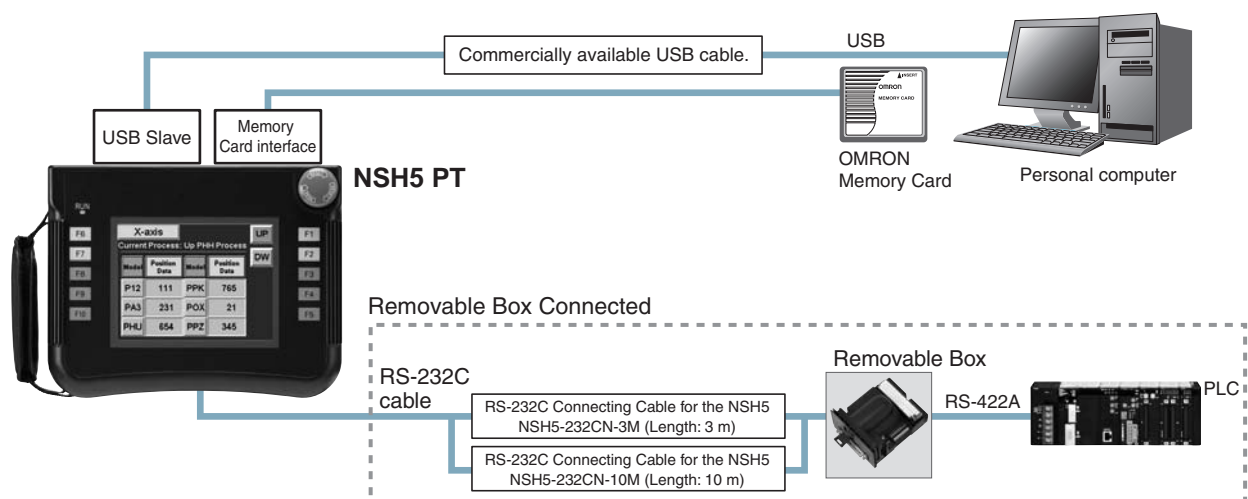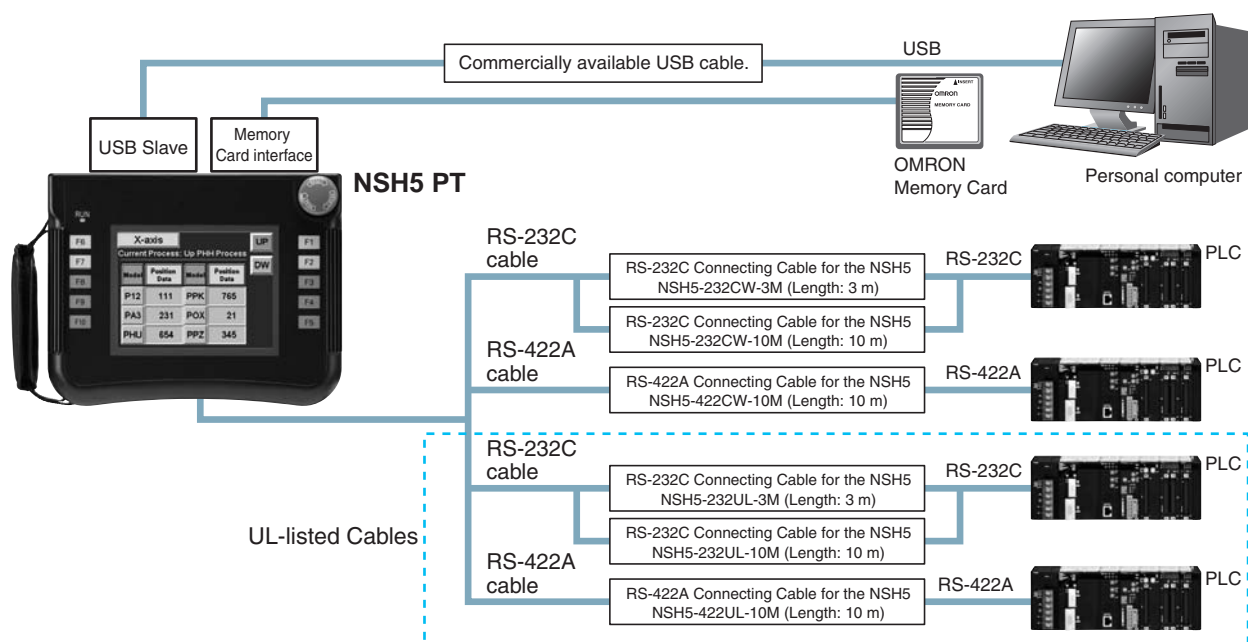

### System Configuration (Removable Box Connected)

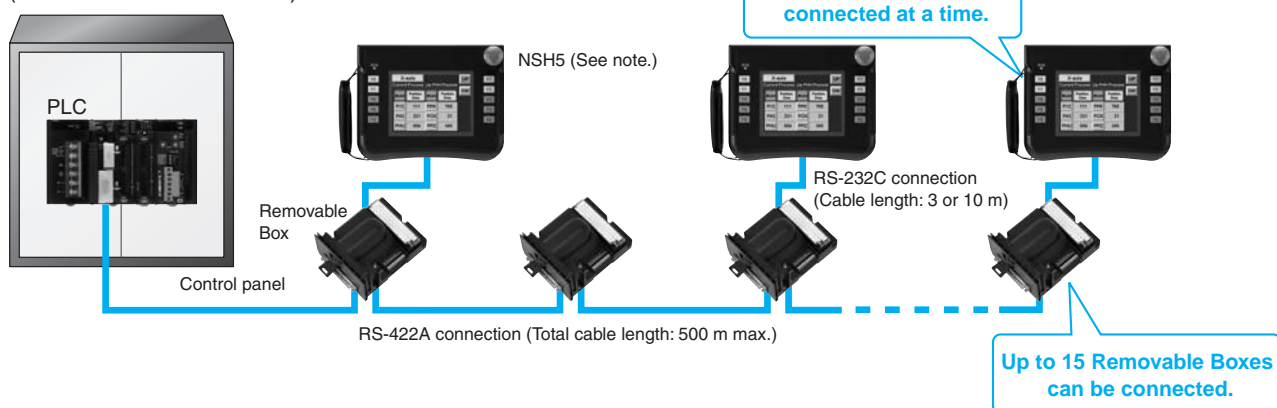

**Note:** Before removing the NSH5 from the Removable Box, be sure to first turn OFF the power supply key on the Removable Box.

## Ordering Information

### International Standards

- The standards are available as follows: U: UL, U1: UL (Class I Division 2 Products for Hazardous Locations), C: CSA, UC: cULus, UC1: cULus (Class I Division 2 Products for Hazardous Locations), CU: cUL, N: NK, L: Lloyd, and CE: EC Directives.
- Contact your OMRON representative for further details and applicable conditions for these standards.

## Programmable Terminals

Product name	Specifications				Model	Standards
	Effective display area	Number of dots	Ethernet	Case color		
NS5-V2 *1	5.7-inch *2 TFT color LED backlight	320 × 240 dots	No	Ivory	NS5-SQ10-V2	UC1, CE, N, L, UL Type4
				Black	NS5-SQ10B-V2	
			Yes	Ivory	NS5-SQ11-V2	
				Black	NS5-SQ11B-V2	
	5.7-inch *2 High-luminance TFT color LED backlight		No	Ivory	NS5-TQ10-V2	
				Black	NS5-TQ10B-V2	
NS8-V2	8.4-inch *2 TFT LED backlight	640 × 480 dots	No	Ivory	NS8-TV00-V2	UC1, CE, N, L
				Black	NS8-TV00B-V2	
			Yes	Ivory	NS8-TV01-V2	
				Black	NS8-TV01B-V2	
NS10-V2	10.4-inch *2 TFT LED backlight	640 × 480 dots	No	Ivory	NS10-TV00-V2	
				Black	NS10-TV00B-V2	
			Yes	Ivory	NS10-TV01-V2	
				Black	NS10-TV01B-V2	
NS12-V2	12.1-inch *2 TFT LED backlight	800 × 600 dots	No	Ivory	NS12-TS00-V2	UC1, CE, N, L, UL Type4
				Black	NS12-TS00B-V2	
			Yes	Ivory	NS12-TS01-V2	
				Black	NS12-TS01B-V2	
NS15-V2	15-inch TFT	1,024 × 768 dots	Yes	Silver	NS15-TX01S-V2	
				Black	NS15-TX01B-V2	
NSH5-V2 *1 Hand-held	5.7-inch TFT	320 × 240 dots	No	Black (Emergency stop button: Red)	NSH5-SQR10B-V2	UC, CE
				Black (Stop button: Gray)	NSH5-SQG10B-V2	

\*1. As of July 2008, the image memory has been increased to 60 MB.

\*2. Lot No. 15Z0 or later of NS5 color-type models, Lot No. 28X1 or later of NS8 models, Lot No. 11Y1 or later of NS10 models, Lot No. 14Z1 or later of NS12 models, LotNo.31114K or later of NS15 models.

## NS-Runtime

Product name	Specifications		Media	Model	Standards
NS-Runtime	NS-Runtime Installer, PDF manual, hardware key (See note.)	1 license	CD	NS-NSRCL1	—
		3 licenses		NS-NSRCL3	
		10 licenses		NS-NSRCL10	

**Note:** A hardware key (USB dongle) is required for NS-Runtime operation.

## System Requirements

Item	Specifications
OS	Windows XP (Service Pack 3 or higher), Vista, 7 or 8 (Support 64-bit version for Windows 7 and Windows 8.)
CPU	Celeron, 1.3 GHz or higher (Recommended)
Memory size	HDD: 50 MB min., RAM: 512 MB min. (Windows 7: 1 GB min.). 50 MB is required for the Runtime alone. (An additional 280 MB is required if CX-Server is not already installed.)



## Software

### ●How to Select Required Support Software for Your Controller

The required Support Software depends on the Controller to connect. Please check the following table when purchasing the Support Software.

Item	Omron PLC System	Omron Machine Automation Controller System
Controller	CS, CJ, CP, and other series	NJ-series and NX-series
Programmable Terminals	NS-series	NS-series with an Ethernet port
Software	FA Integrated Tool Package CX-One	Automation Software Sysmac Studio

### ●FA Integrated Tool Package CX-One

Product name	Specifications	Number of licenses	Media	Model	Standards
<b>FA Integrated Tool Package CX-One Ver.4.□</b>	<p>The CX-One is a comprehensive software package that integrates Support Software for OMRON PLCs and components.</p> <p>CX-One runs on the following OS. Windows XP (Service Pack 3 or higher, 32-bit version) / Windows Vista (32-bit/64-bit version) / Windows 7 (32-bit/64-bit version) / Windows 8 (32-bit/64-bit version) / Windows 8.1 (32-bit/64-bit version)</p> <p>CX-One Version 4.□ includes CX-Designer Ver.3.□. For details, refer to the CX-One catalog (Cat. No. R134)</p>	license *1	DVD *2	<b>CXONE-AL01D-V4</b>	—

\*1. Multi licenses are available for the CX-One (3, 10, 30, or 50 licenses).

\*2. The CX-One is also available on CD (CXONE-AL□□C-V4).

### ●Automation Software Sysmac Studio

Please purchase a DVD and required number of licenses the first time you purchase the Sysmac Studio. DVDs and licenses are available individually. Each model of licenses does not include any DVD.

Product name	Specifications	Number of licenses	Media	Model	Standards
<b>Sysmac Studio Standard Edition Ver.1.□</b>	<p>The Sysmac Studio provides an integrated development environment to set up, program, debug, and maintain NJ/NX Series Controllers and other Machine Automation Controllers, as well as EtherCAT slaves.</p> <p>Sysmac Studio runs on the following OS. Windows XP (Service Pack 3 or higher, 32-bit version) / Windows Vista (32-bit version) / Windows 7 (32-bit/64-bit version) / Windows 8 (32-bit/64-bit version) / Windows 8.1 (32-bit/64-bit version)</p>	— (Media only)	DVD	<b>SYSMAC-SE200D</b>	—
	<p>The Sysmac Studio Standard Edition DVD includes Support Software to set up EtherNet/IP Units, DeviceNet slaves, Serial Communications Units, and Support Software for creating screens on HMI (CX-Designer). For details, refer to the Sysmac Integrated Catalogue (P072).</p>	1 license*	—	<b>SYSMAC-SE201L</b>	—


**Note:** To connect the NJ5 Controller, NS system version 8.5 or higher is required. CX-Designer version 3.3 or higher is also required.

To connect the NJ1/NJ3 Controller, NS system version 8.61 or higher is required. CX-Designer version 3.4 or higher is also required.

To connect the NX7 Controller, NS system version 8.9 or higher is required. CX-Designer version 3.64 or higher is also required.

\* Multi licenses are available for the Sysmac Studio (3, 10, 30, or 50 licenses).








## Cable

Product name	Specifications		Model	Standards
<b>Cable *1</b> 	Screen transfer cable for DOS/V (CX-Designer ↔ PT)	Length: 2 m	<b>XW2Z-S002</b>	—
	USB-Serial Conversion Cable	Length: 0.5 m	<b>CS1W-CIF31</b>	N
	USB relay cable	Length: 1 m	<b>NS-USBEXT-1M</b>	—
<b>NSH5 Cables</b>	RS-422A cable (loose wires + D-Sub 9-pin)	Length: 10 m	<b>NSH5-422CW-10M</b>	—
	RS-232C cable (loose wires + D-Sub 9-pin)	Length: 3 m	<b>NSH5-232CW-3M</b>	
	RS-232C cable (loose wires + D-Sub 9-pin)	Length: 10 m	<b>NSH5-232CW-10M</b>	
<b>UL-compliant NSH5 Cable</b>	RS-422A cable (loose wires)	Length: 10 m	<b>NSH5-422UL-10M</b>	CU
	RS-232C cable (loose wires + relay cable)	Length: 3 m	<b>NSH5-232UL-3M</b>	
	RS-232C cable (loose wires + relay cable)	Length: 10 m	<b>NSH5-232UL-10M</b>	
<b>PT-to-PLC Connecting Cable *2</b>	PT connection: 9 pins	Length: 2 m	<b>XW2Z-200T</b>	—
	PLC connection: 9 pins	Length: 5 m	<b>XW2Z-500T</b>	
	PT connection: 9 pins	Length: 2 m	<b>XW2Z-200T-2</b>	
	PLC peripheral port	Length: 5 m	<b>XW2Z-500T-2</b>	
<b>NSH5 Removable Box Cable</b>	RS-232C Cable (connectors)	Length: 3 m	<b>NSH5-232CN-3M</b>	
		Length: 10 m	<b>NSH5-232CN-10M</b>	
<b>NSH5 Removable Box</b>	—		<b>NSH5-AL001</b>	
<b>NSH5 Wall-mounting Bracket</b>	—		<b>NSH5-ATT02</b>	
<b>NSH5 Visor</b>	—		<b>NSH5-ATT01</b>	

\*1. Use a standard USB Type A male to Type B type male Cable to connect the NS series PT to a personal computer (CX-Designer).  
Use a standard USB cable to connect the NS series PT to a PictBridge-compatible printer. USB cable type depends on the printer.

\*2. To connect the NS series PT to NJ series Controller, using a commercially available 10/100-BASE-TX twisted-pair cable.  
For detail, refer to the NS series SETUP MANUAL (Cat. No.V083).

## Options

Product name	Specifications		Model	Standards
<b>Video Input Unit</b>  	Inputs: 4 channels Signal type: NTSC/PAL		NS-CA001	UC1, CE
	Input channels: 2 video channels and 1 RGB channel *1 Signal type: NTSC/PAL		NS-CA002	
<b>Controller Link Interface Unit</b> 	For Controller Link Communications		NS-CLK21	UC1, CE
<b>RS-422A Adapter</b>  	Transmission distance: 500 m total length <b>Note:</b> Use this model when connecting PT models without a V□ suffix. <b>Note:</b> PT models with the V□ suffix can also be connected.		NS-AL002	—
	Transmission distance: 50 m total length <b>Note:</b> Only PT models with a suffix of V□ are connectable. Use the NS-AL002 to connect models without a V□ suffix.		CJ1W-CIF11	UC1, N, L, CE
<b>Sheet/Cover *2</b> 	Anti-reflection Sheets (5 surface sheets)	NS15	NS15-KBA04	—
		NS12/10	NS12-KBA04	
		NS8	NS7-KBA04	
		NS5	NT30-KBA04	
	Protective Covers (5 pack) (anti-reflection coating)	NS12/10	NS12-KBA05	
		NS8	NS7-KBA05	
		NS5	NT31C-KBA05	
	Protective Covers (1 cover included) (Transparent)	NS15	NS15-KBA05N	
	Protective Covers (5 covers included) (Transparent)	NS12/10	NS12-KBA05N	
		NS8	NS7-KBA05N	
NS5		NT31C-KBA05N		
<b>Attachment</b>	NT625C/631/631C Series to NS12/10 Series		NS12-ATT01	
	NT625C/631/631C Series to NS12/NS10 Series (Black)		NS12-ATT01B	
	NT610C Series to NS12/10 Series		NS12-ATT02	
	NT620S/620C/600S Series to NS8 Series		NS8-ATT01	
	NT600M/600G/610G/612G Series to NS8 Series		NS8-ATT02	
<b>Memory Card</b> 	128 MB		HMC-EF183	
	256 MB		HMC-EF283	
	512 MB		HMC-EF583	
<b>Memory Card Adapter</b>	---		HMC-AP001	CE
<b>Replacement Battery</b>	Battery life: 5 years (at 25°C)		CJ1W-BAT01	—
<b>Bar Code Reader</b>	CCD handheld bar code reader (RS-232C interface)		V520-RH21-6	

\*1. One screen cannot display two video inputs simultaneously.

\*2. A Chemical-resistant Cover (NT30-KBA01) is available only for the NS5.




## General Specifications

## NS5/NS8/NS10/NS12/NS15

Series	NS5-V2	NS8-V2	NS10-V2	NS12-V2	NS15-V2
Rated power supply voltage	24 VDC				
Allowable voltage range	20.4 to 27.6 VDC (24 VDC $\pm$ 15%)				
Power consumption	15 W max.	25 W max.			45 W max.
Ambient operating temperature	0 to 50 °C (See note on the next page.) <b>Note:</b> The ambient operating temperature is subject to the following restrictions according to the mounting angle. Mounting angle of 0 to 30° to the horizontal: • When no Expansion Units are mounted, the operating temperature range is 0 to 45°C. • When a Video Input Unit or a Controller Link Interface Unit is mounted, the ambient operating temperature is 0 to 35°C. Mounting angle of 30 to 90° to the horizontal: Operating temperature range of 0 to 50°C				
Storage temperature	-20 to 60 °C *1				
Ambient operating humidity	35 to 85% (0 to 40 °C), 35 to 60% (40 to 50 °C) (with no condensation)				
Operating environment	No corrosive gases.				
Noise immunity	Conforms to IEC61000-4-4, 2 kV (power lines).				
Vibration resistance (during operation)	10 to 57 Hz, 0.075 mm amplitude, 57 to 150 Hz, 9.8 m/s <sup>2</sup> 30 min each in X, Y, and Z directions				5 to 8.4 Hz, 3.5 mm single amplitude, 8.4 to 150 Hz, 9.8 m/s <sup>2</sup> 10 min times each in X, Y, and Z directions
Shock resistance (during operation)	147 m/s <sup>2</sup> 3 times each in direction of X, Y, and Z				
Weight	1.0 kg max.	2.0 kg max.	2.3 kg max.	2.5 kg max.	4.2 kg max.
Degree of protection	Front operating panel: IP65 oil-proof type and NEMA4 UL type 4. *2 <b>Note:</b> May not be applicable in locations with long-term exposure to oil.				
Ground	Ground to 100 $\Omega$ or less.				
Battery life	5 years (at 25 °C): Replace battery within 5 days after the battery runs low (indicator lights orange).				
Applicable standards	Certified for conformance to UL 508, UL 1604, EMC Directive, NK, and LR Standards.				

\*1. Operate the PT within the temperature and humidity ranges shown in the right diagram.

\*2. Support for NS5, NS10, NS12 and NS15.

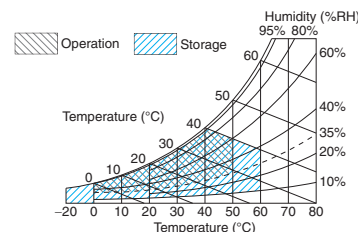

## NSH5 Hand-held PT

Series	NSH5-V2	
Type	5.7-inch Color TFT (Hand-held Version)	
Case color	Black	
Built-in Ethernet port	No	
Model	NSH5-SQR10B-V2 (Emergency stop button: Red)	NSH5-SQG10B-V2 (Stop button: Gray)
Rated power supply voltage	24 VDC	
Allowable voltage range	20.4 to 27.6 VDC (24 VDC $\pm$ 15%)	
Power consumption	10 W max.	
Ambient operating temperature	0 to 40°C	
Storage temperature	-20 to 60°C	
Ambient operating humidity	35% to 85% (0 to 40°C) with no condensation	
Operating environment	No corrosive gases.	
Noise immunity	Common mode: 1,000 Vp-p (between power supply terminals and panel) Normal mode: 300 Vp-p Pulse width: 100 ns to 1 $\mu$ s, Rise time: 1-ns pulse	
Vibration resistance (during operation)	10 to 57 Hz, 0.075 mm amplitude, 57 to 150 Hz, 9.8 m/s <sup>2</sup> 30 min each in X, Y, and Z directions	
Shock resistance (during operation)	147 m/s <sup>2</sup> 3 times each in direction of X, Y, and Z	
Weight	1 kg max.	
Degree of protection	Equivalent to IP65.	
Ground	Ground to 100 $\Omega$ or less.	
Battery life	5 years (at 25°C): Replace battery within 5 days after the battery runs low (indicator lights orange).	
Applicable standards	Certified for conformance to UL 508, EMC Directive, and EN 60204-1.	

## Performance/Specifications

## NS5

Series		NS5-V2						
Model	NS5-SQ10-V2	NS5-SQ11-V2	NS5-SQ10B-V2	NS5-SQ11B-V2	NS5-TQ10-V2	NS5-TQ11-V2	NS5-TQ10B-V2	NS5-TQ11B-V2
Built-in Ethernet port	No	Yes	No	Yes	No	Yes	No	Yes
Case color	Ivory		Black		Ivory		Black	
Display device	TFT color LCD				Color High-luminance TFT *1			
Effective display area	Width 117.2 × height 88.4 mm (5.7 inches)							
Display colors	256 colors							
Number of dots	320 dot horizontal × 240 dot vertical							
View angle	Left/right: 80°, Top: 80°, Bottom: 60° *5							
Screen data capacity	60 Mbytes							
Image data (BMP or JPG images)	32,768 colors							
Memory Card	Supported							
Ladder Monitor function	Not supported							
Video Input Unit support	Not supported							
Controller Link Interface Unit (Wired) support	Not supported							
Backlight *2	Service life *3	75,000 hours min.						
	Brightness adjustment	Three-level or 32-level brightness adjustment from the touch panel screen. *4						
	Backlight error detection *5	Error is detected automatically, and the RUN indicator flashes green as notification.						
Touch panel (matrix type)	Method	Matrix resistive membrane						
	Number of switches/resolution	300 (20 horizontal × 15 vertical) 16 × 16 dots for each switch						
	Input	Pressure-sensitive						
	Service life	1,000,000 touch operations.						
Display text	Labels	Can be specified in CX-Designer. Font, style, and size can be specified.						
	Numerals, alarms, and character strings	Scalable Gothic: Magnification: 6 to 255 points Rough: Magnification: 1×1, 1×2, 2×1, 2×2, 3×3, 4×4, 8×8 Standard: Magnification: 1×1, 1×2, 2×1, 2×2, 3×3, 4×4, 8×8 Fine: Magnification: 1×1, 1×2, 2×1, 2×2, 3×3, 4×4, 8×8 7-segment display: Can display only numerals, dates, and times.						
	Supported languages (42 languages)	Scalable Gothic, rough, standard, and fine can be used for 42 languages. Japanese, simplified Chinese, traditional Chinese, Korean, English, French, German, Italian, Portuguese, Spain, Swedish, Dutch, Finnish, Norwegian, Basque, Catalan, Danish, Albanian, Croatian, Czech, Hungarian, Polish, Romanian, Slovak, Slovenian, Bulgarian, Belarusian, Russian, Serbian, Macedonian, Ukrainian, Georgian, Icelandic, Afrikaans, Faroese, Indonesian, Greek, Turkish, Estonian, Latvian, Lithuanian, Thai (supported only with scalable Gothic font)						
Text attributes	Color	256 colors						
	Font style (only when vector font is specified)	Bold or italic						
	Vertical alignment	Top, center, or bottom						
	Horizontal alignment	Left-justified, centered, or right-justified						
Flicker	Objects supporting flicker	Functional objects: Select from up to 10 types of registered flicker settings. The flicker speed and flicker range can be set. Fixed objects: Select from three flicker types.						
Numeral units and scale settings		1,000 max.						
Alarm/event settings		5,000 max.						
Expansion interface		For Expansion Interface Units						

\*1. NS5-TQ series (high luminance TFT) luminance is better than that of NS5-SQ series by about 110 cd/m<sup>2</sup>.

\*2. Contact your nearest OMRON representative to replace the backlight.

\*3. This is the estimated time before brightness is reduced by half at room temperature and humidity. It is not a guaranteed value.

The service life will be dramatically shortened if PT is used at low temperatures. For example, using the PT at temperatures of 0°C will reduce the service life to approximately 10,000 hours (reference value).

\*4. Lot No. 15Z0 or later of NS5 models.

\*5. This function does not indicate that the service life has been reached. It detects when the backlight is not lit due to a disconnection or other errors.

Backlight error detection indicates that all backlights (2) are OFF.

## NS8/NS10/NS12/NS15

Series		NS8-V2				NS10-V2				NS12-V2				NS15-V2	
Model		NS8-TV00-V2	NS8-TV01-V2	NS8-TV00B-V2	NS8-TV01B-V2	NS10-TV00-V2	NS10-TV01-V2	NS10-TV00B-V2	NS10-TV01B-V2	NS12-TS00-V2	NS12-TS01-V2	NS12-TS00B-V2	NS12-TS01B-V2	NS15-TX01S-V2	NS15-TX01B-V2
Built-in Ethernet port		No	Yes	No	Yes	No	Yes	No	Yes	No	Yes	No	Yes	Yes	Yes
Case color		Ivory		Black		Ivory		Black		Ivory		Black		Silver	Black
Display device		High-definition TFT color LCD				High-definition TFT color LCD				High-definition TFT color LCD				High-definition TFT color LCD	
Effective display area		Width 170.9 × height 128.2 mm (8.4 inches)				Width 215.2 × height 162.4 mm (10.4 inches)				Width 246.0 × height 184.5 mm (12.1 inches)				Width 304.1 × height 228.1 mm (15 inches)	
Display colors		256 colors													
Number of dots		640 dot horizontal × 480 dot vertical								800 dot horizontal × 600 dot vertical				1,024 dot horizontal × 768 dot vertical	
View angle		Left/right: 80°, Top: 80°, Bottom: 60° *3				Left/right: 70°, Top: 65°, Bottom: 65° *3				Left/right: 80°, Top: 80°, Bottom: 80° *3				Left/right: 80°, Top: 70°, Bottom: 60°	
Screen data capacity		60 Mbytes													
Image data (BMP or JPG images)		32,768 colors													
Memory Card		Supported													
Ladder Monitor function		Supported													
Video Input Unit support		Supported (Image displayed via video input is 260,000 colors)												(Only RGB input is enabled.)	
Controller Link Interface Unit (Wired) support		Not supported				Supported									
Backlight *1	Service life * 2	50,000 hours min.													
	Brightness adjustment	Three-level or 32-level brightness adjustment from the touch panel screen. * 3													
	Backlight error detection *4	Error is detected automatically, and the RUN indicator flashes green as notification.													
Touch panel (matrix type)	Method	Matrix resistive membrane												Analog resistive membrane *5	
	Number of switches/resolution	768 (32 horizontal × 24 vertical) 20 × 20 dots for each switch				1,200 (40 horizontal × 30 vertical) 16 × 16 dots for each switch				1,900 (50 horizontal × 38 vertical) 16 × 16 dots for each switch				Resolution: 1,024 (horizontal) × 1,024 (vertical)	
	Input	Pressure-sensitive													
	Service life	1,000,000 touch operations.													
Display text	Labels	Can be specified in CX-Designer. Font, style, and size can be specified.													
	Numerals, alarms, and character strings	Scalable Gothic: Magnification: 6 to 255 points Rough: Magnification: 1×1, 1×2, 2×1, 2×2, 3×3, 4×4, 8×8 Standard: Magnification: 1×1, 1×2, 2×1, 2×2, 3×3, 4×4, 8×8 Fine: Magnification: 1×1, 1×2, 2×1, 2×2, 3×3, 4×4, 8×8 7-segment display: Can display only numerals, dates, and times.													
	Supported languages (42 languages)	Scalable Gothic, rough, standard, and fine can be used for 42 languages. Japanese, simplified Chinese, traditional Chinese, Korean, English, French, German, Italian, Portuguese, Spain, Swedish, Dutch, Finnish, Norwegian, Basque, Catalan, Danish, Albanian, Croatian, Czech, Hungarian, Polish, Romanian, Slovak, Slovenian, Bulgarian, Belarusian, Russian, Serbian, Macedonian, Ukrainian, Georgian, Icelandic, Afrikaans, Faroese, Indonesian, Greek, Turkish, Estonian, Latvian, Lithuanian, Thai (supported only with scalable Gothic font)													
Text attributes	Color	256 colors													
	Font style (only when vector font is specified)	Bold or italic													
	Vertical alignment	Top, center, or bottom													
	Horizontal alignment	Left-justified, centered, or right-justified													
Flicker	Objects supporting flicker	Functional objects: Select from up to 10 types of registered flicker settings. The flicker speed and flicker range can be set. Fixed objects: Select from three flicker types.													
Numeral units and scale settings		1,000 max.													
Alarm/event settings		5,000 max.													
Expansion interface		For Expansion Interface Units													

\*1. Contact your nearest OMRON representative to replace the backlight.

\*2. This is the estimated time before brightness is reduced by half at room temperature and humidity. It is not a guaranteed value.

The service life will be dramatically shortened if PT is used at low temperatures. For example, using the PT at temperatures of 0 °C will reduce the service life to approximately 10,000 hours (reference value).

\*3. Lot No. 28X1 or later of NS8 models, Lot No. 11Y1 or later of NS10 models, Lot No. 14Z1 or later of NS12 models, Lot No. 31114K or later of NS15 models.

\*4. This function does not indicate that the service life has been reached. It detects when the backlight is not lit due to a disconnection or other errors. Backlight error detection indicates that all backlights (2) are OFF.

\*5. An analog touch panel is used with the NS15. Do not press the touch panel in two or more places simultaneously.

If the touch panel is pressed in two or more places simultaneously, it may activate a switch between the points that are pressed.



## Communications

## NS5/NS8/NS10/NS12/NS15

Memory Card		Interface	One ATA-Compact Flash interface slot
		Functions	Used to transfer and store screen data, store logging data, and store history data. (Alarm/Event History, Operation Log, and Error Log generated during Macro execution).
Serial Communications	Port A	Connector	Conforms to EIA RS-232C. D-Sub female 9-pin connector 5-V output (250 mA max.) through pin 6. The 5-V outputs of serial ports A and B cannot be used at the same time.
		Functions	Host (PLC) access: 1:N NT Links (connections with CS/CJ/CP-series PLCs and C200HX/HG/HE(-Z) PLCs), 1:1 NT Links, or Host Link (connections with C Series or CVM1/CV-series PLCs) Direct access to Temperature Controllers using Smart Active Parts: CompoWay / F and bar code reader connections (Read directly from display.)
	Port B	Connector	Conforms to EIA RS-232C. D-Sub female 9-pin connector. 5-V output (250 mA max.) through pin 6. The 5-V outputs of serial ports A and B cannot be used at the same time.
		Functions	Host (PLC) access: 1:N NT Links (connections with CS/CJ/CP-series PLCs and C200HX/HG/HE(-Z) PLCs) or 1:1 NT Links (connections with C Series or CVM1/CV-series PLCs) Direct access to Temperature Controllers using Smart Active Parts: CompoWay / F and bar code reader connections (Read directly from display.)
USB SLAVE Specifications		USB rating	USB1.1
		Connector	TYPE-B (Slave)
		Functions	Connection with the CX-Designer (for screen data transfers) Connecting to a PictBridge-compatible Printer Recommended printers: EPSON: PM-G4500, PX-G5300, PX-5600, EP-901F Canon: PIXUS MX7600, PIXUS iP100, PIXUS iX5000
USB HOST Specifications *1		USB rating	USB1.1
		Connector	TYPE-A (Host)
		Functions	Connection with a printer (for hard copies) Recommended printers: EPSON: PX-G930
Built-in Ethernet Specifications *2		Conformance standards	Conforms to IEEE 802.3/Ethernet (10 Base-T/100 Base-TX).
		Functions	Host (PLC) access and connection with the CX-Designer (for screen data transfers)
Controller Link (Wired-type) Specifications *3		Baud rate	2 M/1 M/500 K bps
		Transmission path	Shielded twisted-pair cable (special cable)
		Functions	Host (PLC) access and data links
Video Input Specifications *4		Resolution	NS-CA001: 320×240, 640×480, 800×600 dots NS-CA002: User-defined size
		Input signal	NS-CA001: NTSC composite video or PAL NS-CA002: NTSC composite video or PAL
		Number of video inputs	NS-CA001: Number of cameras: 4 max. NS-CA002: 2 cameras + RGB

\*1. Except NS5.

\*2. NS□-□□□1-V2 only.

\*3. Except NS5 and NS8.

\*4. Except NS5 and NS15. NS15 provides RGB input. (NS-CA002)

## Connectable Devices

## Supported OMRON PLCs

PLC series	PLC model name	RS-232C *1			Ethernet		Controller Link *4
		1:1 NT Link	1:N NT Link	Host Link	FINS *2	EtherNet/IP *3	
C Series	CQM1	Yes	No	Yes	No	No	No
	CQM1H	Yes	Yes	Yes	No	No	Yes
	CPM1	Yes	No	Yes	No	No	No
	CPM1A	Yes	No	No	No	No	No
	CPM2A	Yes	No	Yes	No	No	No
	CPM2C	Yes	No	Yes	No	No	No
	C200HS	Yes	No	Yes	No	No	No
	C200HE (-Z)	Yes	Yes	Yes	No	No	Yes
	C200HG (Z)	Yes	Yes	Yes	No	No	Yes
	C200HX (-Z)	Yes	Yes	Yes	No	No	Yes
CVM1/CV Series	CV500/1000/2000	Yes	No	Yes	Yes	No	Yes
	CVM1	Yes	No	Yes	Yes	No	Yes
CS Series	CS1H	No	Yes	Yes	Yes	Yes	Yes
	CS1G	No	Yes	Yes	Yes	Yes	Yes
	CS1D	No	Yes	Yes	Yes	Yes	Yes
CJ Series	CJ1H	No	Yes	Yes	Yes	Yes	Yes
	CJ1G	No	Yes	Yes	Yes	Yes	Yes
	CJ1M	No	Yes	Yes	Yes	Yes	Yes
	CJ2H	No	Yes	Yes	Yes	Yes	Yes
	CJ2M	No	Yes	Yes	Yes	Yes	Yes
CP Series	CP1H	No	Yes	Yes	Yes	Yes	No
	CP1L	No	Yes	Yes	Yes	No	No
	CP1E	No	Yes	Yes	No	No	No
NJ Series	NJ5/NJ3/NJ1	Yes *5	Yes *5	Yes *5	No	Yes *6	No
NX Series	NX7	No	No	No	No	Yes	No

**Note:** Including models whose production were discontinued.

\*1. To connect a NS with a PLC via a RS-422A connection, OMRON's NS-AL002, or CJ1W-CIF11 RS-232C/RS-422A Converter can be used to convert the RS-232C port on the NS to RS-422A.

\*2. A NS with Ethernet port is necessary.

When connecting a PLC with the NS, an Ethernet port is necessary on the PLC, too. Use a PLC CPU Unit with a built-in Ethernet port, or add an Ethernet Unit.

\*3. A NS with Ethernet port is necessary.

When connecting a PLC with the NS, an EtherNet/IP port is necessary on the PLC, too. Use a PLC CPU Unit with a built-in EtherNet/IP port, or add an EtherNet/IP Unit.

\*4. Install a Controller Link Interface Unit on the NS. A Controller Link Unit is necessary for the PLC.

\*5. Mount a Serial Communications Unit on the NJ-series Controller. A NS can access only to the Controller's memory used for CJ-series unit.

\*6. When using a EtherNet/IP Unit to connect the NJ-series Controller, NJ Troubleshooter is not supported.

## Function Comparison

PLC series	PLC model name	Ladder Monitor	Device Monitor/ Switch Box	PLC Data Trace	SPMA	SAP	EtherNet/IP Tag access (Network symbols)	PLC Troubleshooter	NJ Troubleshooter/ Integrated NS-series PT simulation *4
C series	CQM1	No	No	No	No	No	No	No	No
	CQM1H	No	No	No	No	No	No	No	No
	CPM1	No	No	No	No	No	No	No	No
	CPM1A	No	No	No	No	No	No	No	No
	CPM2A	No	No	No	No	No	No	No	No
	CPM2C	No	No	No	No	No	No	No	No
	C200HS	No	No	No	No	No	No	No	No
	C200HE (-Z)	No	No	No	No	No	No	No	No
	C200HG (-Z)	No	No	No	No	No	No	No	No
	C200HX (-Z)	No	No	No	No	No	No	No	No
CVM1/CV series	CV500/1000/2000	No	No	No	No	No	No	No	No
	CVM1	No	No	No	No	No	No	No	No
CS series	CS1H	Yes	Yes	Yes	Yes	Yes	No	Yes	No
	CS1G	Yes	Yes	Yes	Yes	Yes	No	Yes	No
	CS1D	Yes	Yes	Yes	Yes	Yes	No	Yes	No
CJ series	CJ1H	Yes	Yes	Yes	Yes	Yes	No	Yes	No
	CJ1G	Yes	Yes	Yes	Yes	Yes	No	Yes	No
	CJ1M	Yes	Yes	Yes	Yes	Yes	No	Yes	No
	CJ2H	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
	CJ2M	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
CP series	CP1H	Yes	Yes	Yes	Yes *1	Yes	No	No	No
	CP1L	Yes	Yes	Yes	Yes *1	Yes	No	No	No
	CP1E	No	No	No	Yes *1	Yes	No	No	No
NJ series	NJ5/NJ3/NJ1	No	Yes *2	No	No	Yes *3	Yes	No	Yes
NX Series	NX7	No	No	No	No	No	Yes	No	Yes

**Note:** Including models whose production were discontinued.

\*1. The SPMA relaying a PLC is not supported.

\*2. Only Device Monitor function is supported. Monitoring function that uses tags (variables) is not supported.

\*3. The SAP for CJ-series Special I/O Units and CPU Bus Units that can be used with NJ-series Controller is supported.

\*4. Sysmac Studio version 1.02 or higher (CX-Designer version 3.41 or higher) is required.



## Connectable Inverters

Series	Communication Unit	Connection	
3G3MX2-V1	(Use the RS-485 terminal on the Inverter)	RS-485 (2-wire)	1:N
3G3JX	(Use the RS-485 connector on the Inverter)		
3G3RX-V1	(Use the RS-485 terminal on the Inverter)		

## Connectable Temperature Controllers

The following Temperature Controllers can be connected directly to an NS-series PT\*.

Unit name	Series	Model	Remarks
Modular Temperature Controller	EJ1	EJ1-EDU End Unit	SAP screens are available.
Modular Temperature Controller	E5ZN	E5ZN-SCT24S Terminal Unit	
Digital Controller	E5AR	E5AR-□□□□□□□□-FLK	
	E5ER	E5ER-□□□□□□□□-FLK	
Temperature Controller (Digital Controller)	E5AN/E5EN/E5CN (Basic Model)	E5CN-□□□□□T-FLK Multi-input (Thermocouple/Resistance Thermometer) Type	
		E5CN-□□□□□L-FLK Analog Input Type	
		E5EN-□□□□□T-FLK Multi-input (Thermocouple/Resistance Thermometer) Type	
		E5EN-□□□□□L-FLK Analog Input Type	
		E5AN-□□□□□T-FLK Multi-input (Thermocouple/Resistance Thermometer) Type	
		E5AN-□□□□□L-FLK Analog Input Type	
	E5AN-H/E5EN-H/ E5CN-H (Advanced Model)	E5CN-H□□□□□□□□-FLK Universal-input Model	
		E5EN-H□□□□□□□□-FLK Universal-input Model	
		E5AN-H□□□□□□□□-FLK Universal-input Model	
	E5GN	E5GN-□□□TC-FLK Thermocouple Input Type	
		E5GN-□□□P-FLK Resistance Thermometer Input Type	

**Note:** Including models whose production were discontinued.

\* The NS-Runtime cannot be connected directly to a Temperature Controller.

## Connecting to Another Company's PLC

Manufacturer	Series	CPU	Communication Unit/Adapter/Board	Connection diagram	
Mitsubishi Electric	A Series	A1SHCPU A2USCPU A2USHCPU-S1	Computer Link Unit A1SJ71UC24-R□ A1SJ71UC24-PRF	RS-232C, RS422A/485 *1	1:1
		A2ACPU	Computer Link Unit AJ71UC24		
	FX Series	FX0N FX1S FX1N FX1NC FX2N FX3UC FX3G	Communication special adapter FX3U-232-ADP FX2NC-232ADP FX0N-232-ADP  Communication expansion board FX□□-232-BD	RS-232C, RS422A/485 *1	1:1
	Q/QnA Series	Q00CPU Q01CPU	RS-232C port on the CPU Module	RS-232C	1:1
		Q00CPU Q01CPU Q00JCPU Q02CPU Q02HCPU Q06HCPU Q12HCPU Q25HCPU Q03UDCPU Q06UDHCPU Q13UDHCPU	Serial Communications Module QJ71C24N-R2 QJ71C24N-R4 QJ71C24N	RS-232C, RS-485 (4-wire) *2	1:N
		Q2ASCPU Q2ASCPU-S1 Q2ASHCPU Q2ASHCPU-S1	Serial Communications Module A1SJ71QC24N		
	FA-M3(R) Series	F3SC23-1F F3SP21-0N F3SP28-3S F3SP58-6S F3SP67-6S	CPU built-in RS-232C port	RS-232C	1:1
			Personal Computer Link Module F3LC11-1F F3LC12-1F F3LC11-2F	RS-232C, RS-422A/485 *1	
Siemens	S7-300 Series	CPU313 CPU315-2DP CPU317-2PN/DP	SIMATIC S7 HMI Adapter 6ES7 972-0CA1□-0XA0	RS-232C	1:1
Rockwell (Allen-Bradley)	SLC500	SLC5/03 SLC5/04 SLC5/05	RS-232C port on the CPU Module	RS-232C	1:1
	MicroLogix	MicroLogix 1500	RS-232C port on the CPU Module	RS-232C	1:1
	ControlLogix	Logix5555	RS-232C port on the CPU Module	RS-232C	1:1
	CompactLogix	1769-L31	RS-232C port on the CPU Module	RS-232C	1:1
	PLC-5	PLC-5/20	RS-232C port or RS-485 port on the CPU Module	RS-232C/RS-485 (4-wire)	1:N


\*1. To connect using RS-422A/485, an RS-232C/422A converter (e.g. NS-AL002, CJ1W-CIF11) is required.

\*2. To connect using RS-485, an RS-232C/422A converter (e.g. NS-AL002, CJ1W-CIF11) is required.


Up to 32 sequencers can be connected when using RS-485.

# Component Names and Options


## NS15

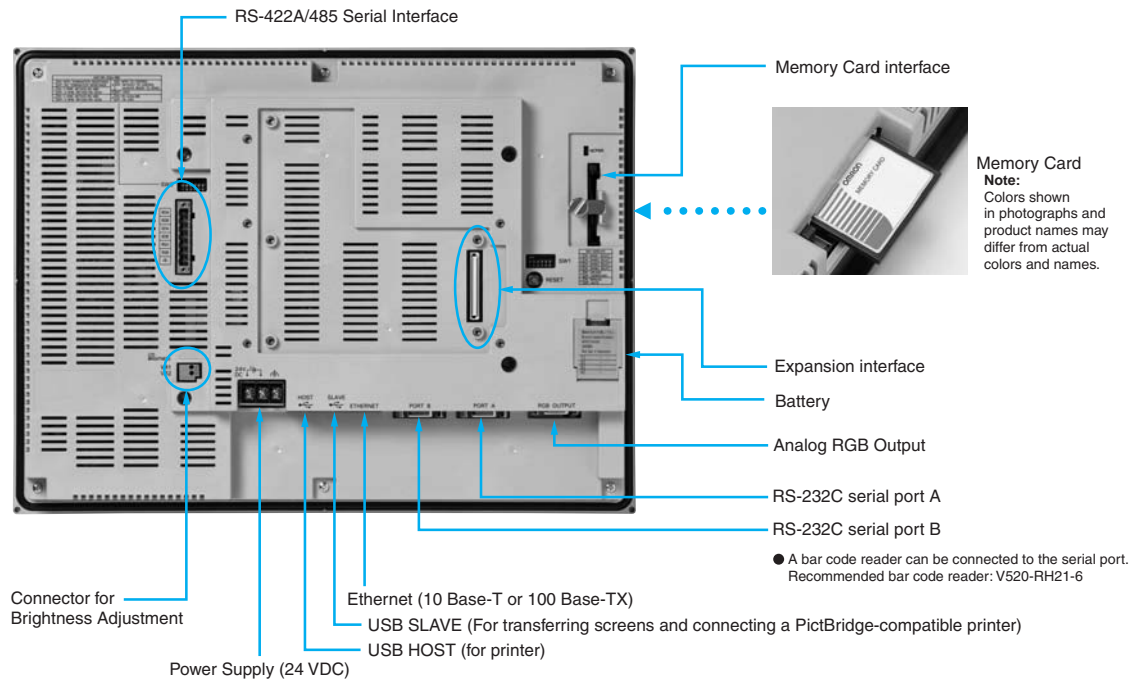

## NS12/10

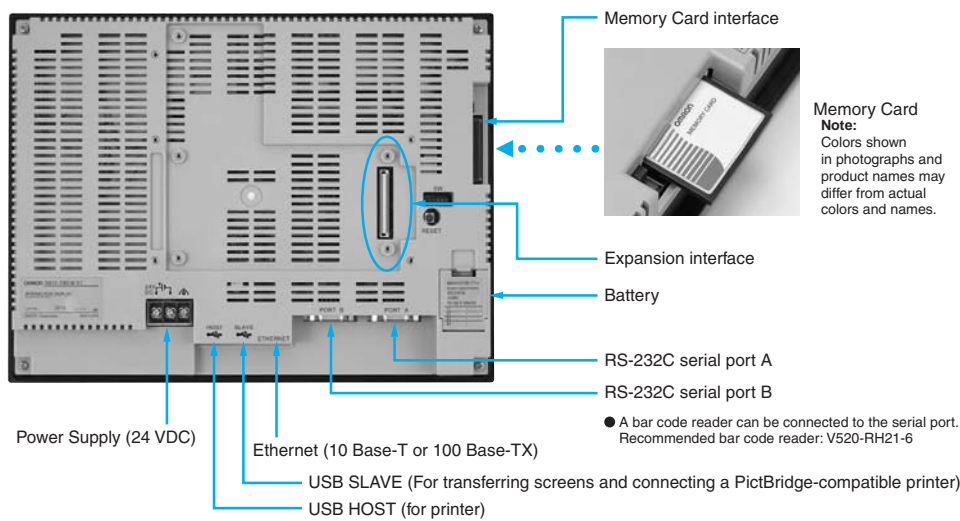

## NS8

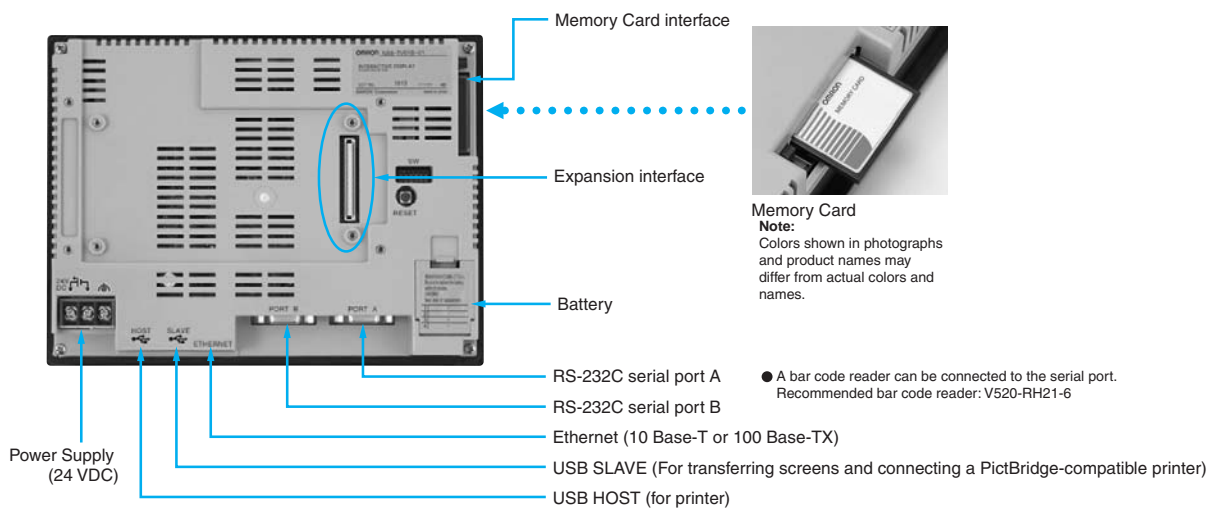

Design

Startup/Operation

Maintenance

NS-RunTime

Hand-held PT

Features

Network


System Configuration

Ordering Information


Specifications




## NS5

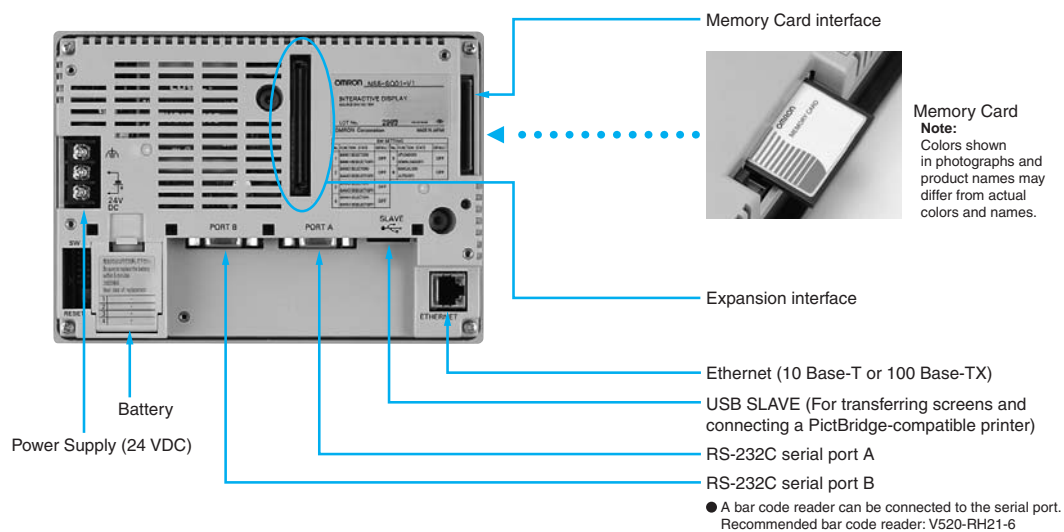


## NSH5

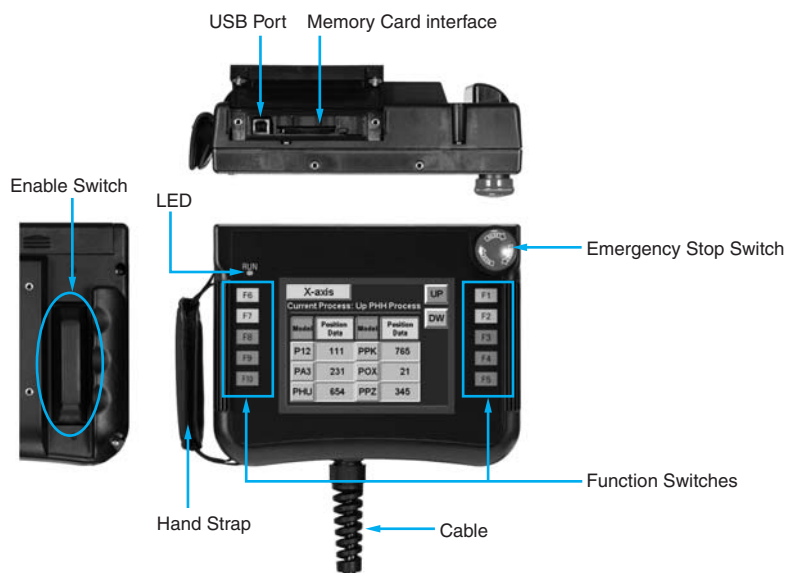


## Optional Products

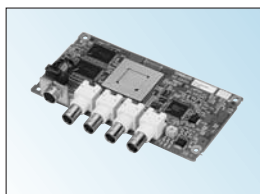


Video Input Unit  
NS-CA001 (with Cover)

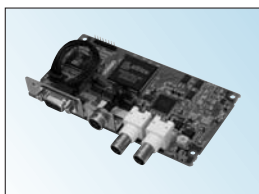


RGB/Video Input Unit  
NS-CA002 (with Cover)

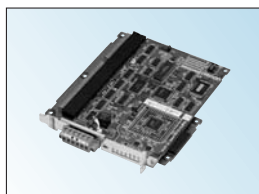


Controller Link Interface Unit  
NS-CLK21 (with Cover)

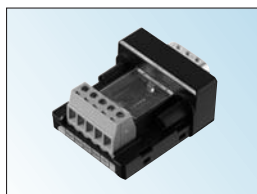


RS-422A Adapter  
CJ1W-CIF11

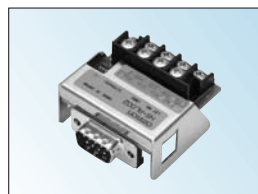

RS-232C/RS-422A  
Conversion Unit  
NS-AL002

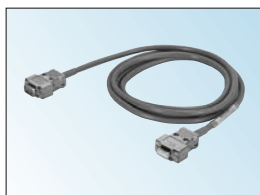

Communications Cable  
XW2Z-S002

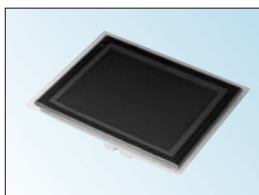

Protective Cover/Anti-reflection  
Sheet for NS-series PT  
NS-KBA0 (N)  
NT30/NT31C-KBA05 (N)




USB Serial Conversion Cable  
CS1W-CIF31




USB relay cable  
(IP65 oil-proof type)  
NS-USBEXT-1M

Dimensions


NS15

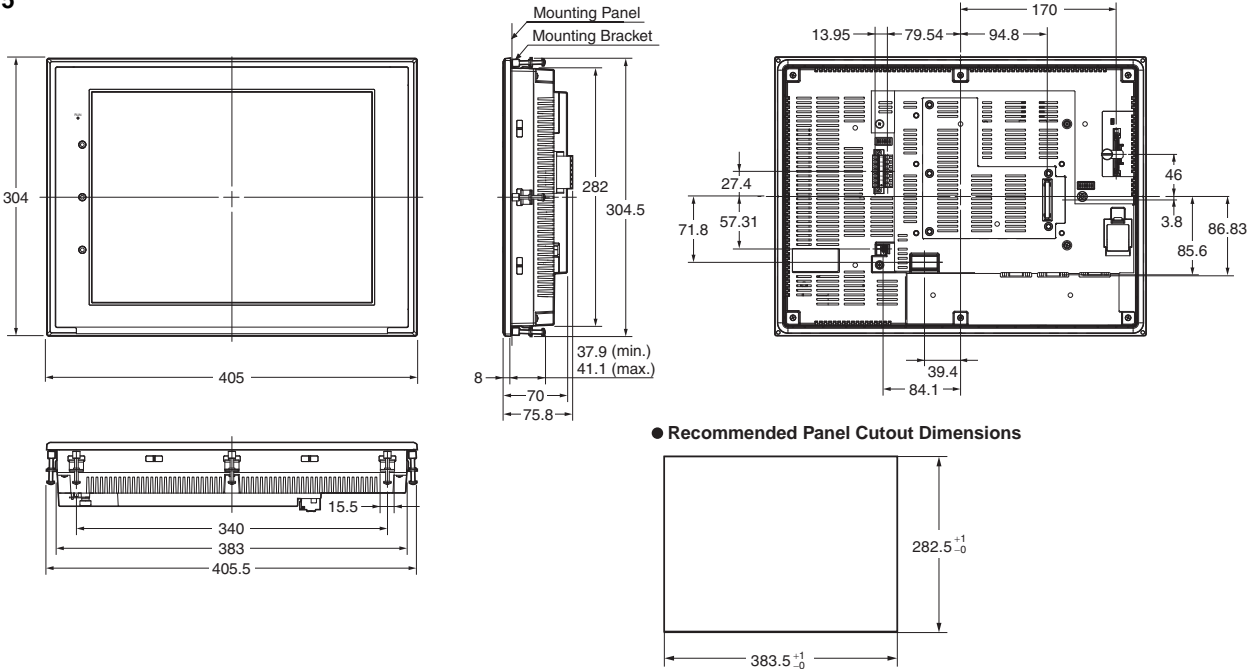


NS12/10

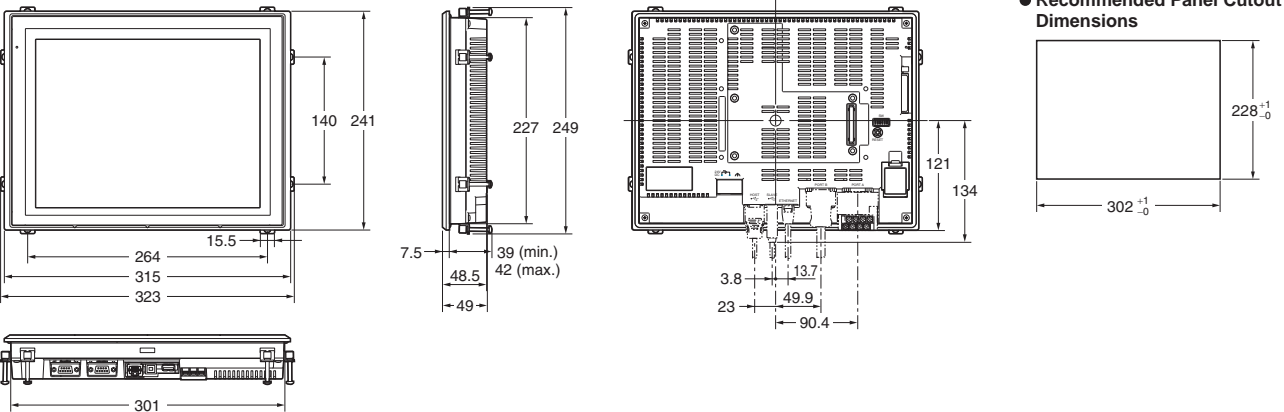


NS8

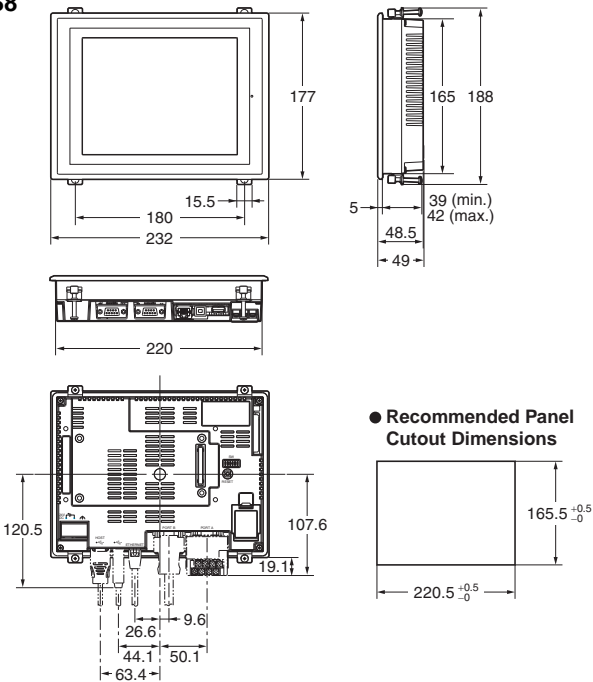


NS5

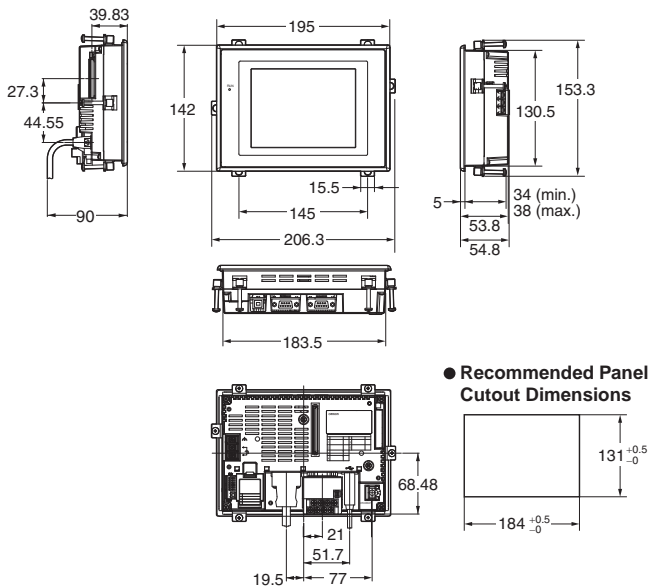


## Hand-held NS5

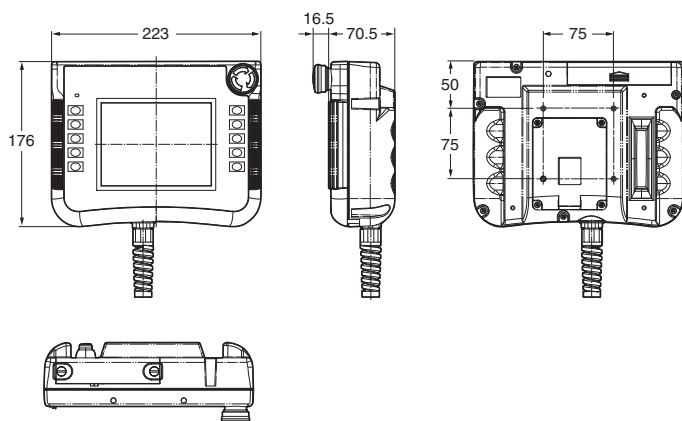


### NS-CA001 Video Input Unit

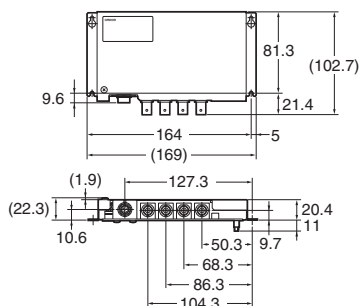

### NS-CA002 Video Input Unit

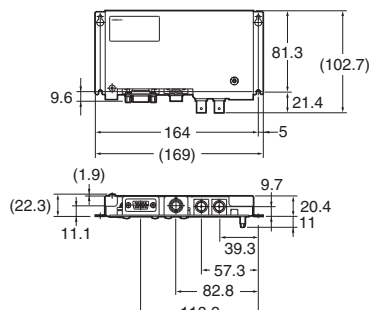

### NS-CLK21 Controller Link Interface Unit

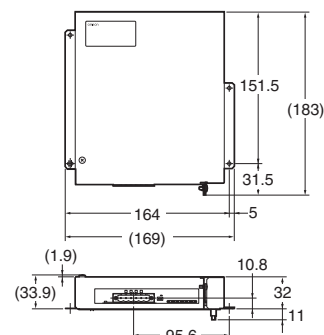

## Related Manuals

Cat. No.	Model	Manual
V083	NS15/NS12/NS10/NS8/NS5	NS-Series Programmable Terminals SETUP MANUAL
V073	NS15/NS12/NS10/NS8/NS5	NS-Series Programmable Terminals PROGRAMMING MANUAL
V099	NS-CXDC1-V3	CX-Designer Ver.3.0 USER'S MANUAL
V082	NS	NS-Series Ladder Monitor OPERATION MANUAL (Ladder Monitor I/O Comment Extracting Tool)
V086	NS-CA002	NS-Series RGB and Video Input Unit OPERATION MANUAL
V090	NSH5	NSH5-Series Hand-held Programmable Terminal OPERATION MANUAL
V098	NS15/NS12/NS10/NS8/NS5	NS-Series Programmable Terminals HOST CONNECTION MANUAL (Host Link) OPERATION MANUAL
V085	NS15/NS12/NS10/NS8/NS5	NS-Series Programmable Terminals HOST CONNECTION MANUAL
V092	NS15/NS12/NS10/NS8/NS5	NS-Series Programmable Terminals HOST CONNECTION MANUAL Multivendor Connection
V075	NS15/NS12/NS10/NS8/NS5	NS-Series Programmable Terminals Macro Reference
V093	NS-NSRCL000	NS-NSRCL000 NS-Runtime Software USERS MANUAL



## Read and Understand This Catalog

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

## Warranty and Limitations of Liability

### WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

### LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

## Application Considerations

### SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this catalog.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

### PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

## Disclaimers

### CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the products may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

### DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

### PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

### ERRORS AND OMISSIONS

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

**Note:** Do not use this document to operate the Unit.

## OMRON Corporation Industrial Automation Company

Tokyo, JAPAN

Contact: [www.ia.omron.com](http://www.ia.omron.com)

### Regional Headquarters

#### OMRON EUROPE B.V.

Wegalaan 67-69-2132 JD Hoofddorp  
The Netherlands  
Tel: (31)2356-81-300/Fax: (31)2356-81-388

#### OMRON ELECTRONICS LLC

One Commerce Drive Schaumburg,  
IL 60173-5302 U.S.A.  
Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

#### OMRON ASIA PACIFIC PTE. LTD.

No. 438A Alexandra Road # 05-05/08 (Lobby 2),  
Alexandra Technopark,  
Singapore 119967  
Tel: (65) 6835-3011/Fax: (65) 6835-2711

#### OMRON (CHINA) CO., LTD.

Room 2211, Bank of China Tower,  
200 Yin Cheng Zhong Road,  
PuDong New Area, Shanghai, 200120, China  
Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

### Authorized Distributor:

© OMRON Corporation 2011 All Rights Reserved.  
In the interest of product improvement,  
specifications are subject to change without notice.

CSM\_11\_3\_0915  
Cat. No. V405-E1-14

0712 (1206)